


SERVICE MANUAL


indexed

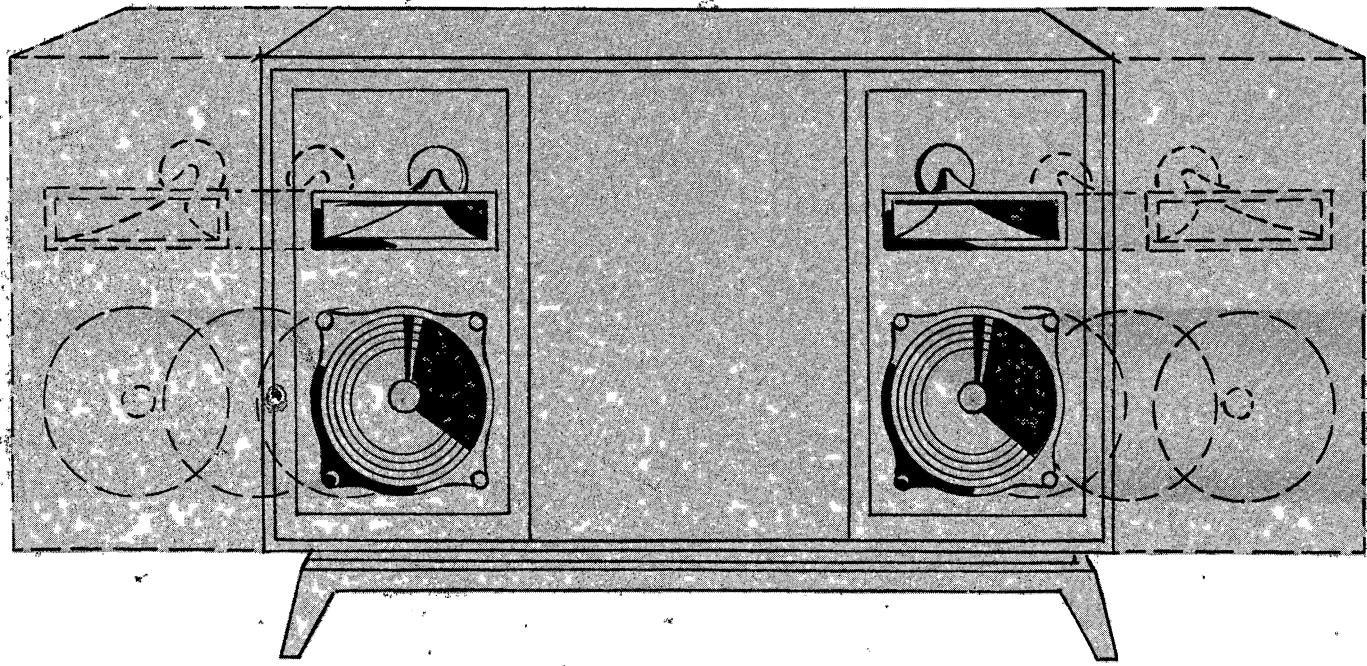

ZENITH

1960 HIGH FIDELITY &
STEREOPHONIC MODELS

ZENITH RADIO CORPORATION
6001 DICKENS AVENUE CHICAGO 39, ILLINOIS



I N D E X

MODEL	SCHEMATIC PAGE	CHASSIS LAYOUT PAGE	CHASSIS PARTS LIST PAGE	CABINET PARTS LIST PAGE
DPS80	16	16	72	72 & 73
DPS89	18	17	73	73
DRS89	17	17	73 & 74	74
SF112	19	18	74 & 75	54
SF114	20	19	75	55
SFD122	21	22	44	55
SF174	24	23	41,42 & 43	56
SFD220	26,27 & 28	25	41 & 46	56 & 57
SFD280	30 & 31	29	42,52,53 & 54	57 & 58
SFD283	34,36 & 37	32 & 33	47,48 & 49	58 & 59
SFD285	34,36 & 37	32 & 33	47,48 & 49	59 & 60
SFD288	34,36 & 37	32 & 33	47,48 & 49	60 & 61
SFD290	35,36 & 37	32 & 33	47,50,51 & 52	61 & 62
SFD2505	39	38	45 & 46	62 & 63
SFD2515	26,27 & 28	25	41 & 46	63
SFD2530	30 & 31	29	42,52,53 & 54	64
SFD2535	30 & 31	29	42,52,53 & 54	65
SFD2560	34,36 & 37	32 & 33	47,48 & 49	65,66 & 67
SFD2565	34,36 & 37	32 & 33	47,48 & 49	66 & 67
SFD2570	35,36 & 37	32 & 33	47,50,51 & 52	66 & 67
SFD2575	35,36 & 37	32 & 33	47,50,51 & 52	66 & 67
SFD2580	35,36 & 37	32 & 33	47,50,51 & 52	66 & 67
D2381	{ See TV-23 for Parts List & Schematic			
D2384				
SRS2	19			67 & 68
SRS4	20			68
SRS12	40	40	44 & 45	68
SRD20	28			68 & 69
SRD22	40	40	44 & 45	69
SRD83	37			69 & 70
SRD85	37			70
SRD88	37			70
SRD90	37			71
DR100	37			71
DR102	37			71
DR105	37			72

FEATURES OF "D" SERIES HIGH

MODEL NO.	STYLE	CABINET			CHASSIS NO.	CHASSIS			PRESENCE CONTROL	TAPE INPUT	STEREO TAPE INPUT	SIZE (IN.)
		MATERIAL	FINISH	COLOR		TUNING	TYPE	MTG.				
DPS80C	Table (w/handle) (Lift Lid)	Wood	Pyroxylin Coated Leatherette	Black & Off White	Waters-Conley		5 Tube Phono Only Dual 1W.	Horiz.	No	No	No	(2) 3 1/2 (2) 5 x 7
DPS89C	Table (w/handle) (Lift Lid)	Wood	Pyroxylin Coated Leatherette	Charcoal & Ivory	Waters-Conley		3 Tube Phono Only 3W.	Horiz.	No	No	No	4 6
DRS89C	Table (w/handle)	Wood	Pyroxylin Coated Leatherette	Charcoal & Ivory	Waters-Conley		3 Tube Remote Spkr. 3W.	Horiz.	No	No	No	4 6
SF112W	Table (Lift Lid)	Wood	Wood	Walnut	4B25		Phono Only Dual 3W.	Vert.	No	No	No	3 1/2 7 1/2
SF112R	Table (Lift Lid)	Wood	Wood	Mahogany	4B25		Phono Only Dual 3W.	Vert.	No	No	No	3 1/2 7 1/2
SF112E	Table (Lift Lid)	Wood	Wood	Oak	4B25		Phono Only Dual 3W.	Vert.	No	No	No	3 1/2 7 1/2
SF114W	Console (Lift Lid)	Masonite	Grained	Walnut	5B27		Phono Only Dual 5W.	Vert.	No	No	No	3 1/2 10
SF114R	Console (Lift Lid)	Masonite	Grained	Mahogany	5B27		Phono Only Dual 5W.	Vert.	No	No	No	3 1/2 10
SF114E	Console (Lift Lid)	Masonite	Grained	Oak	5B27		Phono Only Dual 5W.	Vert.	No	No	No	3 1/2 10
SFD122W	Console (Lift Lid)	Wood	Wood	Walnut	5B23		Phono Only 20W.	Vert.	Yes	Yes	No	5 12
SFD122R	Console (Lift Lid)	Wood	Wood	Mahogany	5B23		Phono Only 20W.	Vert.	Yes	Yes	No	5 12
SFD122E	Console (Lift Lid)	Wood	Wood	Oak	5B23		Phono Only 20W.	Vert.	Yes	Yes	No	5 12
SF174W	Console (Lift Lid)	Wood	Grained	Walnut	4B22Z 3B30	No R.F.-A.M. 2 Gang	Phono & A.M. 20W.	Vert.	Yes	Yes	No	3 1/2 (2) 12
SF174R	Console (Lift Lid)	Wood	Grained	Mahogany	4B22Z 3B30	No R.F.-A.M. 2 Gang	Phono & A.M. 20W.	Vert.	Yes	Yes	No	3 1/2 (2) 12
SFD220R	Console (Lift Lid)	Wood	Grained	Mahogany	2D30 7D30		Phono Only Dual 20W.	Vert.	Yes	Yes	Yes	3 1/2 (2) 12
SFD220M	Console (Lift Lid)	Wood	Grained	Maple	2D30 7D30		Phono Only Dual 20W.	Vert.	Yes	Yes	Yes	3 1/2 (2) 12
SFD280R	Console (Lift Lid)	Wood	Grained	Mahogany	9D26 3D32	No R.F.-A.M. 2 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 5W.	Vert.	Yes	Yes	Yes	3 1/2 5 1/4 12
SFD280M	Console (Lift Lid)	Wood	Grained	Maple	9D26 3D32	No R.F.-A.M. 2 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 5W.	Vert.	Yes	Yes	Yes	3 1/2 5 1/4 12
SFD283W	Console (Lift Lid)	Wood	Grained	Walnut	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Vert.	Yes	Yes	Yes	3 1/2 5 1/4 (2) 12
SFD283R	Console (Lift Lid)	Wood	Grained	Mahogany	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Vert.	Yes	Yes	Yes	3 1/2 5 1/4 (2) 12
SFD283H	Console (Lift Lid)	Wood	Grained	Cherry	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Vert.	Yes	Yes	Yes	3 1/2 5 1/4 (2) 12
SFD285R	Console (Lift Lid) (Casters)	Wood	Grained	Mahogany	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Vert.	Yes	Yes	Yes	3 1/2 5 1/4 (2) 12
SFD285M	Console (Lift Lid) (Casters)	Wood	Grained	Maple	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Vert.	Yes	Yes	Yes	3 1/2 5 1/4 (2) 12
SFD288W	Console (Door)	Wood	Grained	Walnut	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	3 1/2 5 1/4 (2) 12
SFD288R	Console (Door)	Wood	Grained	Mahogany	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	3 1/2 5 1/4 (2) 12
SFD288E	Console (Door)	Wood	Grained	Pak	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	3 1/2 5 1/4 (2) 12

FIDELITY AND STEREOPHONIC MODELS

SPEAKER MAGNET (WT. OZ)	RECORD CHANGER						CONTROL PANEL	INDICATOR LIGHT	TYPE OF IDENTIFICATION	REMOTE SPEAKER	RADIAL SOUND SPEAKER
	SPEAKER PART NOS.	TYPE	MTG.	CARTRIDGE	STYLUS						
1. 2.15	WC13470 WC13511	169-112	Shelf	142-92	Sapphire Sapphire	Metal Strip	No	ZENITH Super Stereo- phonic Crest	Not Required	None	
.68 2.15	WC11792 WC12963	169-113	Shelf	142-92	Sapphire Sapphire	Metal Strip	Yes	ZENITH Super Stereo- phonic Crest	DRS89C	None	
.68 2.15						Metal Strip	Yes	ZENITH Super Stereo- phonic Crest		None	
.68 1.47	49-881 49-877	169-106	Shelf	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest	SRS2W	None	
.68 1.47	49-881 49-877	169-106	Shelf	142 -92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest	SRS2R	None	
.68 1.47	49-881 49-877	169-106	Shelf	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest	SRS2E	None	
.68 6.8	49-846 49-855	169-106	Shelf	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest	SRS4W	None	
.68 6.8	49-846 49-855	169-106	Shelf	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest	SRS4R	None	
.68 6.8	49-846 49-855	169-106	Shelf	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest	SRS4E	None	
1.47 6.8	49-856 49-870	169-106	Shelf	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest	SRD22W	None	
1.47 6.8	49-856 49-870	169-106	Shelf	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest	SRD22R	None	
1.47 6.8	49-856 49-870	169-106	Shelf	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest	SRD22E	None	
.68 1.47 6.8	49-846 49-856 49-852,3	169-107	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Stereophonic High Fidelity Crest	SRS12W	None	
.68 1.47 6.8	49-846 49-856 49-852,3	169-107	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Stereophonic High Fidelity Crest	SRS12R	None	
.68 1. 6.8	49-782 49-896 49-871 49-906	169-107	Shelf	142-92	Sapphire Sapphire	Metal Plate	No	ZENITH Extended Stereophonic High Fidelity Crest	SRD20R	DR102H or DR100H	
.68 1. 6.8	49-872 49-896 49-871 49-906	169-107	Shelf	142-92	Sapphire Sapphire	Metal Plate	No	ZENITH Extended Stereophonic High Fidelity Crest	SRD20M	DR102H or DR100H	
.68 1. 6.8	49-782 49-896 49-852	169-106	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Stereophonic High Fidelity Crest	SRD20R	DR100H or DR102H	
.68 1. 6.8	49-872 49-896 49-852	169-106	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Stereophonic High Fidelity Crest	SRD20M	DR100H or DR102H	
.68 1. 13.	49-782 49-896 49-904,5	169-107	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereophonic High Fidelity Crest	SRD83W	DR102H or DR100H	
.68 1. 13.	49-782 49-896 49-904,5	169-107	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereophonic High Fidelity Crest	SRD83R	DR102H or DR100H	
.68 1. 13.	49-782 49-896 49-904,5	169-107	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereophonic High Fidelity Crest	SRD83H	DR102H or DR100H	
.68 1. 13.	49-782 49-896 49-904,5	169-107	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereophonic High Fidelity Crest	SRD85R	DR102H or DR100H	
.68 1. 13.	49-782 49-896 49-904,5	169-107	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereophonic High Fidelity Crest	SRD85M	DR102H or DR100H	
.68 1. 13.	49-782 49-896 49-904,5	169-107	Pan	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereophonic High Fidelity Crest	SRD88W	DR102H or DR100H	
.68 1. 13.	49-782 49-896 49-904,5	169-107	Pan	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereophonic High Fidelity Crest	SRD88R	DR102H or DR100H	
.68 1. 13.	49-782 49-896 49-904,5	169-107	Pan	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereophonic High Fidelity Crest	SRD88E	DR102H or DR100H	

FEATURES OF "D" SERIES HIGH

MODEL NO.	STYLE	CABINET			CHASSIS NO.	CHASSIS			PRESENCE CONTROL	TAPE INPUT	STEREO TAPE INPUT	SIZE (IN.)
		MATERIAL	FINISH	COLOR		TUNING	TYPE	MTG.				
SFD290R	Console (Door)	Wood	Wood	Mahogany	9D25 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	Horn 15
SFD290H	Console (Door)	Wood	Wood	Cherry	9D25 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	Horn 15
SFD2505W	Console (2/3 Lift Lid)	Wood	Grained	Walnut	5B29		Phono Only Dual 5W.	Vert.	No	No	No	(2) 5 (2) 12
SFD2505R	Console (2/3 Lift Lid)	Wood	Grained	Mahogany	5B29		Phono Only Dual 5W.	Vert.	No	No	No	(2) 5 (2) 12
SFD2505E	Console (2/3 Lift Lid)	Wood	Grained	Oak	5B29		Phono Only Dual 5W.	Vert.	No	No	No	(2) 5 (2) 12
SFD2515W	Console (2/3 Lift Lid)	Wood	Grained	Walnut	2D30 7D30		Phono Only Dual 20W.	Vert.	Yes	Yes	Yes	(2) 5 1/4 (2) 12
SFD2515R	Console (2/3 Lift Lid)	Wood	Grained	Mahogany	2D30 7D30		Phono Only Dual 20W.	Vert.	Yes	Yes	Yes	(2) 5 1/4 (2) 12
SFD2515E	Console (2/3 Lift Lid)	Wood	Grained	Oak	2D30 7D30		Phono Only Dual 20W.	Vert.	Yes	Yes	Yes	(2) 5 1/4 (2) 12
SFD2530W	Console (2/3 Lift Lid)	Wood	Grained	Walnut	9D26 3D32	No R.F.-A.M. 2 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 5W.	Vert.	Yes	Yes	Yes	(2) 5 (2) 12
SFD2530R	Console (2/3 Lift Lid)	Wood	Grained	Mahogany	9D26 3D32	No R.F.-A.M. 2 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 5W.	Vert.	Yes	Yes	Yes	(2) 5 (2) 12
SFD2530E	Console (2/3 Lift Lid)	Wood	Grained	Oak	9D26 3D32	No R.F.-A.M. 2 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 5W.	Vert.	Yes	Yes	Yes	(2) 5 (2) 12
SFD2535R	Console (2/3 Lift Lid) (Casters)	Wood	Wood	Mahogany	9D26 3D32	No R.F.-A.M. 2 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 5W.	Vert.	Yes	Yes	Yes	(2) 5 (2) 12
SFD2535M	Console (2/3 Lift Lid) (Casters)	Wood	Wood	Maple	9D26 3D32	No R.F.-A.M. 2 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 5W.	Vert.	Yes	Yes	Yes	(2) 5 (2) 12
SFD2560W	Console (Door)	Wood	Wood	Walnut	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	(2) 3 1/2 (2) 5 1/4 (2) 12
SFD2560R	Console (Door)	Wood	Wood	Mahogany	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	(2) 3 1/2 (2) 5 1/4 (2) 12
SFD2560E	Console (Door)	Wood	Wood	Oak	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	(2) 3 1/2 (2) 5 1/4 (2) 12
SFD2565R	Console (Door) (Casters)	Wood	Wood	Mahogany	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	(2) 3 1/2 (2) 5 1/4 (2) 12
SFD2565M	Console (Door) (Casters)	Wood	Wood	Maple	9D24 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	(2) 3 1/2 (2) 5 1/4 (2) 12
SFD2570W	Console (Doors)	Wood	Wood	Walnut	9D25 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	(2) Horn (2) 12
SFD2570Y	Console (Doors)	Wood	Wood	Ebony	9D25 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	(2) Horn (2) 12
SFD2570E	Console (Doors)	Wood	Wood	Oak	9D25 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	(2) Horn (2) 12
SFD2575L	Console (Doors)	Wood	Wood	Tuscan Walnut	9D25 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	(2) Horn (2) 12
SFD2580R	Console (Doors) (Casters)	Wood	Wood	Mahogany	9D25 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	(2) Horn (2) 12
SFD2580H	Console (Doors) (Casters)	Wood	Wood	Cherry	9D25 7D31	T-R.F.-A.M. 3 Gang U.T.-R.F.-F.M.	Phono A.M.- F.M. Dual 20W.	Horiz.	Yes	Yes	Yes	(2) Horn (2) 12
D2381W	Console	Wood	Wood	Walnut	16D21 5B28		TV - Phono Dual 5W.	Right Side of Cabinet	No	No	No	(2) 3 1/2 (2) 6 x 9
D2381R	Console	Wood	Wood	Mahogany	16D21 5B28		TV - Phono Dual 5W.	Right Side of Cabinet	No	No	No	(2) 3 1/2 (2) 6 x 9

FIDELITY AND STEREOPHONIC MODELS

SPEAKER		RECORD CHANGER					CONTROL PANEL	INDICATOR LIGHT	TYPE OF IDENTIFICATION	REMOTE SPEAKER	RADIAL SOUND SPEAKER
MAGNET (WT. OZ)	SPEAKER PART NOS.	TYPE	MTG.	CARTRIDGE	STYLUS						
4.28 13.	49-867 49-901	169-108	Pan	142-93	Diamond Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereo Phonic High Fidelity Crest	SRD90R	DR105H	
4.28 13.	49-867 49-901	169-108	Pan	142-93	Diamond Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereo Phonic High Fidelity Crest	SRD90H	DR105H	
1.47 6.8	49-856 49-852	169-106	Shelf	142-92	Sapphire Sapphire	Metal Plate	No	ZENITH Stereo Phonic High Fidelity Crest	Not Required	DR100H or DR102H	
1.47 6.8	49-856 49-852	169-106	Shelf	142-92	Sapphire Sapphire	Metal Plate	No	ZENITH Stereo Phonic High Fidelity Crest	Not Required	DR100H or DR102H	
1.47 6.8	49-856 49-852	169-106	Shelf	142-92	Sapphire Sapphire	Metal Plate	No	ZENITH Stereo Phonic High Fidelity Crest	Not Required	DR100H or DR102H	
1. 13.	49-896 49-903	169-108	Shelf	142-93	Diamond Sapphire	Metal Plate	No	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR100H or DR102H	
1. 13.	49-896 49-903	169-108	Shelf	142-93	Diamond Sapphire	Metal Plate	No	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR100H or DR102H	
1. 13.	49-896 49-903	169-108	Shelf	142-93	Diamond Sapphire	Metal Plate	No	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR100H or DR102H	
1.47 6.8	49-856 49-852	169-106	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Stereo Phonic High Fidelity Crest	Not Required	DR100H or DR102H	
1.47 6.8	49-856 49-852	169-106	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Stereo Phonic High Fidelity Crest	Not Required	DR100H or DR102H	
1.47 6.8	49-856 49-852	169-106	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Stereo Phonic High Fidelity Crest	Not Required	DR100H or DR102H	
1.47 6.8	49-856 49-852	169-106	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Stereo Phonic High Fidelity Crest	Not Required	DR100H or DR102H	
1.47 6.8	49-856 49-852	169-106	Shelf	142-92	Sapphire Sapphire	Die-Cast Escutcheon	Yes	ZENITH Stereo Phonic High Fidelity Crest	Not Required	DR100H or DR102H	
.68 1. 13.	49-782 49-896 49-903	169-108	Pan	142-93	Diamond Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR102H or DR100H	
.68 1. 13.	49-782 49-896 49-903	169-108	Pan	142-93	Diamond Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR102H or DR100H	
.68 1. 13.	49-782 49-896 49-903	169-108	Pan	142-93	Diamond Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR102H or DR100H	
.68 1. 13.	49-782 49-896 49-903	169-108	Pan	142-93	Diamond Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR102H or DR100H	
.68 1. 13.	49-782 49-896 49-903	169-108	Pan	142-93	Diamond Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR102H or DR100H	
4.28 13.	49-867 49-903	169-109	Pan	142-93	Diamond Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR105H	
4.28 13.	49-867 49-903	169-109	Pan	142-93	Diamond Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR105H	
4.28 13.	49-867 49-903	169-109	Pan	142-93	Diamond Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR105H	
4.28 13.	49-867 49-903	169-109	Pan	142-93	Diamond Sapphire	Die-Cast Escutcheon	Yes	ZENITH Extended Stereo Phonic High Fidelity Crest	Not Required	DR105H	
.68 3.16	49-846 49-831	169-107	Pan	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Crest	Not Required	DR100H or DR102H	
.68 3.16	49-846 49-831	169-107	Pan	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Crest	Not Required	DR100H or DR102H	

FEATURES OF "D" SERIES HIGH

MODEL NO.	STYLE	CABINET				CHASSIS				PRESENCE CONTROL	TAPE INPUT	STEREO TAPE INPUT	SIZE (IN.)
		MATERIAL	FINISH	COLOR	CHASSIS NO.	TUNING	TYPE	MTG.					
D2381E	Console	Wood	Wood	Oak	16D21 5B28		TV - Phono Dual 5W.	Right Side of Cabinet	No	No	No	(2) (2)	3 1/2 6 x 9
D2384R	Console (Casters)	Wood	Wood	Mahogany	16D21 5B28		TV - Phono Dual 5W.	Right Side of Cabinet	No	No	No	(2) (2)	3 1/2 6 x 9
D2384H	Console (Casters)	Wood	Wood	Cherry	16D21 5B28		TV - Phono Dual 5W.	Right Side of Cabinet	No	No	No	(2) (2)	3 1/2 6 x 9
SRS2W	Table	Wood	Wood	Walnut									3 1/2 7 1/2
SRS2R	Table	Wood	Wood	Mahogany									3 1/2 7 1/2
SRS2E	Table	Wood	Wood	Oak									3 1/2 7 1/2
SRS4W	Console	Masonite	Grained	Walnut									3 1/2 10
SRS4R	Console	Masonite	Grained	Mahogany									3 1/2 10
SRS4E	Console	Masonite	Grained	Oak									3 1/2 10
SRS12	Console	Masonite	Grained	Walnut	5B24		Remote Speaker 20W.	Right Side of Cabinet	Yes				5 12
SRS12	Console	Masonite	Grained	Mahogany	5B24		Remote Speaker 20W.	Right Side of Cabinet	Yes				5 12
SRD20R	Console	Wood	Grained	Mahogany									3 1/2 5 1/4 12
SRD20M	Console	Wood	Grained	Maple									3 1/2 5 1/4 12
SRD22W	Console	Wood	Wood	Walnut	5B24		Remote Speaker 20W.	Right Side of Cabinet	Yes				5 12
SRD22R	Console	Wood	Wood	Mahogany	5B24		Remote Speaker 20W.	Right Side of Cabinet	Yes				5 12
SRD22E	Console	Wood	Wood	Oak	5B24		Remote Speaker 20W.	Right Side of Cabinet	Yes				5 12
SRD83W	Console	Wood	Grained	Walnut									3 1/2 5 1/4 12
SRD83R	Console	Wood	Grained	Mahogany									3 1/2 5 1/4 12
SRD83H	Console	Wood	Grained	Cherry									3 1/2 5 1/4 12
SRD85R	Console	Masonite	Grained	Mahogany									3 1/2 5 1/4 12
SRD85M	Console	Masonite	Grained	Maple									3 1/2 5 1/4 12
SRD88W	Console	Wood	Grained	Walnut									3 1/2 5 1/4 12
SRD88R	Console	Wood	Grained	Mahogany									3 1/2 5 1/4 12
SRD88E	Console	Wood	Grained	Oak									3 1/2 5 1/4 12
SRD90R	Console	Wood	Wood	Mahogany									Horn 15
SRD90H	Console	Wood	Wood	Cherry									Horn 15
DR100H	Table	Wood	Grained	Fruitwood									6 x 9
DR102H	Table	Wood	Grained	Fruitwood									3 1/2 6 x 9
DR105H	Table	Wood	Wood	Fruitwood									Horn 6 x 9

FIDELITY AND STEREOPHONIC MODELS

SPEAKER		RECORD CHANGER					CONTROL PANEL	INDICATOR LIGHT	TYPE OF IDENTIFICATION	REMOTE SPEAKER	RADIAL SOUND SPEAKER
MAGNET (WT. OZ)	SPEAKER PART NOS.	TYPE	MTG.	CARTRIDGE	STYLUS						
.68 3.16	49-846 49-831	169-107	Pan	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Crest	Not Required	DR100H or DR102H	
.68 3.16	49-846 49-831	169-107	Pull-Out Drawer	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Crest	Not Required	DR100H or DR102H	
.68 3.16	49-846 49-831	169-107	Pull-Out Drawer	142-92	Sapphire Sapphire	Silk Screened on Cabinet	No	ZENITH Crest	Not Required	DR100H or DR102H	
.68 1.47	49-881 49-877	COMPANION TABLE SPEAKER TO SF112					No	ZENITH			
.68 1.47	49-881 49-877	COMPANION TABLE SPEAKER TO SF112					No	ZENITH			
.68 1.47	49-881 49-877	COMPANION TABLE SPEAKER TO SF112					No	ZENITH			
.68 6.8	49-846 49-855	COMPANION SPEAKER TO SF114					No	ZENITH Stereophonic High Fidelity Crest			
.68 6.8	49-846 49-855	COMPANION SPEAKER TO SF114					No	ZENITH Stereophonic High Fidelity Crest			
.68 6.8	49-846 49-855	COMPANION SPEAKER TO SF114					No	ZENITH Stereophonic High Fidelity Crest			
1.47 6.8	49-856 49-852	COMPANION SPEAKER AMPLIFIER FOR SF174					Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest		
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER TO SFD220 & SFD280					No	ZENITH Stereophonic High Fidelity Crest			
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER TO SFD220 & SFD280					No	ZENITH Stereophonic High Fidelity Crest			
1.47 6.8	49-856 49-852	COMPANION SPEAKER AMPLIFIER FOR SFD122					Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest		
1.47 6.8	49-856 49-852	COMPANION SPEAKER AMPLIFIER FOR SFD122					Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest		
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER AMPLIFIER FOR SFD122					Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest		
1.47 6.8	49-856 49-852	COMPANION SPEAKER AMPLIFIER FOR SFD122					Silk Screened on Cabinet	No	ZENITH Stereophonic High Fidelity Crest		
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER TO SFD283					No	ZENITH Stereophonic High Fidelity Crest			
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER TO SFD283					No	ZENITH Stereophonic High Fidelity Crest			
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER TO SFD283					No	ZENITH Stereophonic High Fidelity Crest			
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER TO SFD285					No	ZENITH Stereophonic High Fidelity Crest			
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER TO SFD285					No	ZENITH Stereophonic High Fidelity Crest			
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER TO SFD285					No	ZENITH Stereophonic High Fidelity Crest			
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER TO SFD288					No	ZENITH Stereophonic High Fidelity Crest			
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER TO SFD288					No	ZENITH Stereophonic High Fidelity Crest			
.68 1. 6.8	49-782 49-896 49-900	COMPANION SPEAKER TO SFD288					No	ZENITH Stereophonic High Fidelity Crest			
4.28 13.	49-867 49-901	COMPANION SPEAKER TO SFD290					No	ZENITH Stereophonic High Fidelity Crest			
4.28 13.	49-867 49-901	COMPANION SPEAKER TO SFD290					No	ZENITH Stereophonic High Fidelity Crest			
3.16	49-902	COMPANION SPEAKER TO SFD290					No	ZENITH Radial Sound			
.68 3.16	49-782 49-902	COMPANION SPEAKER TO SFD290					No	ZENITH Radial Sound			
4.28 3.16	49-867 49-902	COMPANION SPEAKER TO SFD290					No	ZENITH Radial Sound			

EXTENDED STEREO

Block Diagram

Zenith's extended stereo is basically quite simple and the following information should be sufficient to explain it completely. The block diagram of the extended stereo system is applicable to all models. The first portion of this system is the stereo cartridge, which will supply information from the left and right elements. The information from each channel is funnelled to each half of the automatic balance control. This automatic balance control then feeds portions of the L&R information to the mixer preamplifier stages. Out of the mixer preamplifier stages two types of information are obtained. (L+R) information or (sum information) which is funnelled to the 20 watt sum amplifier. The other type information obtained from the mixer preamplifier is (L-R) or (difference information). This is supplied to the Stereo Control which is basically a gain control for the difference channel. (L-R) information from the stereo control then goes to the 20 watt difference amplifier. The (L+R) information and the (L-R), or as we will refer to it from time to time (the stereo effect) information are then both funnelled to a matrix which electronically separates them and feeds this separated information to the left and right speakers of the stereophonic speaker system.

Mixer Preamplifier Circuit

At first glance a system of this type would seem highly complex; however, if we clarify it, one can readily see that although ingenious in conception it is rather simple. The stereophonic cartridge consists of two elements each of which supplies voltages created by electro-mechanical process from its respective groove side. This information is fed to an automatic balance control which consists of two potentiometers ganged together physically. The information from the left channel goes to the arm of one potentiometer and the information from the right channel goes to the arm of the other potentiometer. These potentiometers are connected to the grids of the two triode halves of a 12AZ7. The arms on these potentiometers are so ganged that when the energy is increased at the grid of one triode, the energy is reduced at the grid of the other. In this manner, satisfactory balance can be obtained. In addition to being preamplifiers, these two triodes also act as a mixer system so that we can obtain the sum and difference information.

Left Preamplifier

Closely examine the path of the signal in the left channel preamplifier, assuming we have a negative L signal supplied by the left cartridge, then at the plate of the left preamplifier, we will have positive L information, as a result of phase reversal within

the tube. For simplification in explaining the mixing action, let us assume that the left preamplifier has a gain of two, then we will have a positive 2L at the plate of this left preamplifier. This 2L information goes out through the 68K and .1 mfd. to the junction of the .1 and .047 mfd. condensers. We should stop at this moment and see what else occurs. At the plate of the left preamplifier we have a 15K and 6.8K in series which are effectively a voltage divider and at their junction we have positive L information.

Right Preamplifier

Simultaneously, with the action in the left preamplifier negative R information is supplied by the right cartridge element and this goes to the right half of the balance control. At the high side of the right balance control L information and R information mix and we have a composite (L-R) voltage impressed on the grid of the right preamplifier. Since this voltage information is subjected to phase reversal through the tube, at the plate of the right preamplifier, we have (R-L) information.

The (R-L) information is channelled into two paths. At the junction of the 120K resistor and the .022 mfd. condenser some (R-L) information is fed to the stereo control which is basically a gain control for the (R-L) difference channel. At the junction of the 120K and .022 mfd. condenser, some of the (R-L) information goes up through 120K and the .047 mfd. condenser and mixes with the positive 2L signal from the left preamplifier. At this point, adding an (R-L) & (2L) the resultant will be (R+L) which is fed to the sum amplifier.


Stereo Control

For Monaural Operation, the stereo control is in off position and we do not supply any information to the (L-R) difference amplifier, all information that passes through the system is (L+R) which is channelled to both speakers.


For Standard Stereo Operation, the sum amplifier and difference amplifiers are supplied with information that is equal in magnitude. Under these conditions, (L+R) and (L-R) information is supplied to the matrix with only L information arriving at the left speaker and R information arriving at the right speaker.

For Extended Stereo Operation, the energy supplied to the (L-R) or difference channel is greater

Block Diagram for Extended Stereo Equipment

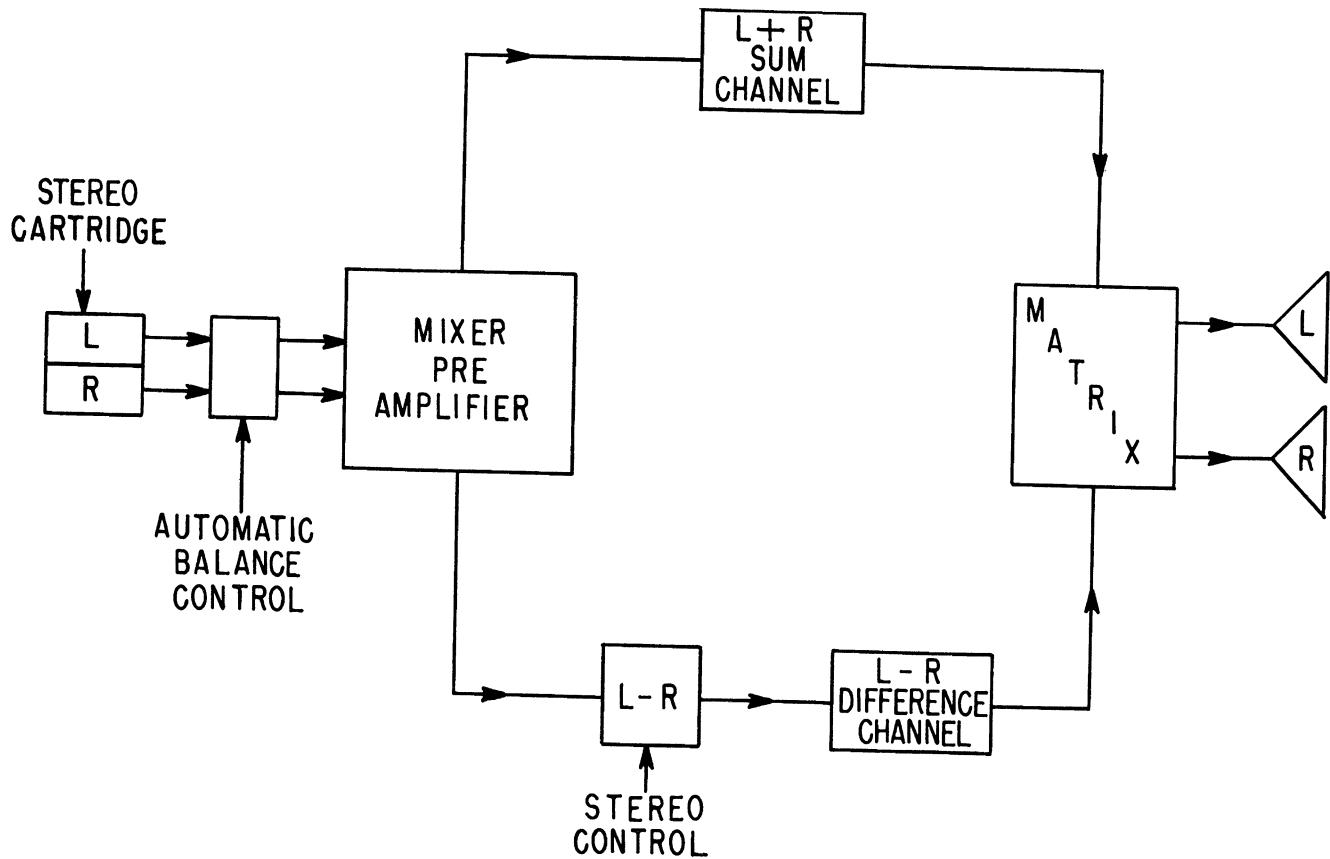

Basic Mixer Preamplifier Circuit

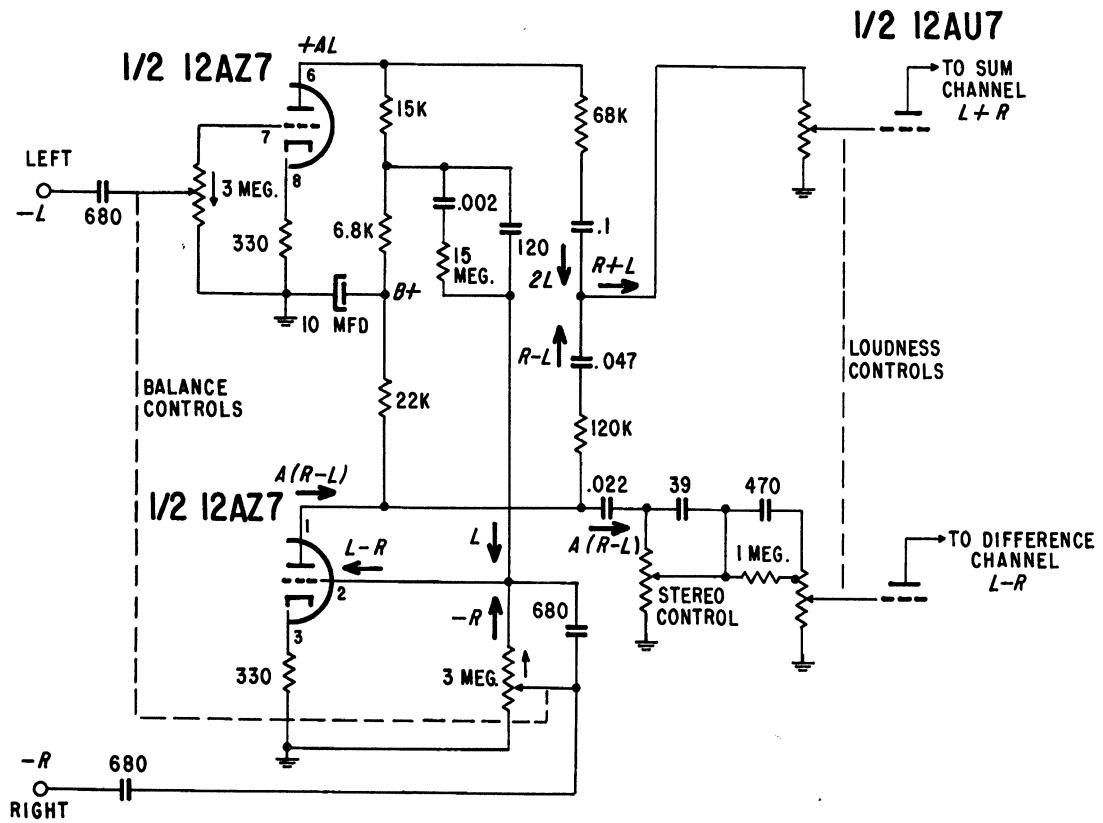

than the energy supplied to the (L+R) sum amplifier. Since the loudness controls for both the sum and difference amplifiers are ganged mechanically, the gain in the amplifiers they control will always be identical.

Matrix

At this point, we must digress and explain the matrix system. Basically the matrix system consists of two output transformers. The secondary winding of the (L-R) channel is center tapped. To this center tapped primary, we connect the secondary winding of the (L+R) output transformer. We now have two windings that are in series aiding or in series opposition. Again let us explain the three possible conditions at this matrix circuit.

(1) For monaural operation the L-R (difference channel) is off and without any (L-R) signal both speakers will receive (L+R) signal.

(2) For standard stereo operation, the output of the L-R (difference channel) is equal to the L+R (sum channel) and therefore by summation of the voltages from the secondary of the output transformers, which are connected in series aiding or series in opposition, L information is channelled to the L speaker and R information is channelled to the R speaker. The summation of these voltages would be as follows:

Series Aiding -

$$(L+R) + (L-R) =$$

$$L+R+L-R =$$

$$L+R+L-R=2L \text{ to the left speaker}$$

Series Opposition -

$$(L+R) - (L-R) =$$

$$L+R-L+R =$$

$$L+R-L+R=2R \text{ to the right speaker}$$

(3) For extended stereo operation under these conditions, the output of the (L-R difference channel) is greater than the output (L+R sum channel). Let us assume that we have twice the energy in the (L-R) channel than we have in the (L+R) channel. We can express this $2(L-R)$.

Series Aiding -

$$(L+R) + 2(L-R) =$$

$$L+R+2L-2R =$$

$$L+R+2L-2R=3L-R \text{ to the left speaker}$$

Series Opposition -


$$(L+R) - 2(L-R) =$$

$$L+R-2L+2R =$$

$$L+R-2L+2R=3R- \text{ to the right speaker}$$

From the equation you can see in the extended stereo position, the left speaker system receives an out of phase component of right information and simultaneously the right speaker system receives an out of phase component of left information. The magnitude of the out of phase components is what determines the spread of the extended stereo system.

Basic Matrix Circuit

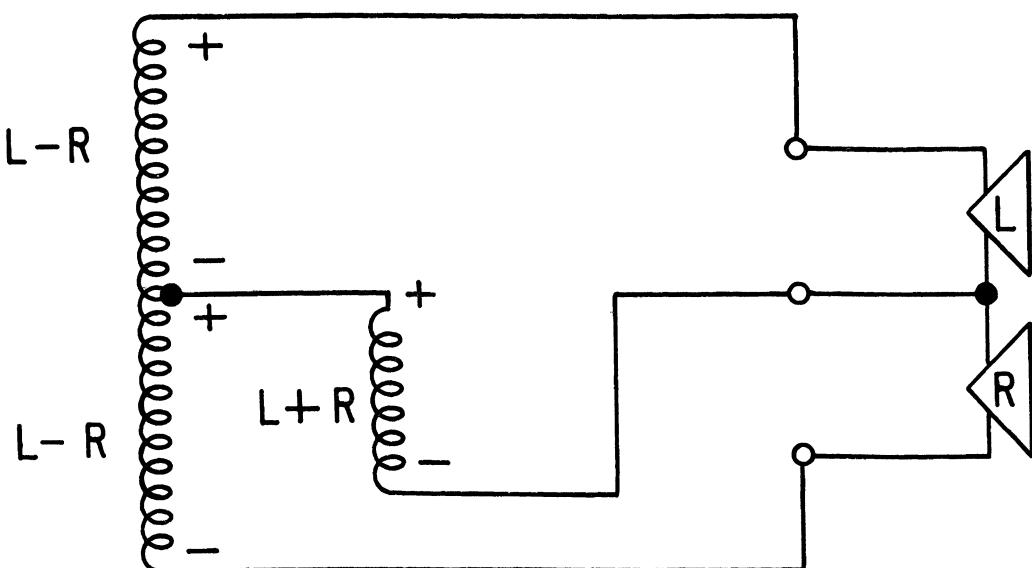

RADIAL SOUND SYSTEM

Should you have a room that will accommodate a larger speaker system and wish to improve the stereophonic reproduction, Zenith engineers have created a supplemental sound system that can be used in conjunction with these stereophonic instruments.

This equipment is the Zenith Radial Sound System, and its operation is based on the acoustical phenomena that all frequencies below 300 cycles are non-directional and that all directional properties of sound which contribute to the stereophonic spatial effect result from frequencies above 300 cycles and/or harmonics of the 300 cycles or lower frequencies that are greater than 300 cycles. As a result, all bass frequencies (300 cycles or lower) will be reproduced in the main chassis with all other frequencies coming from the two Radial Speakers.

Perhaps a review of the manner in which our ears operate as a direction finding device will be appropriate at this time. One's ability to determine direction depends entirely on the fact, that there are two ears situated on the opposite sides of the head. It is indeed fortunate that they are so located for their task.

Time Difference

A typical example of their ability to determine direction would be as you are walking towards some friend that may be somewhat to the right of you and he shouts, your head will immediately turn to the right. Since sound travels approximately 1100 feet per second and your ears are perhaps 6 inches apart, consequently your right ear may have heard the shout $1/2000$ of a second sooner than your left ear. This is only four hundred and fifty millionths of a second or 450 micro-seconds, but it will supply plenty of information with which your direction finding mechanism can work. Normal human ears can detect time differences as small as 6 micro-seconds. As we all know, our intricate mental computers read the amounts and type of delay and tell us almost instantly the direction of the sound source.

Phase Discrimination

Another important characteristic of sound is its wavelength. Sound travels approximately 1100 feet per second. Assume we have a thousand cycle frequency, we therefore have one thousand compressions and decompressions per second. Then the distance in air between two compressions must be just a little more than 1 foot. This is the wavelength of a thousand cycle frequency. Plainly the wavelength varies inversely with frequency. A frequency of 100 cycles per second has a wavelength of 11 feet. A frequency of 300 cycles per second has a wave-

length of 3.66 feet. Since the wavelength of frequencies 300 cycles or lower is 3.66 feet and greater, then the difference in air compression or rarefaction at the two ears separated by only inches will be infinitesimal compared to the change over a full cycle. This method of locating sounds is phase discrimination. It is ineffective at frequencies below 300 cycles and very effective between 300 to approximately 1600 cycles per second.

Intensity

Somewhat below the upper limit of 1600 cycles per second another characteristic of sound begins to furnish information. Sound will normally flow around an object when the object is much smaller than the wavelength of the sound, however, when the wavelength of the sound approaches or becomes smaller than the object, then the side of the object away from the sound is in shadow and the intensity becomes less at the far side. The ear on the side of the head away from the sound source is in shadow and receives the sound less intensely.

Our ears do not use these various facilities singly but simultaneously. The fact that both Time Difference and Phase Discrimination both fail with continuous low frequency sound is the basis on which the Radial Sound System functions.

Now that some of the various factors upon which Zenith's Radial Sound is based have been explained, we shall compare a previous dual channel full stereophonic amplifier to a similar model equipped with the Radial Sound System. On the model SF2505, each channel has a display system consisting of one 12 inch woofer and one 5 inch tweeter. On the model SFD2505, each audio display system will also be equipped with a 12 inch woofer and a 5 inch tweeter. However, each channel will in addition have a special socket to accept a Radial Sound System which consists of a tweeter, a midrange speaker, and a frequency filter network.

The customer will purchase the SFD2505 without the Radial Sound System, and will use it as a standard stereophonic instrument. Then if he wishes to convert to the Radial Sound System, he can purchase the two supplementary speaker systems and connect them to the sockets provided on the SFD2505. When they are connected, the tweeter speakers in the master or bass unit SFD2505 are disconnected, and the filtering in the supplementary speaker system will only feed frequencies 300 cycles or lower to the woofer speakers in the SFD2505.

All frequencies above 300 cycles and all harmonics of the 300 cycle or lower frequencies that are greater than 300 cycles are funnelled to the new supplementary speakers. A system of this type will greatly enhance the stereophonic effect and will eliminate the need for the usual small area center listening position.

GENERAL

Automatic Frequency Control (AFC)

Some of these receivers feature an automatic frequency control which automatically keeps your receiver on the exact station frequency when you are tuned to an FM station. To utilize this feature tune the receiver as instructed and then turn the band switch to (AFC) position.

When the desired FM station is a weak station, adjacent in frequency to a strong station, the AFC may pull the tuning into the stronger station. Under these conditions, place the bandswitch in FM position and tune the receiver as instructed.

Tuning the receivers on the frequency modulation band will require more care than on the broadcast band. A hissing sound may be noted when tuning between Frequency Modulation stations. This is normal, and will disappear as the station is tuned in. After a station is located, the pointer should be moved back and forth over it until the point of quietest reception and best tone quality is found. Correct tuning is indicated by the disappearance of background noise.

AM and FM Alignment

The AM and FM IF transformers in these receivers are of the new permeability tuned type. The advantage of an IF transformer of this type is its extreme stability under various humidity and temperature conditions. The upper coil is the secondary and the lower the primary. When adjusting these IF transformers the tuning wrench 68-26 can be inserted into the top slug, rotated until maximum output is obtained and then dropped down to the lower slug and the same operation repeated. The tuning wrench is so designed that turning one slug does not effect the adjustment of the other.

FM IF Alignment

Because of the wide band pass, it is desirable to use a FM signal generator and a cathode ray oscilloscope when aligning the FM IF channel. The instruction book for the Zenith Model 800 Signal Generator (Form Z8001) covers complete FM alignment procedure. If visual alignment equipment is unavailable, reasonably accurate alignment can be made by following the procedure outlined below.

FM Discriminator Alignment

When the secondary of the discriminator is aligned use sufficient signal input to get a good positive and negative indication before setting the slug for zero reading. A center zero indicating meter is recommended for this adjustment, but is not absolutely necessary. Reversing the leads of a non-zero center

meter, or observing closely when the meter starts to go to the left (negative) of zero will give the same results.

FM RF Alignment

The tuning slugs are attached to threaded shafts and the slugs are varied in the field of the coils by turning the shafts clockwise or counterclockwise. After adjustment the shafts must be secured with a drop of speaker cement.

IMPORTANT

Alignment of this chassis will in most cases be unnecessary unless an IF or RF transformer is replaced or the adjustments have been tampered with.

Correct alignment can only be made by using the following procedure:

A vacuum tube voltmeter with an isolation resistor of 2,000,000 ohms in series with the hot lead will serve for FM adjustments. This lead should be shielded.

An AC output meter connected across the primary or secondary of the output transformer will be satisfactory for all AM adjustments.

The signal generator output should be kept just high enough to get an indication on the meter.

- (a) Vacuum Tube Voltmeter Lug 7 on discriminator transformer to chassis (half discriminator load).
- (b) Vacuum Tube Voltmeter Lug 5 on discriminator transformer to chassis (full discriminator load).
- (c) Vacuum Tube Voltmeter from limiter grid to chassis.

(d) Loosen slugs by applying a hot iron to the cement.

Automatic Balance Control

To obtain equal audio output from each channel adjust the automatic balance control in the following manner:

1. Rotate the stereo control until the indicator on the monaural stereo dial is in standard stereo position.
2. Play a monophonic record.
3. Adjust the automatic balance control so the sound appears to come from a point midway between the two speakers.

Cartridge Connections

The wires to the stereo cartridge should be connected as follows: "Red" wire to "R" terminal of cartridge, "Black" to "middle" terminal and "White" wire to "L" terminal of cartridge.

6BQ5 Balance Control

On some chassis if one or both of the 6BQ5 output tubes in each final audio amplifier are replaced, it will be necessary to connect a DC volt meter across the balance terminals and adjust the balance control for minimum voltage.

Speaker Phasing

It is most important that coded speaker leads be connected to coded terminals on speakers for proper polarity within each speaker group. It is also then most important that the speaker groups be in phase with each other. One excellent method to determine if the speaker groups are in phase is to play a monaural record as described under Automatic Balance Control.

Under these conditions the sound should appear to come from a point midway between the two speaker groups. If the sound comes from any other point than midpoint, then one speaker group is out of phase with the other and you should check polarity. One of the easiest methods of checking polarity within the speaker group is to momentarily place a 4½ volt battery across the speaker feed terminals. All the speaker cones should simultaneously move in the same direction.

Coaxially Mounted Tweeters

On models SFD220, SFD283, SFD285 and SFD288, the 5¼ inch tweeters are coaxially mounted within one of the 12 inch woofer speakers.


DPS-80

An excellent method to determine if the speaker groups are in phase with each other is to play a monophonic record and then adjust the balance control until the sound appears to come from a point midway between the two speaker systems. If the sound comes from any other point, then one speaker group is out of phase with the other and you should check their polarity.


DPS-89 ---DRS-89

An excellent method to determine if the speaker groups are in phase with each other is to play a monophonic record with the tone controls on both amplifiers in mid position and then adjust the loudness controls until the sound appears to come from a point midway between the two amplifiers. If the sound comes from any other point, then one speaker group is out of phase with the other and you should check polarity.


In the event tubes are changed or someone should misadjust the balance controls on either of the chassis, the adjustment of either one or both balance controls may be required. Proceed in the following manner: On both the master and remote instruments, place the loudness controls in position 3, then using a monophonic record on the changer, adjust the balance control on either chassis until the output appears to come from a point midway between the two speaker systems.

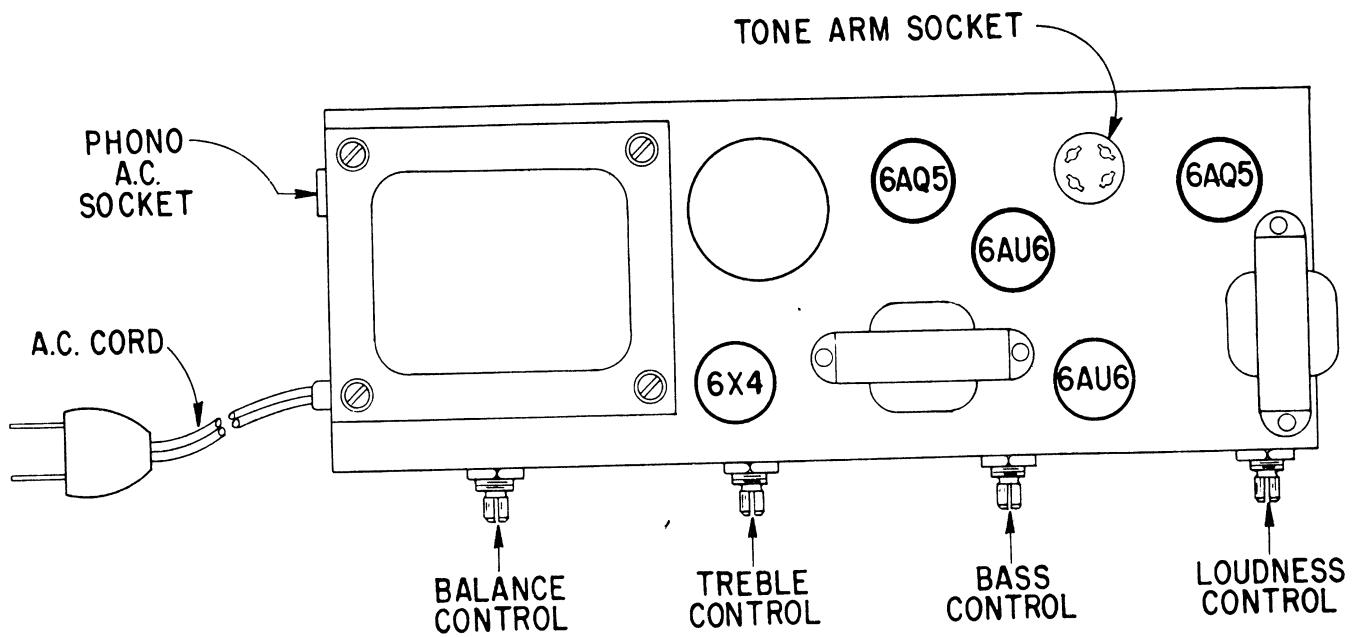


Tube Layout For Model DPS-80

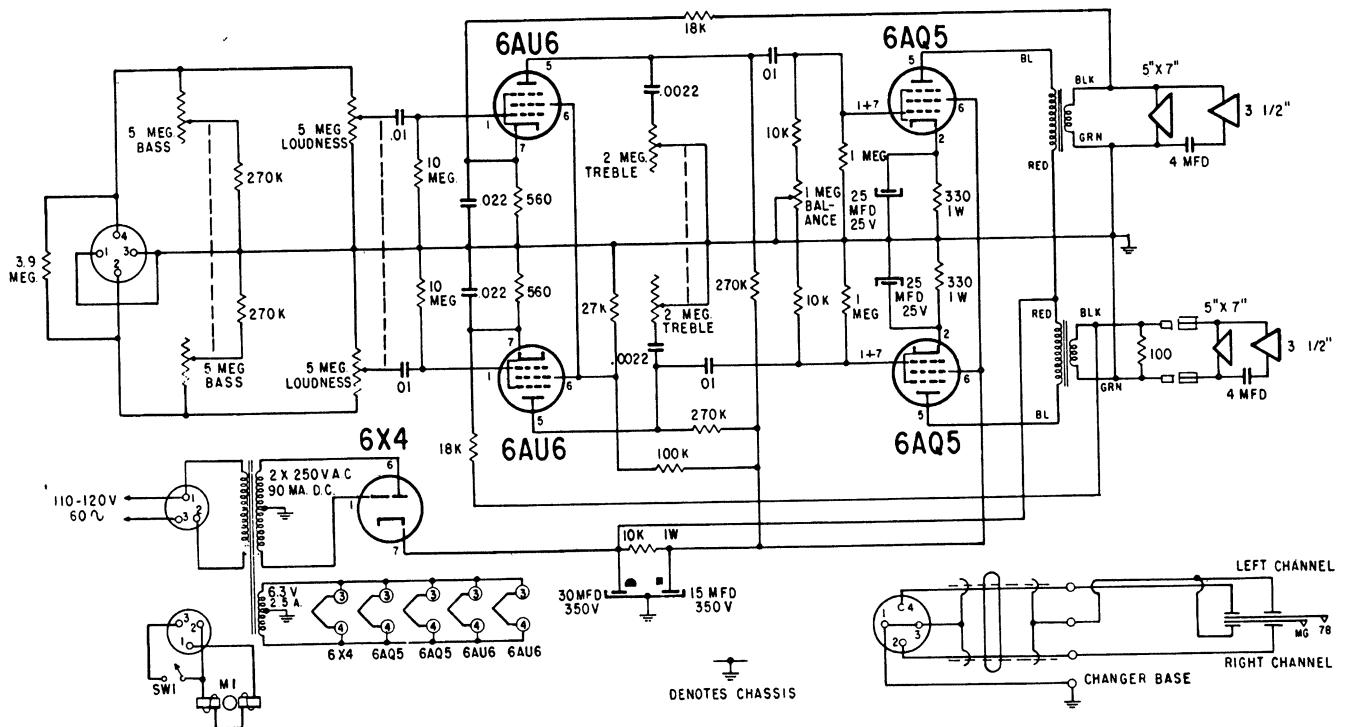


Schematic For Model DPS-80

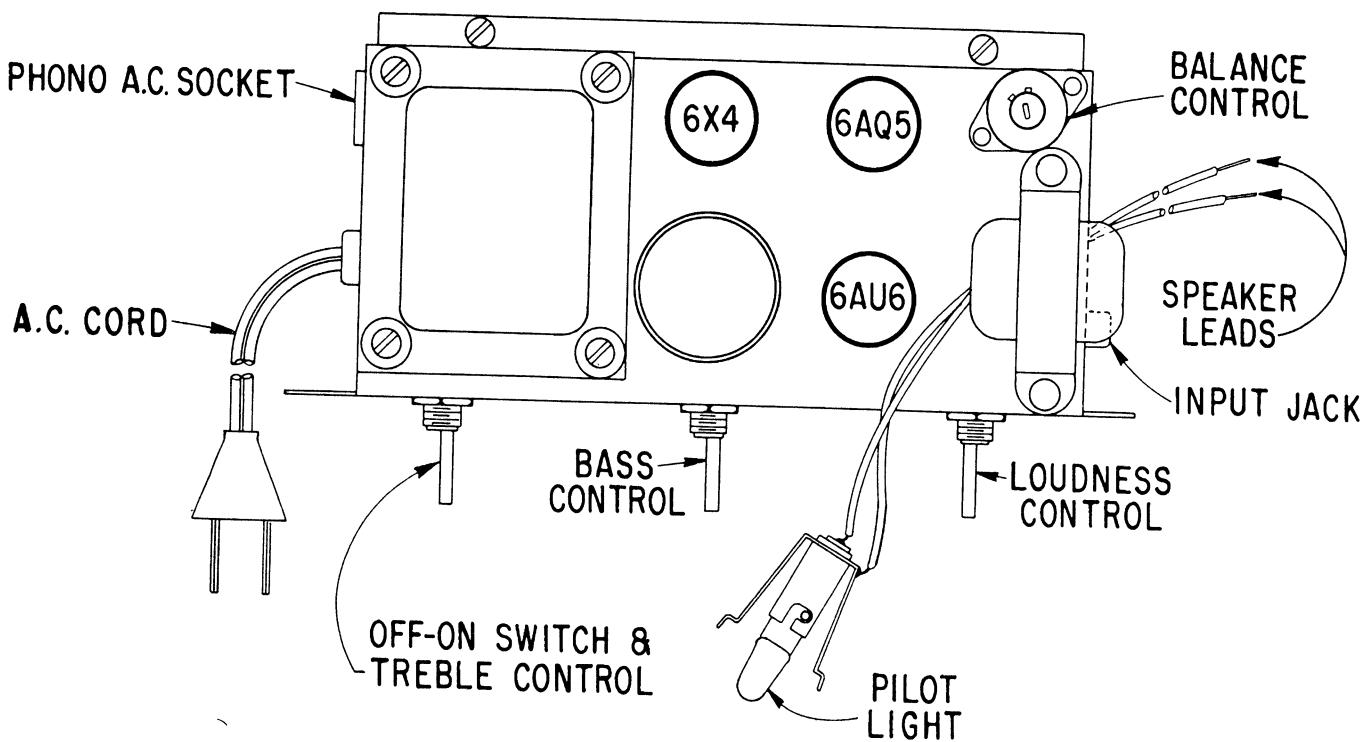


Tube Layout For Model DPS-89 - DRS-89

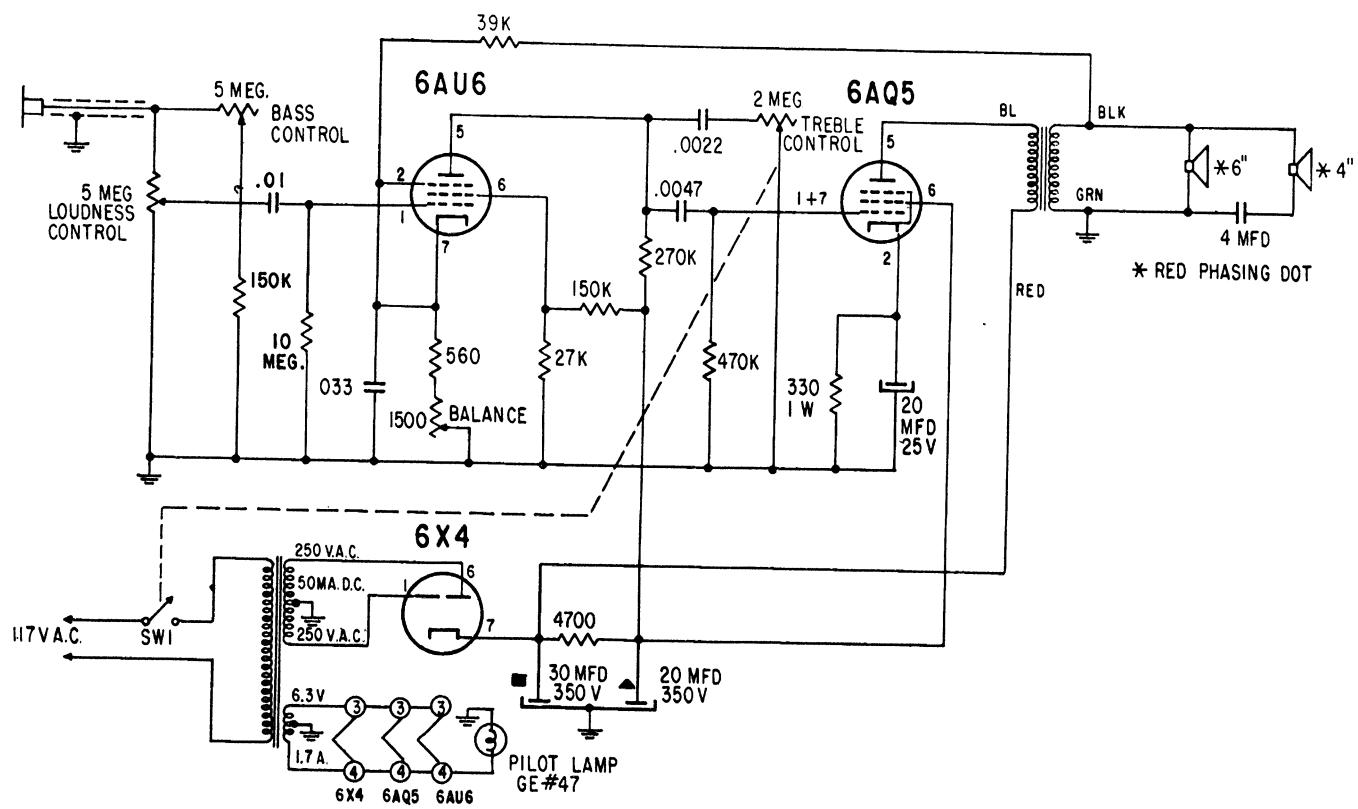


Remote Schematic For Model DRS-89

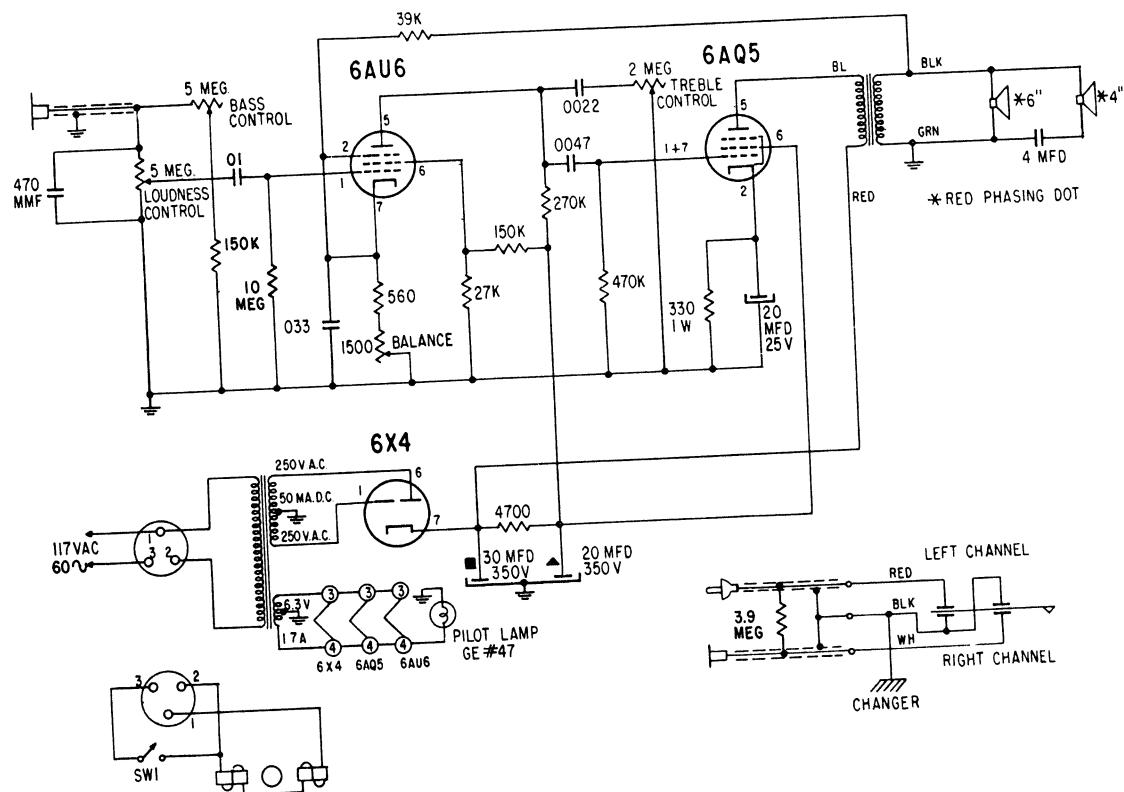


Master Schematic For Model DPS-89

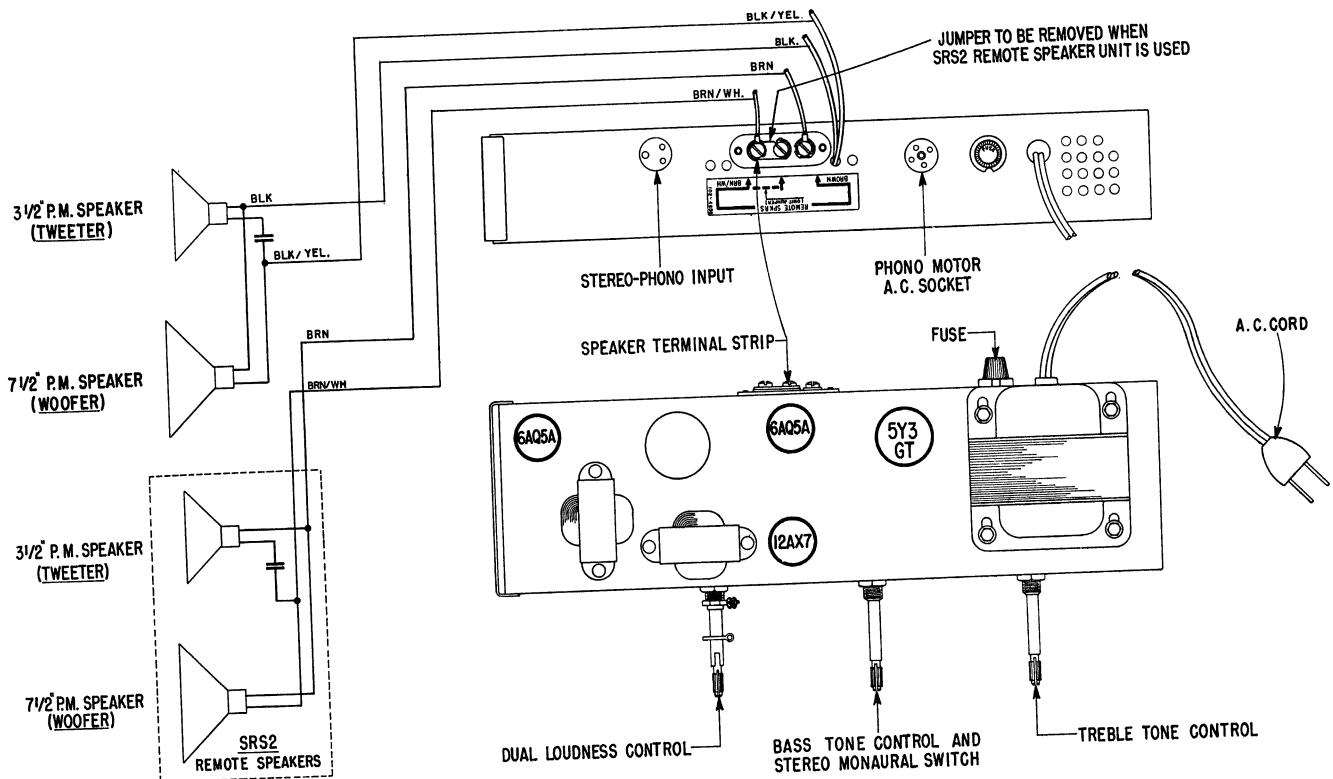


4B25 Chassis For Model SF112

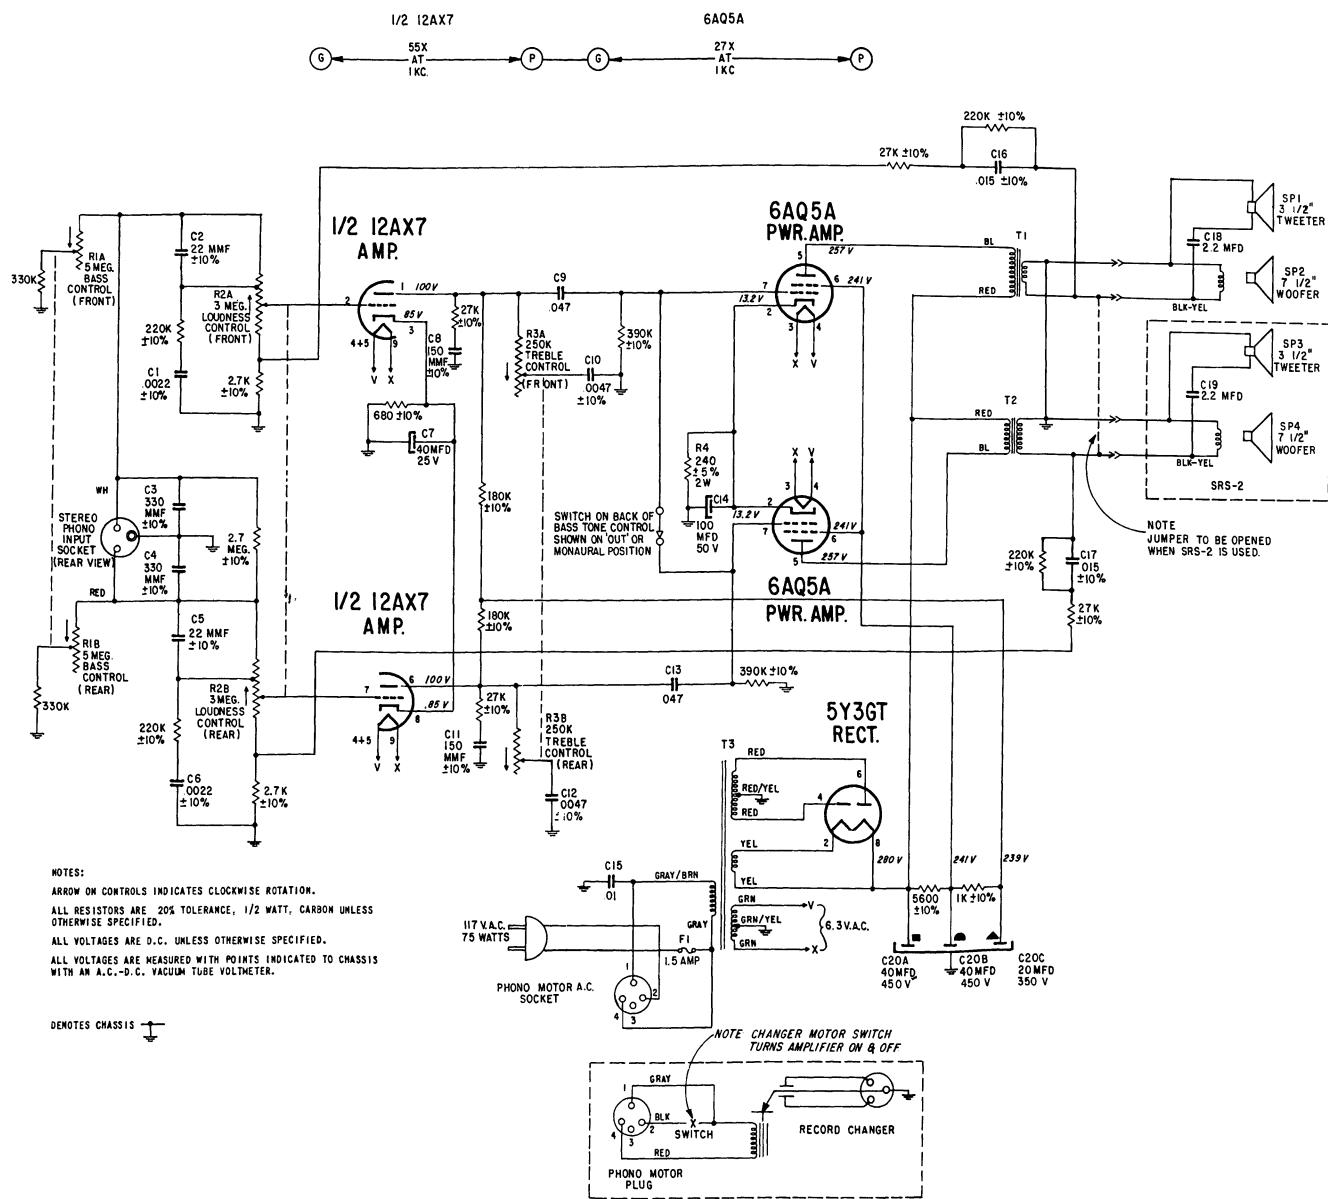



4B25 Schematic For Model SF112

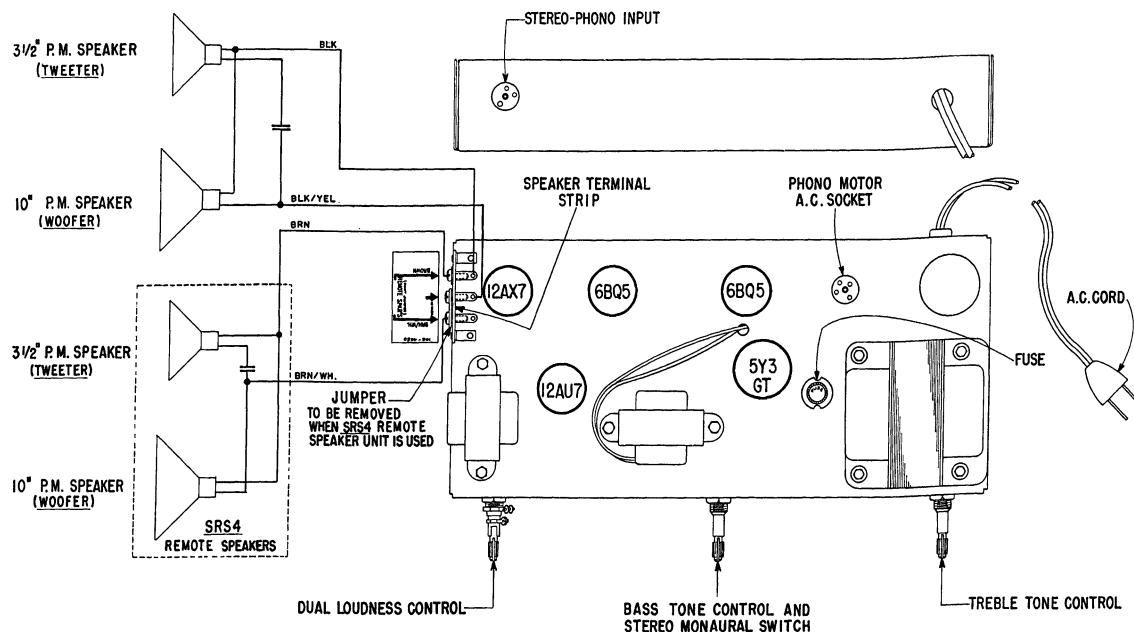

5B27 Chassis For Model SF114

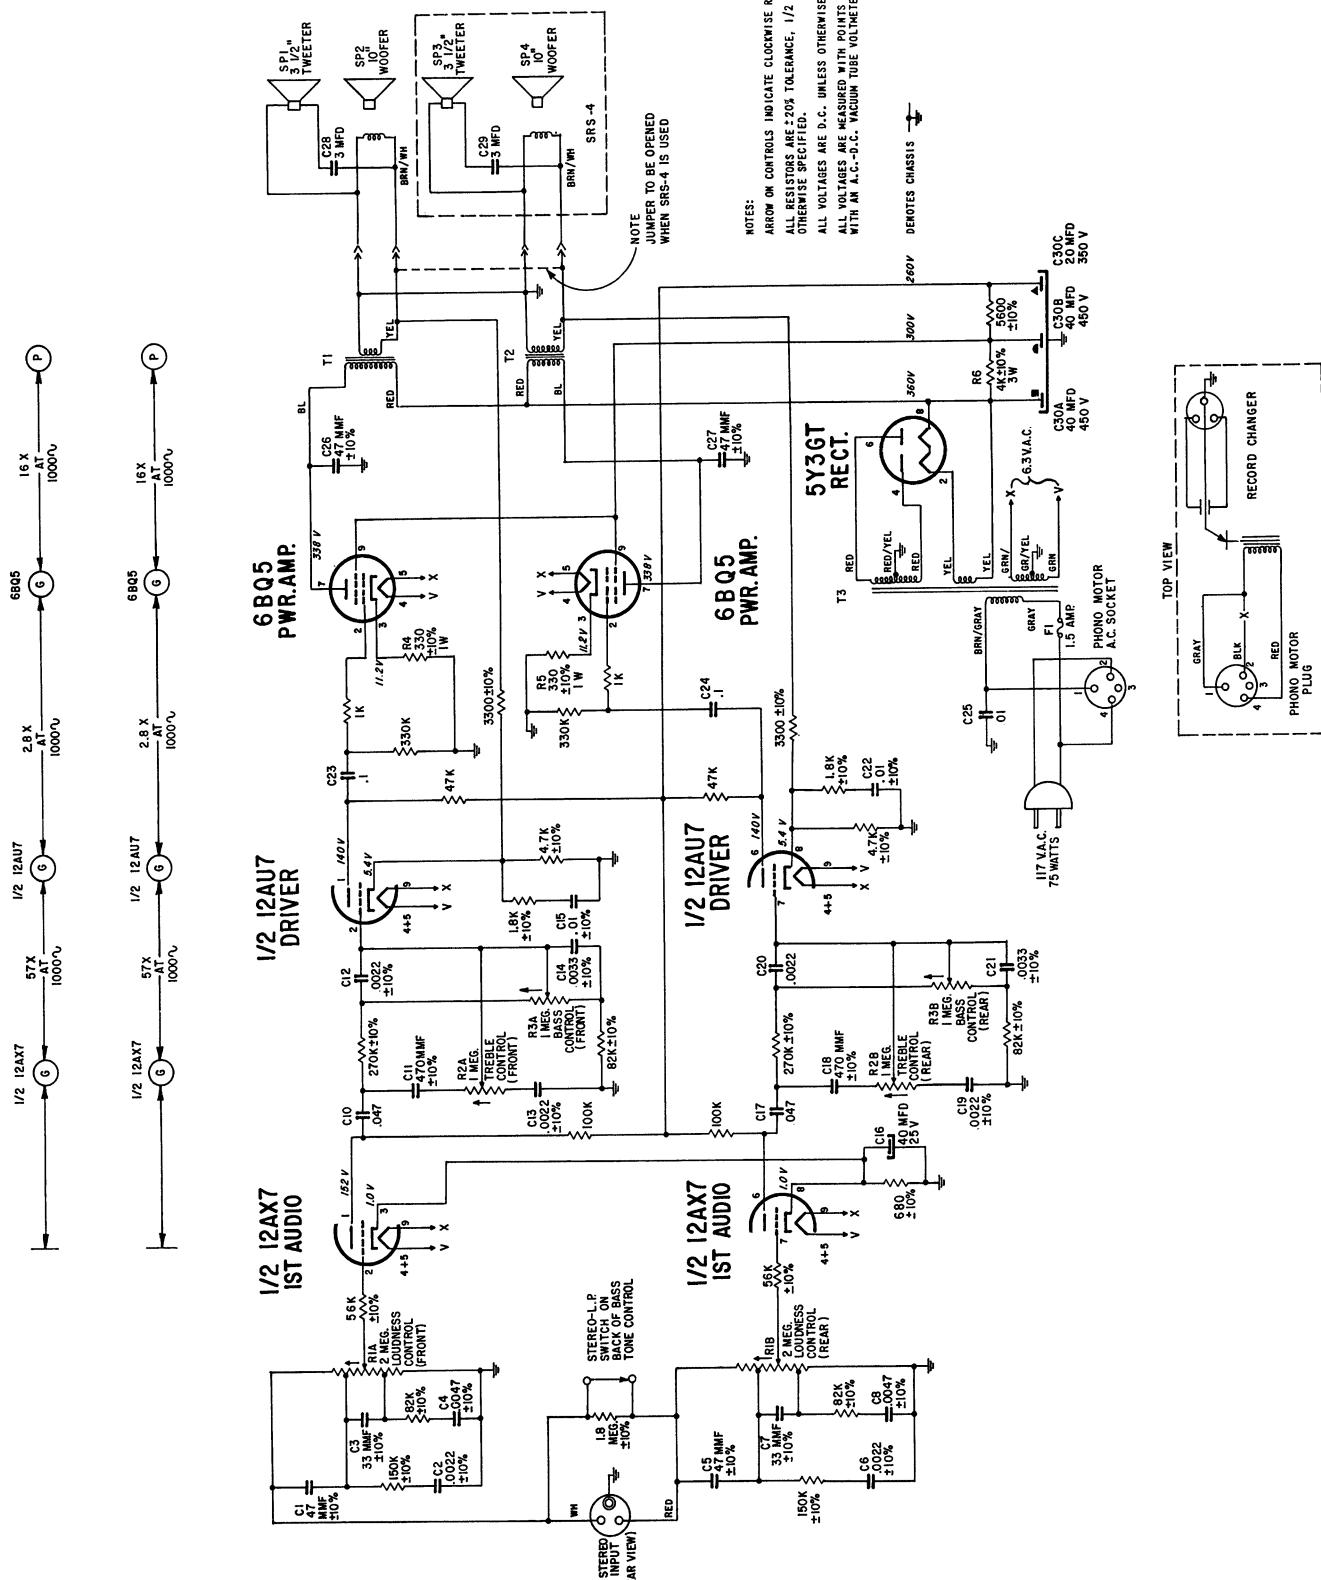


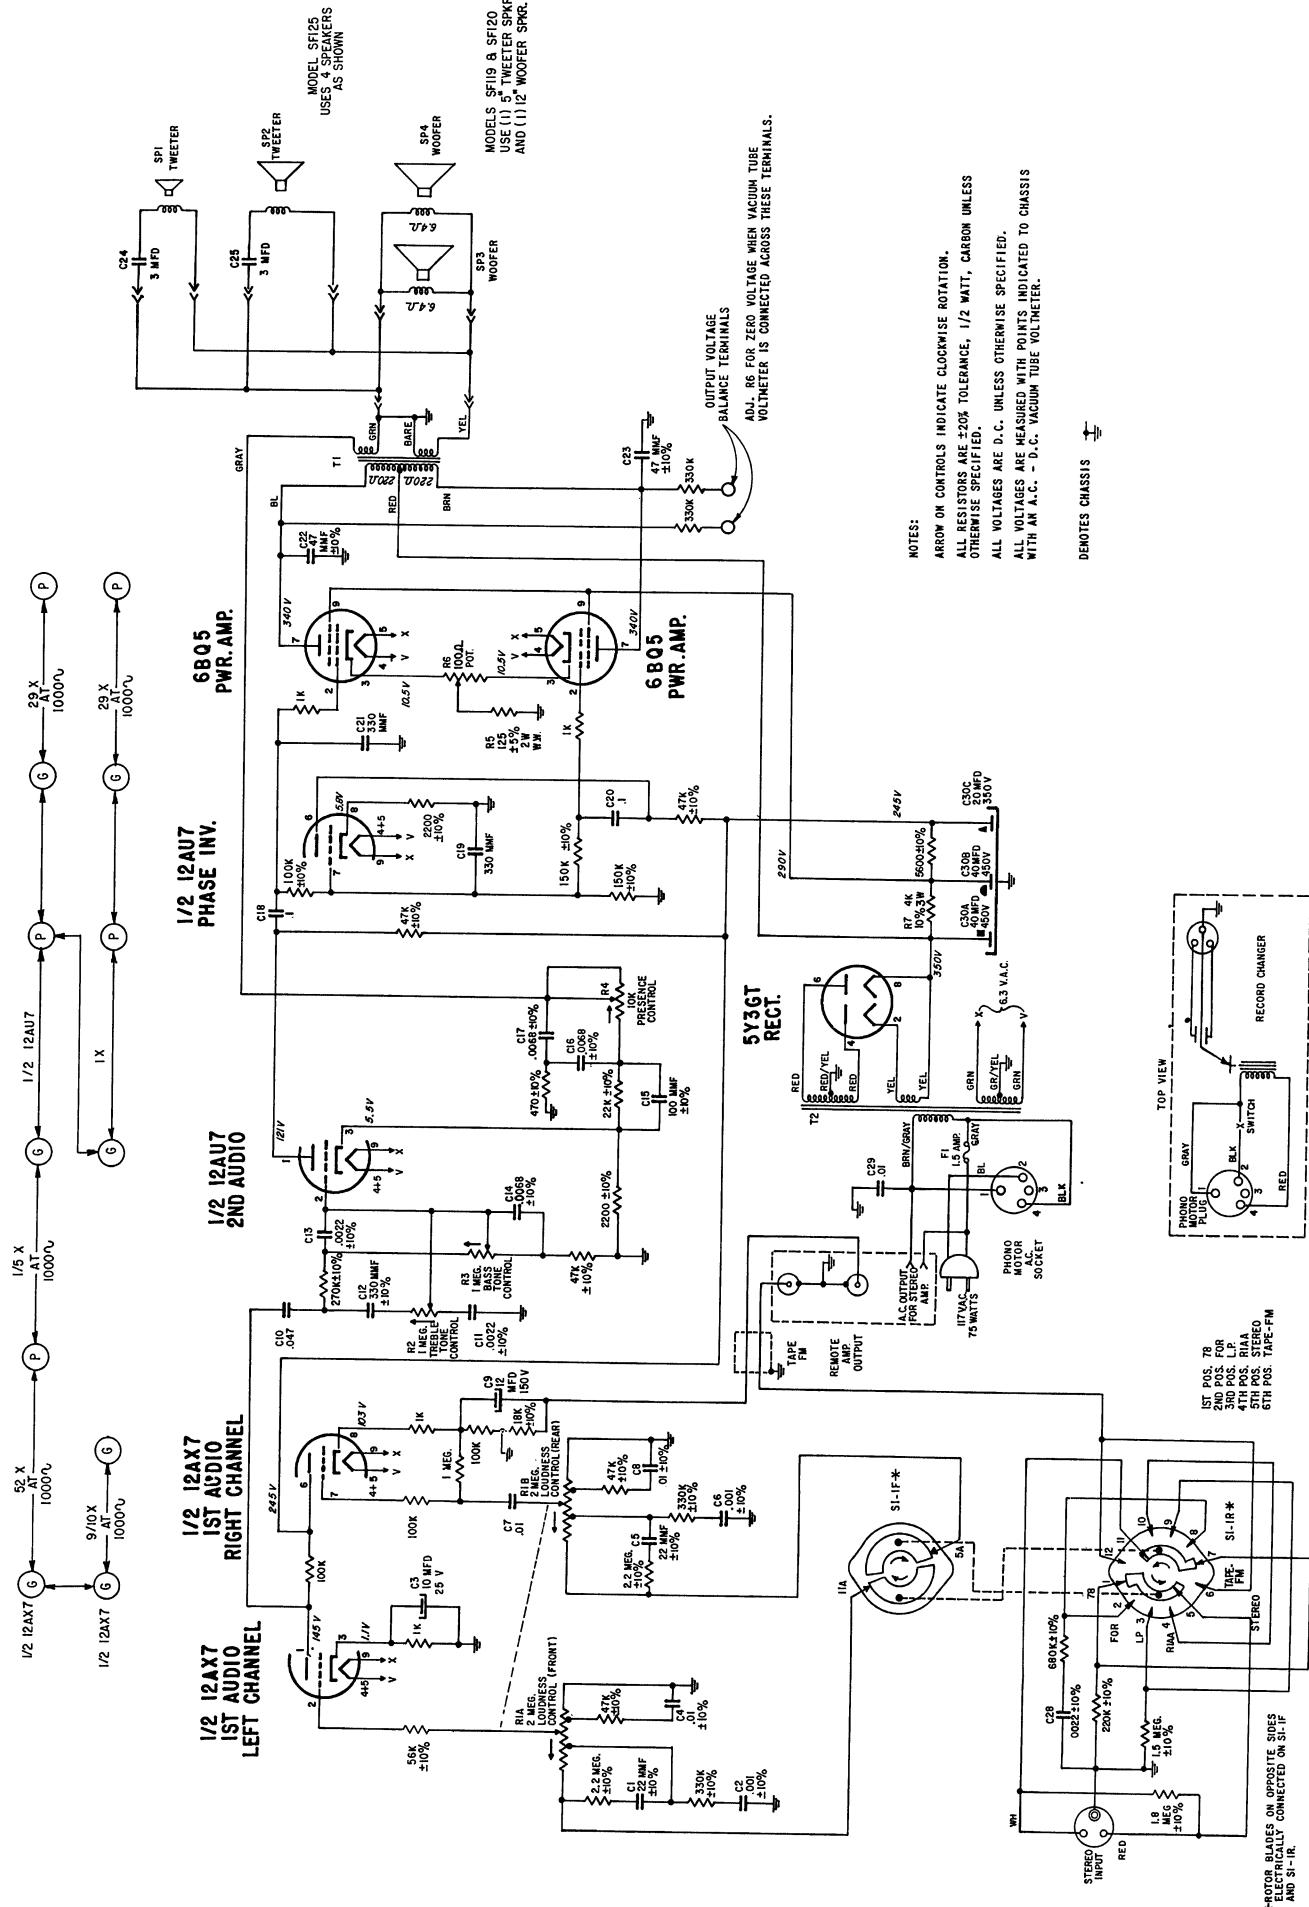


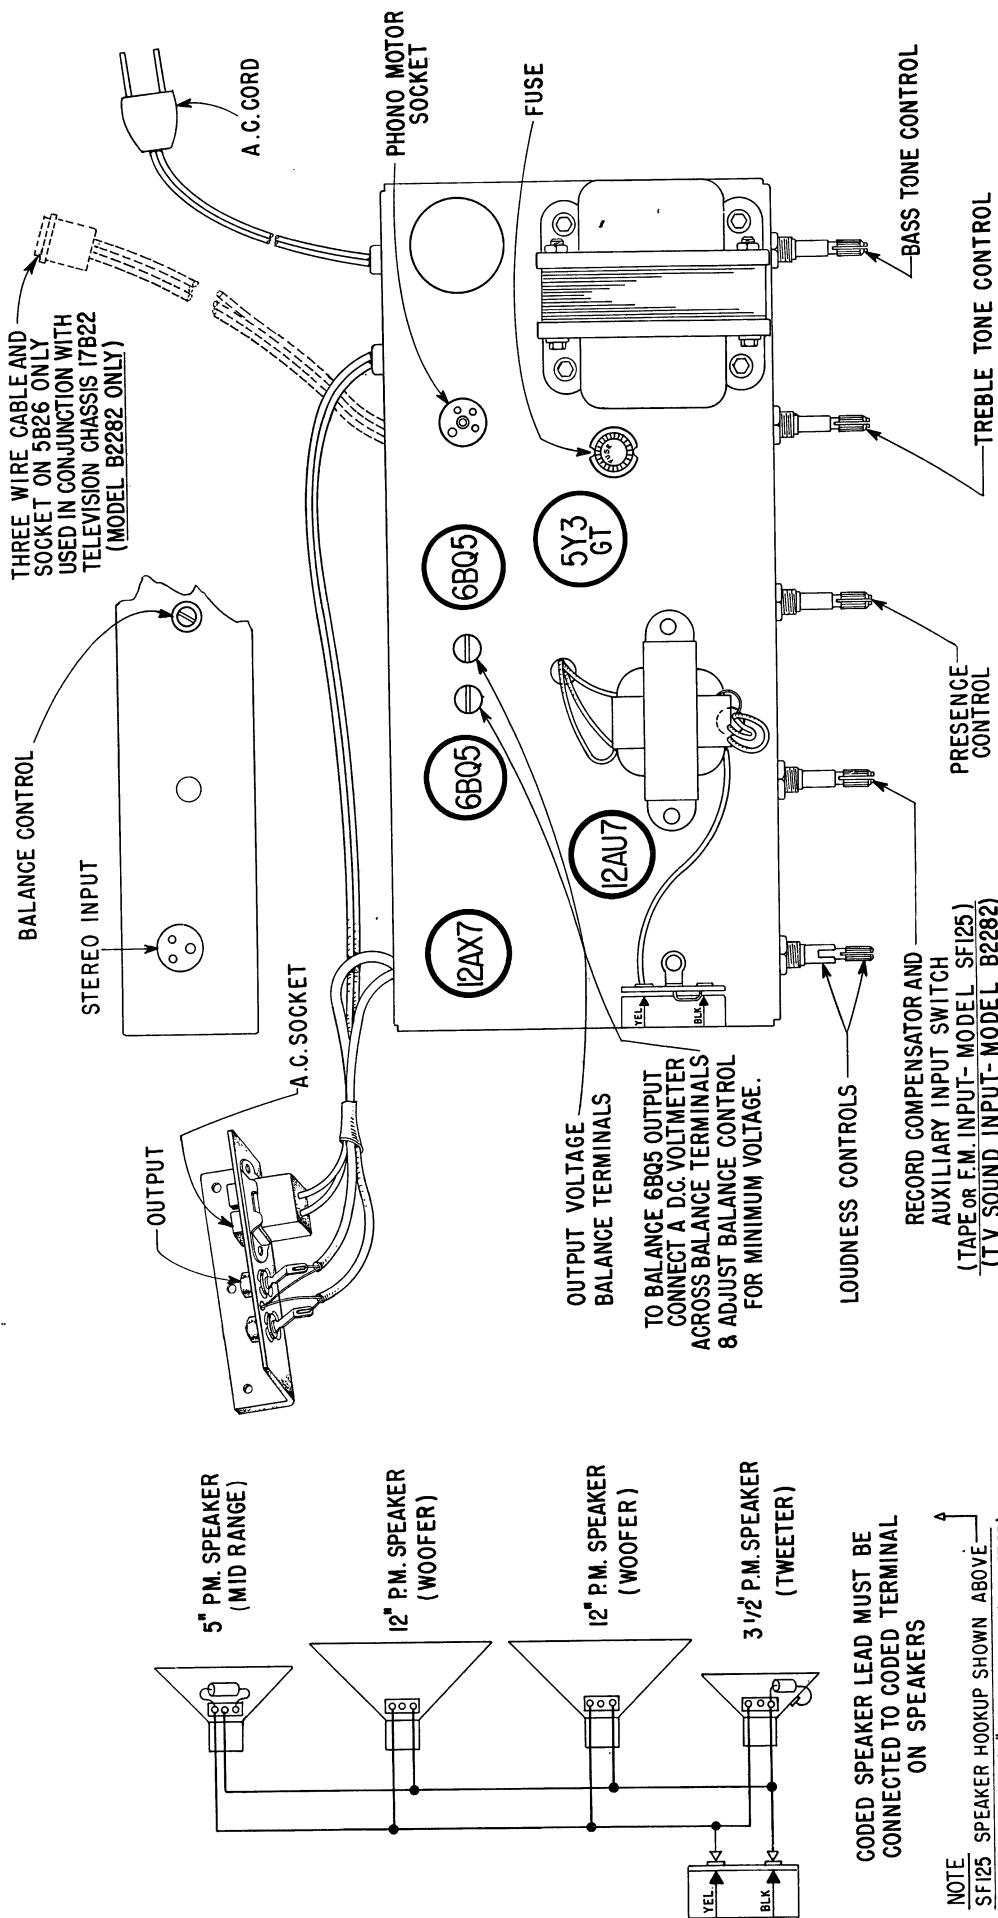


5B23 Chassis For Model SFD122

ALIGNMENT PROCEDURE FOR CHASSIS 4B22Z

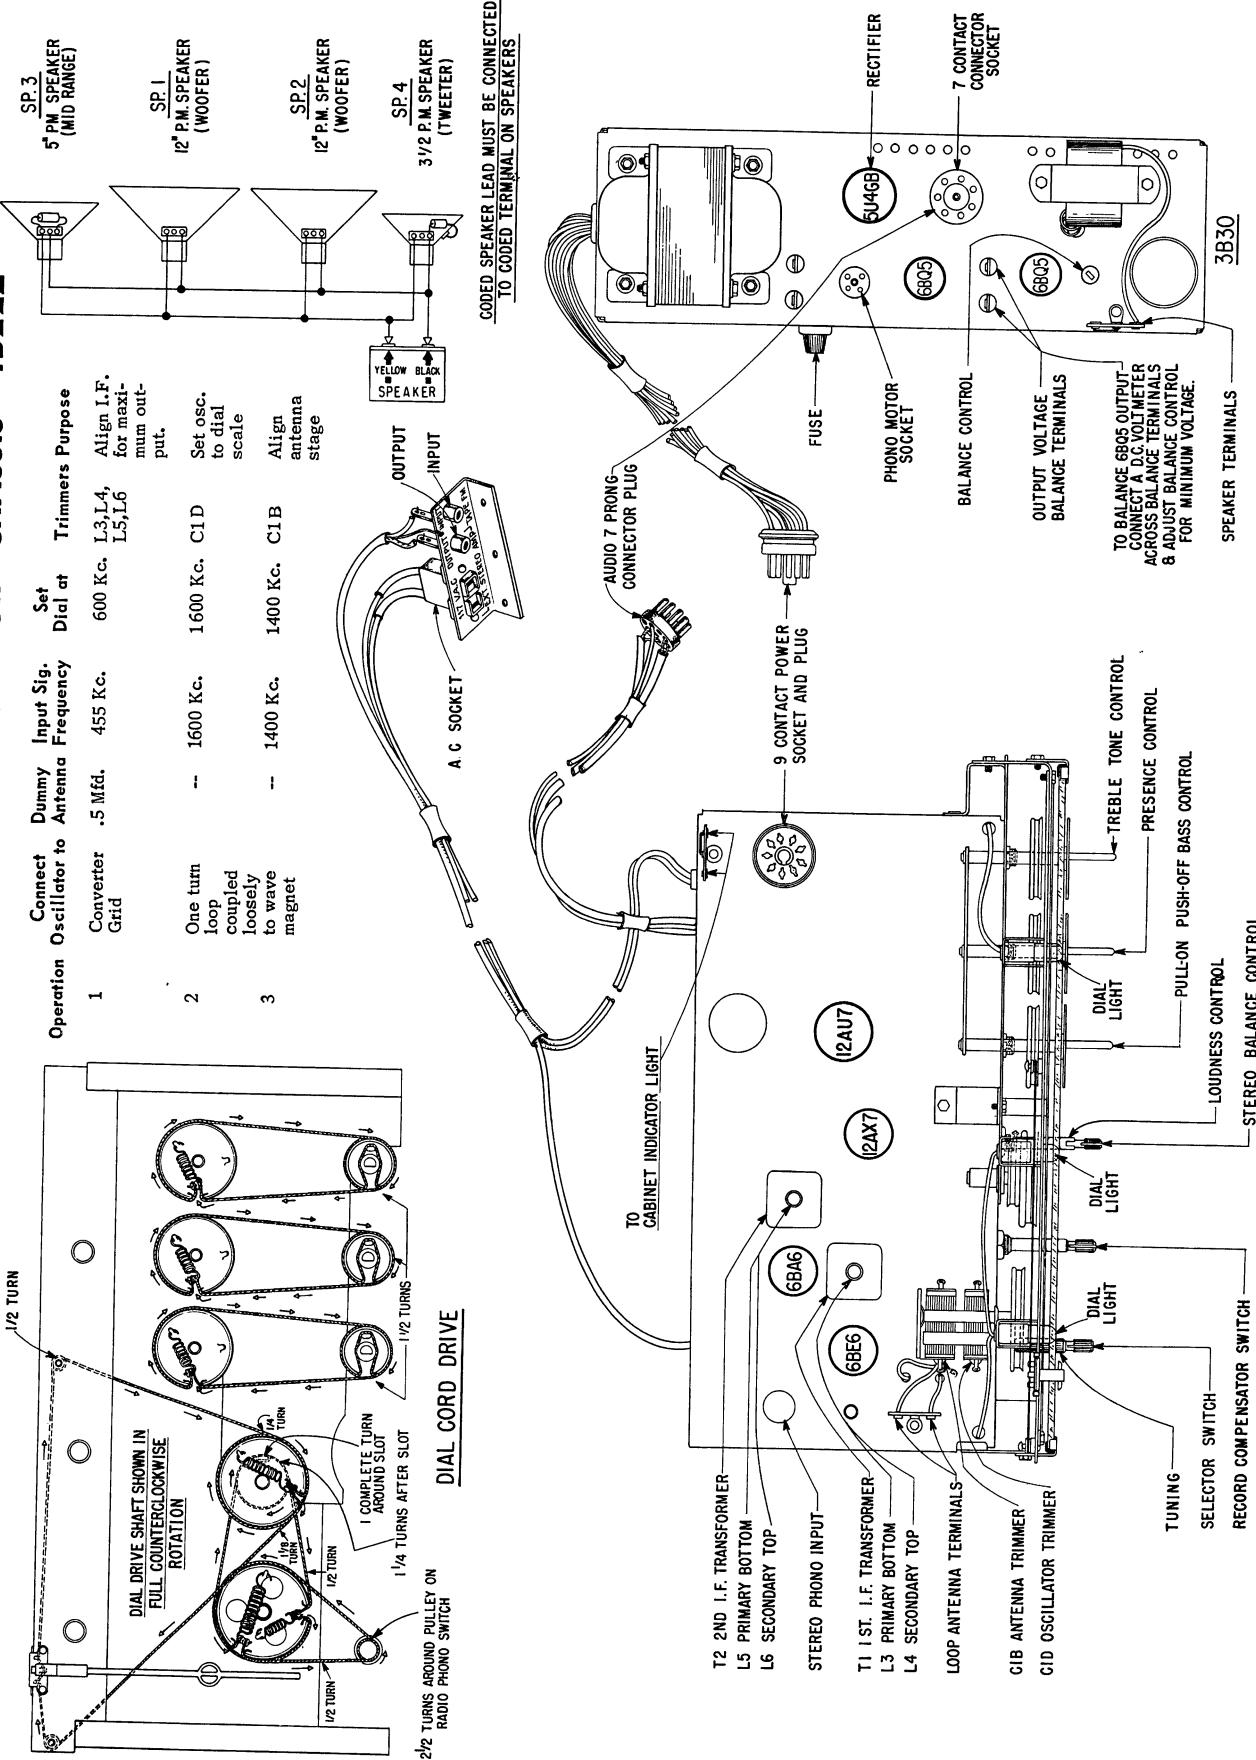


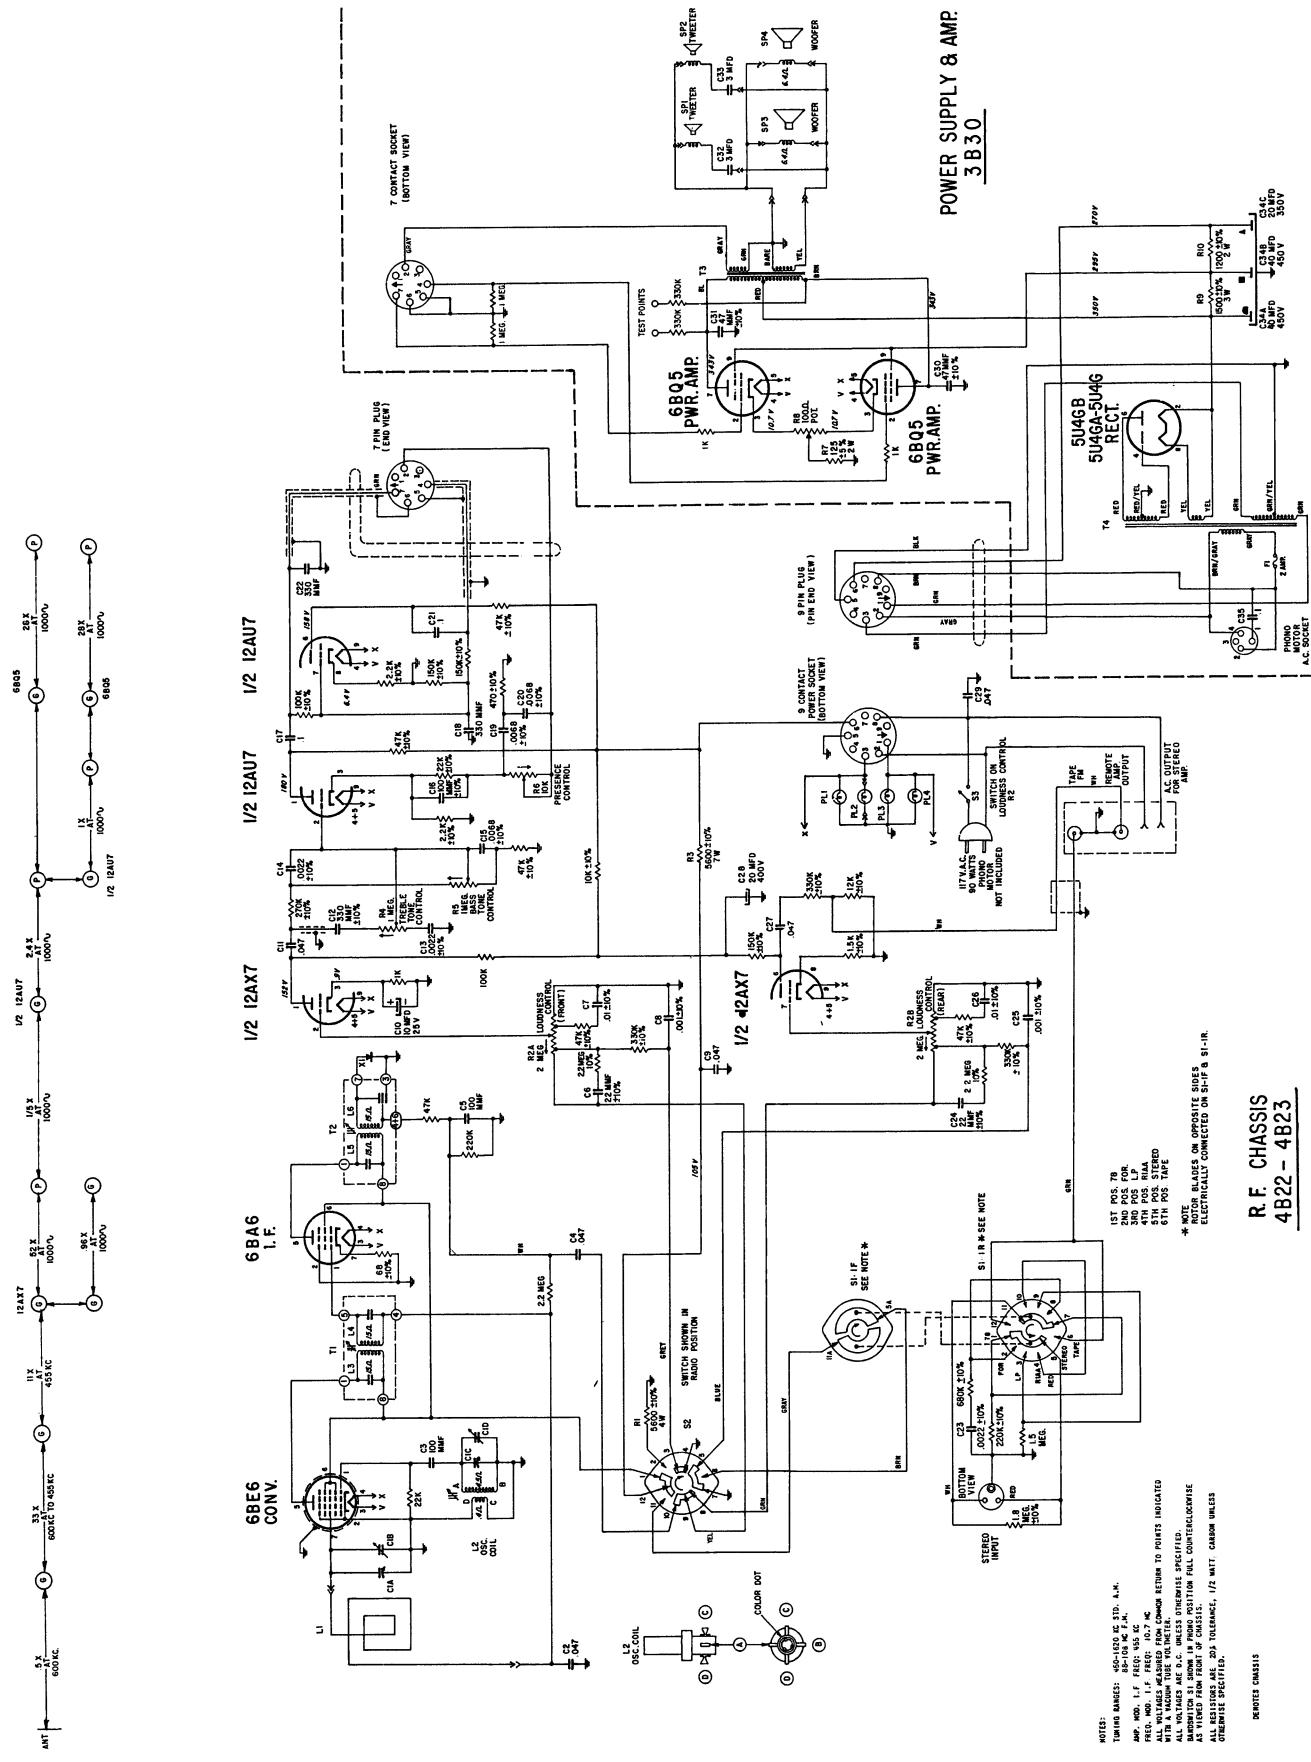

AB227-3B30 Schematic For Model SE17A

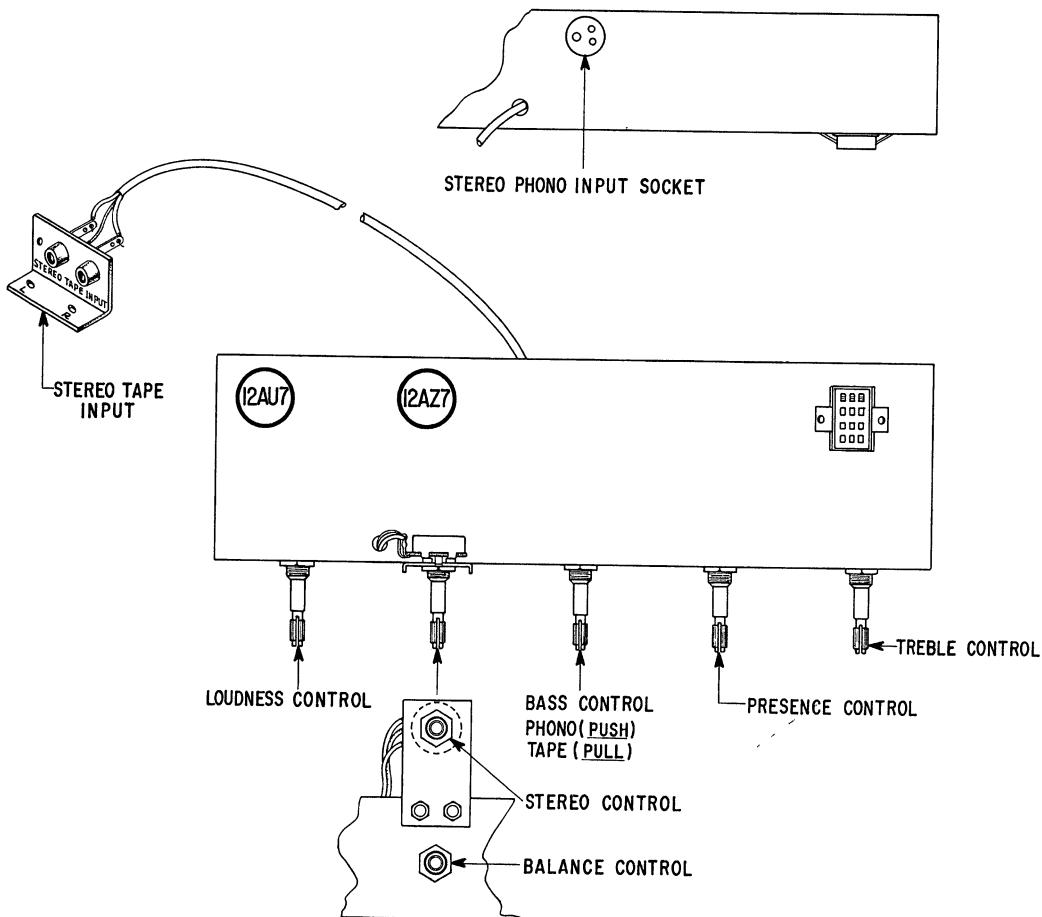


2D30 Chassis For Models SFD220, SFD2525

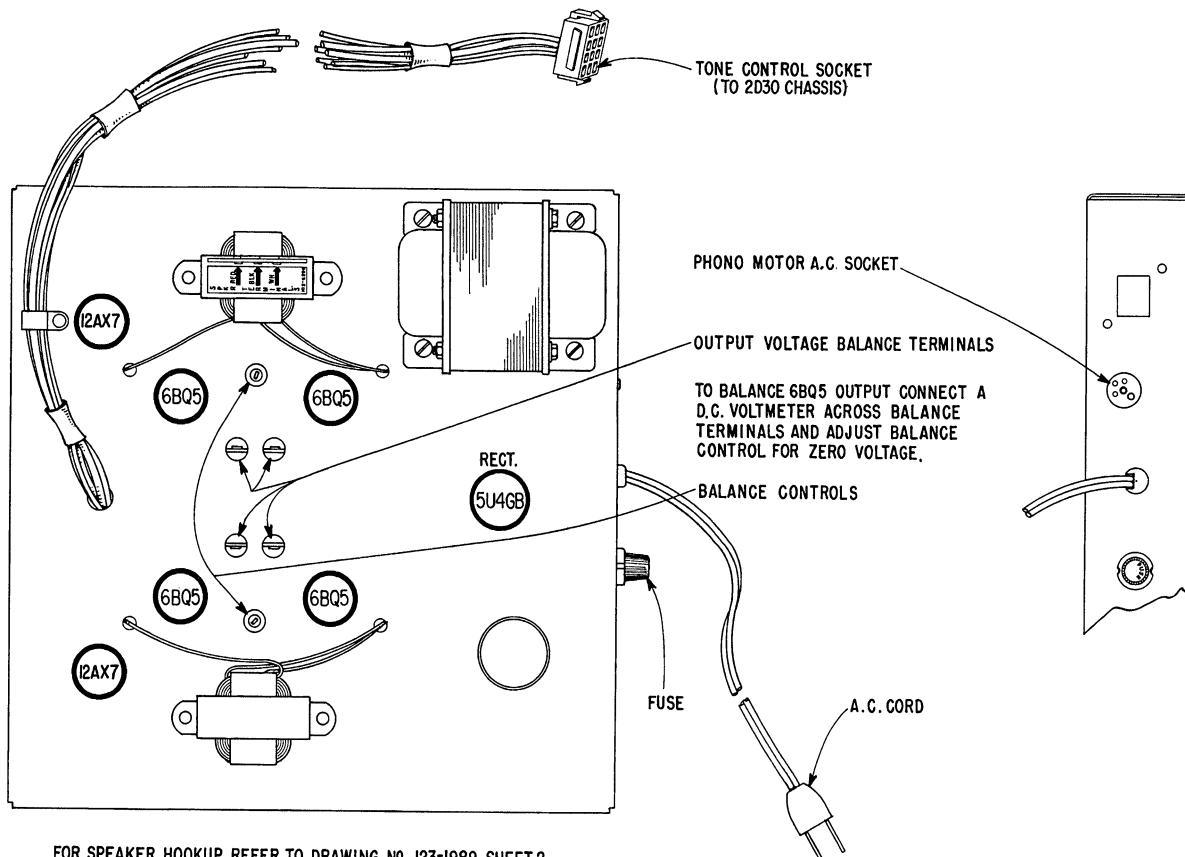


FOR SPEAKER HOOKUP REFER TO DRAWING NO 123-1989 SHEET 2

7D30 Chassis For Models SFD220, SFD2515

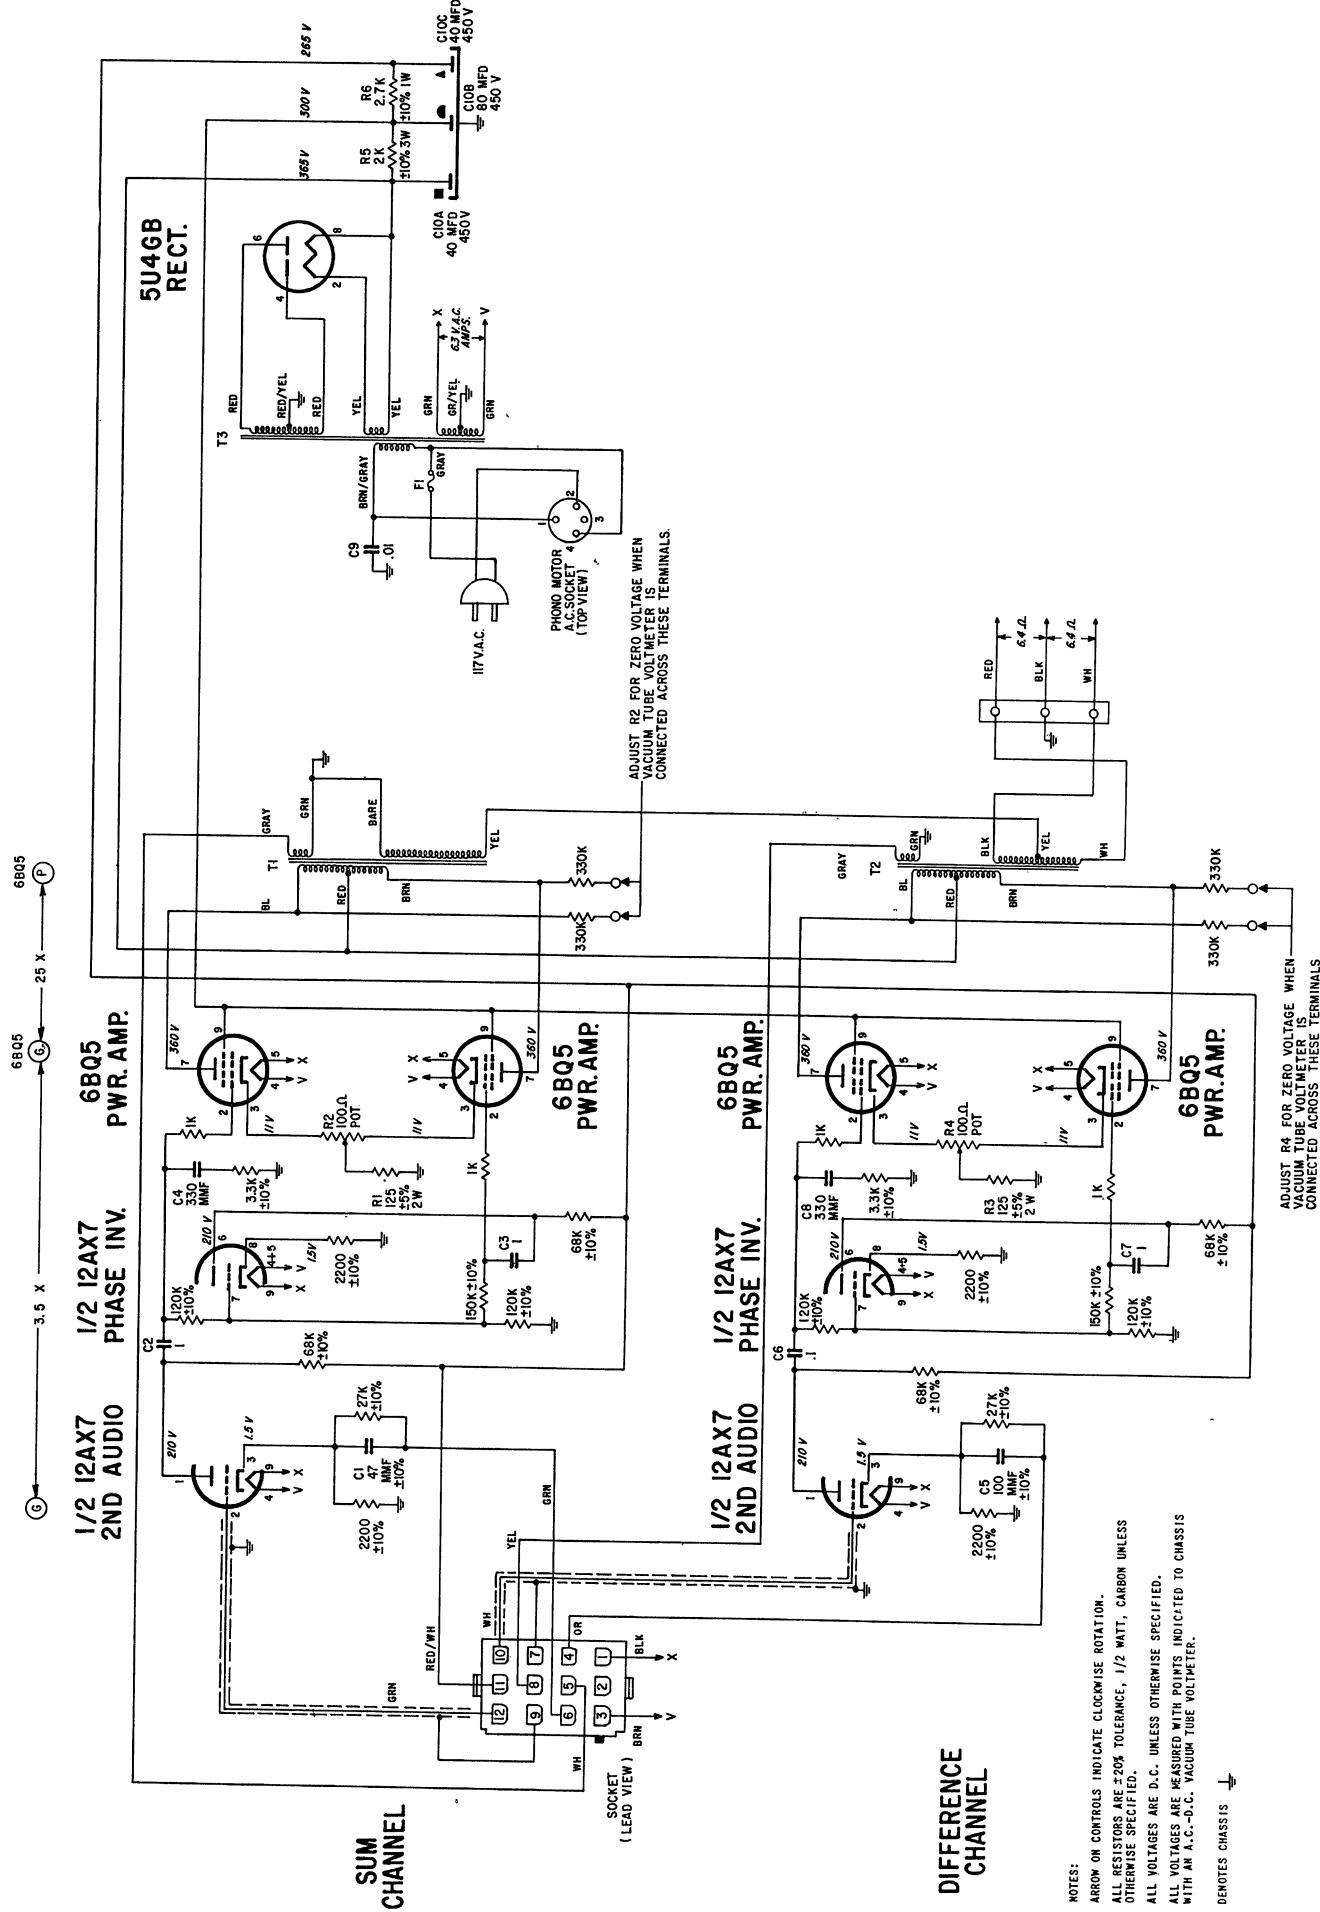


**RADIAL SPEAKER SCHEMATIC
USED WITH MODELS SFD220, SFD2515**

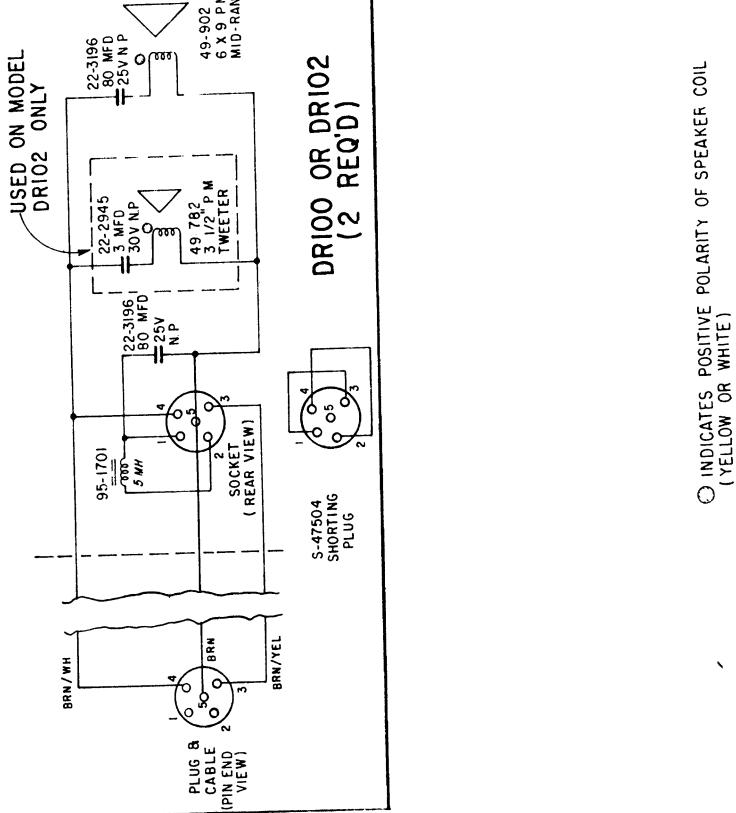

**USED WITH MODEL
SFD2515**


**USED WITH MODEL
SRD20**

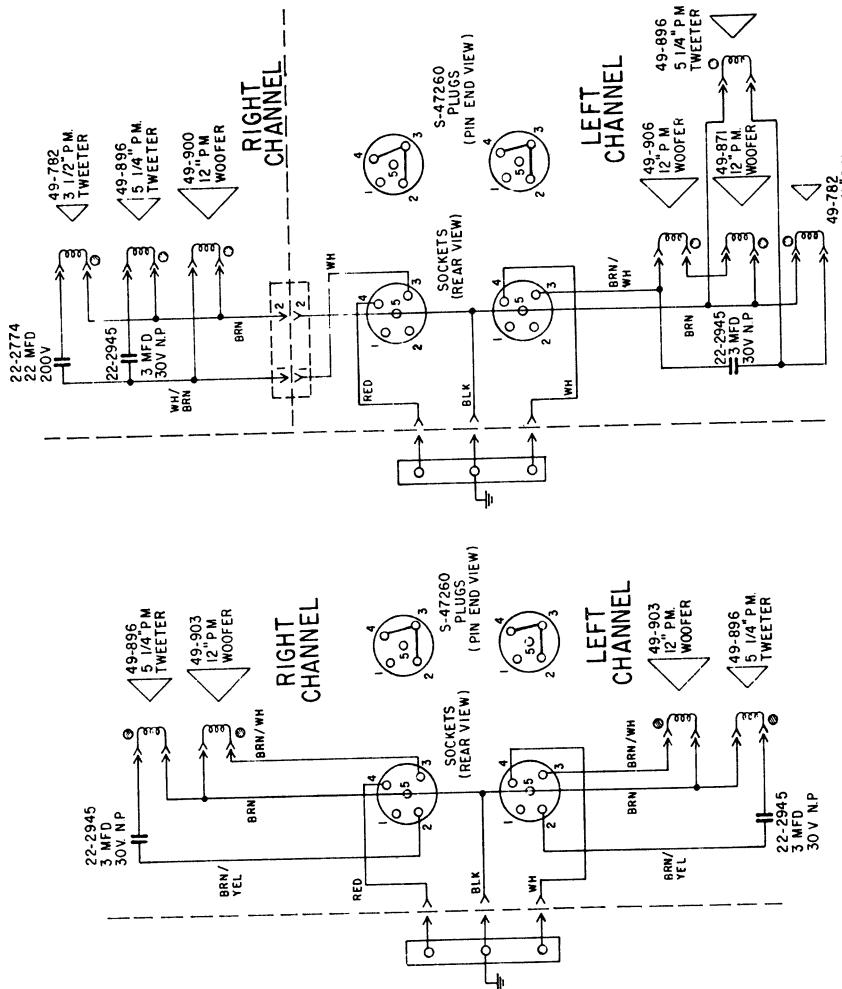


**USED WITH MODEL
SFD220**



7D30 Speaker Systems For Models SFD220, SFD2515

ALIGNMENT PROCEDURE FOR CHASSIS 9D26

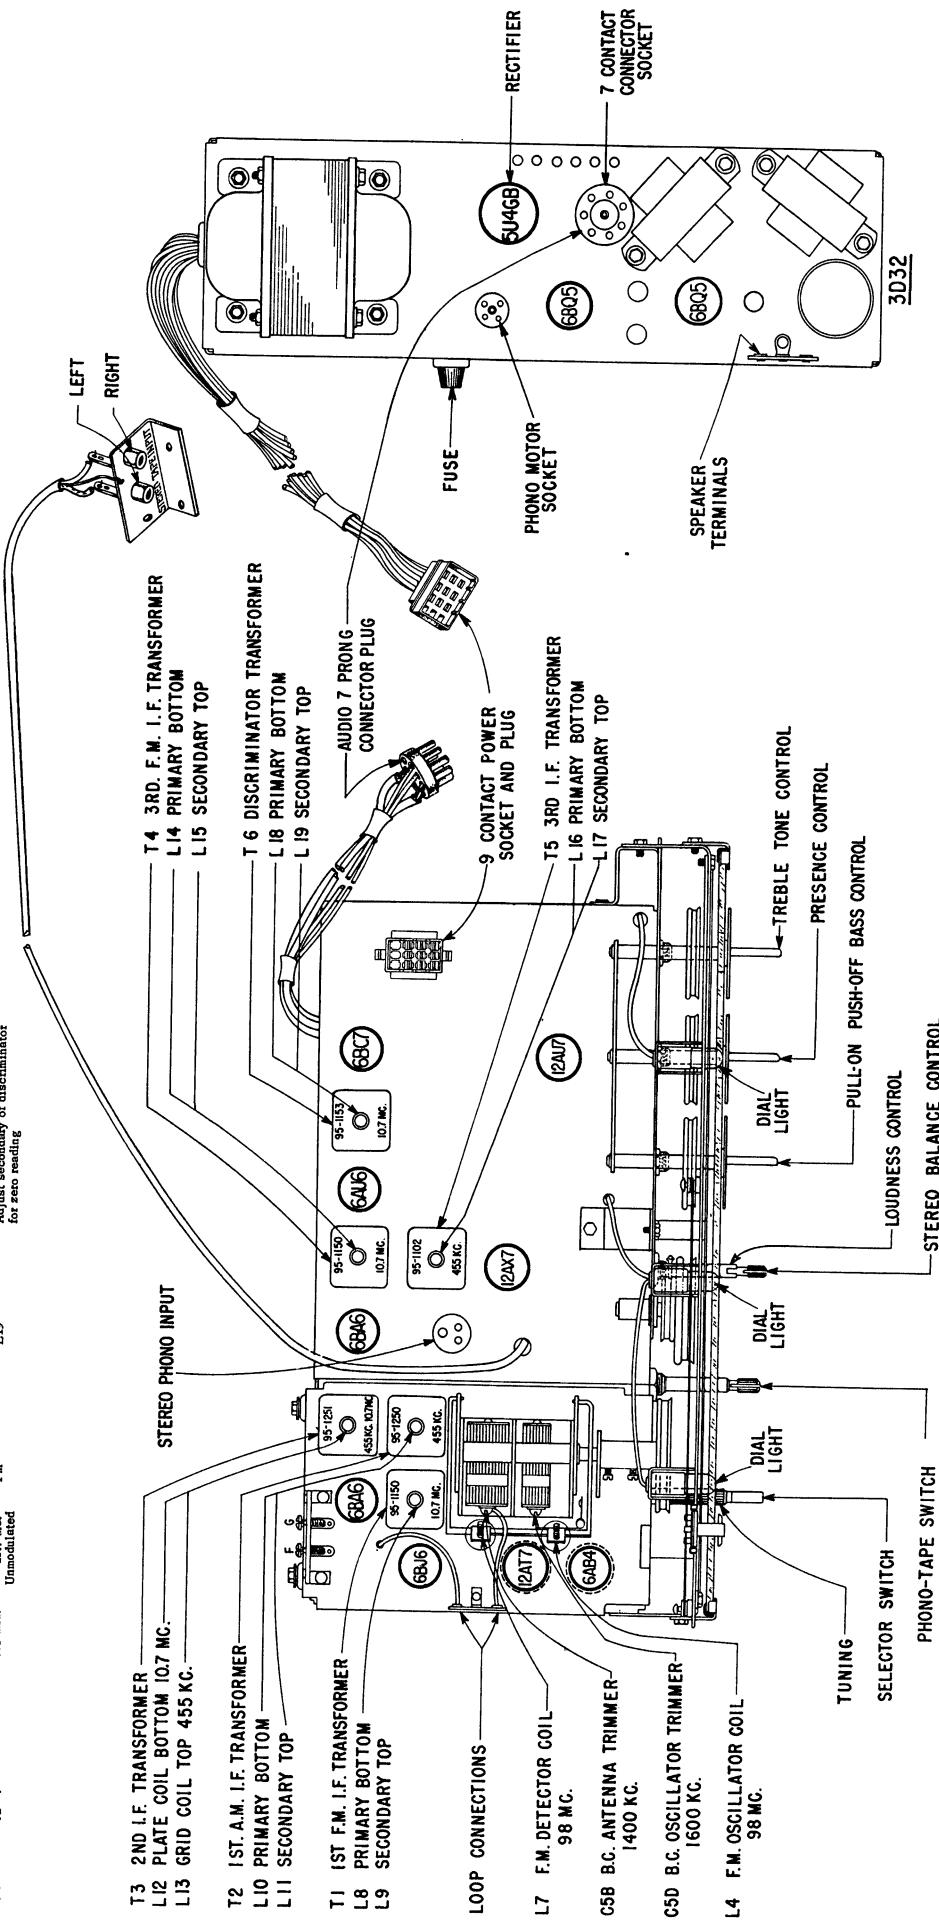

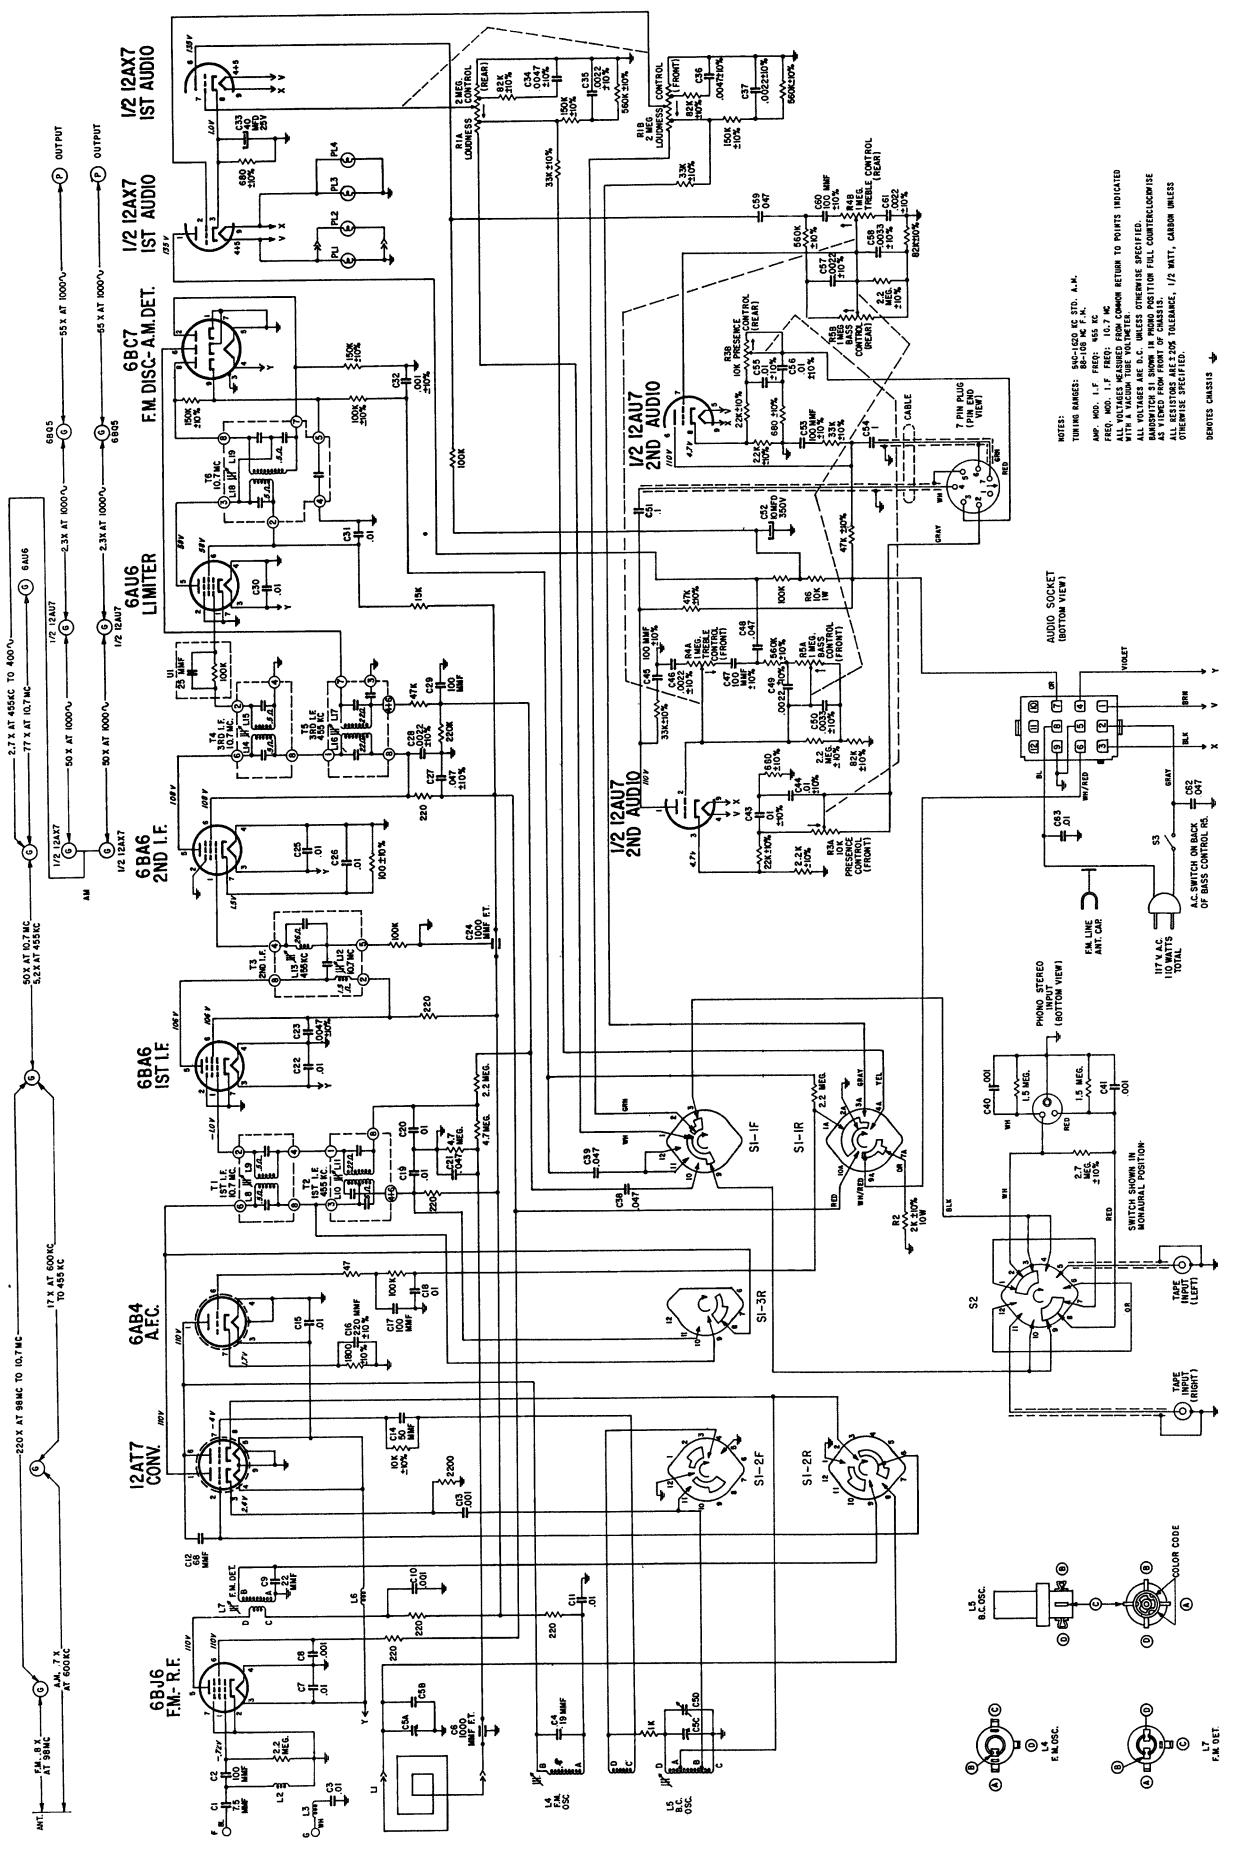

9D26 Schematic Models SFD280, SFD2530, SFD2535

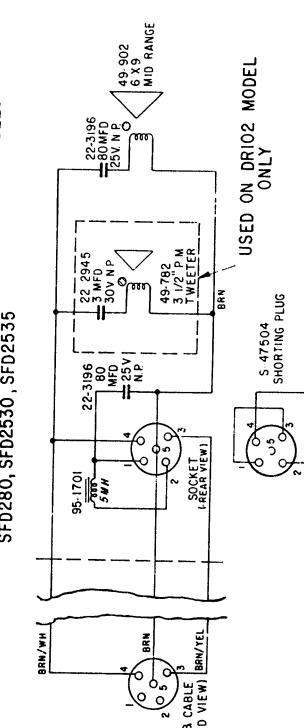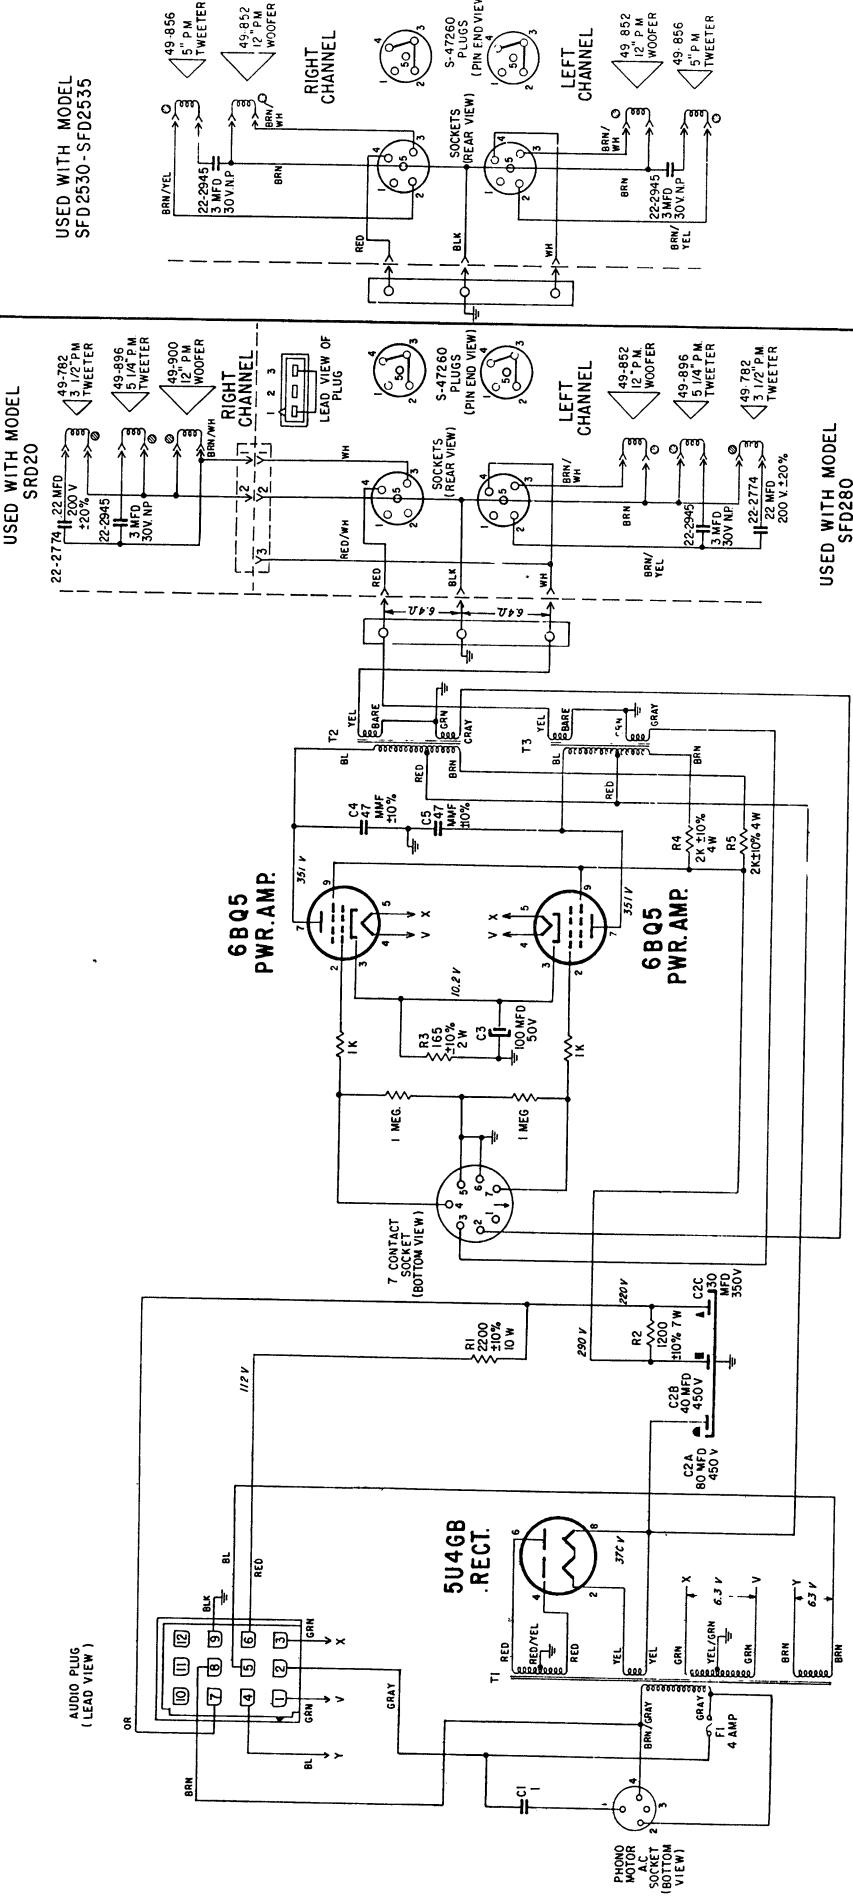


3D32 Schematic For Models SFD280, SFD2530, SFD2535

- © INDICATES POSITIVE POLARITY OF SPEAKER COIL
(YELLOW OR WHITE)


NOTES:

- ALL RESISTORS ARE $\pm 20\%$ TOLERANCE, 1/2 MATT, CARBON UNLESS OTHERWISE SPECIFIED.
- ALL VOLTAGES ARE D.C. UNLESS OTHERWISE SPECIFIED.
- ALL VOLTAGES MEASURED AT POINTS INDICATED TO CHASSIS WITH A.C.-D.C. VACUUM-TUBE VOLTMETER.

DEFINITIONS

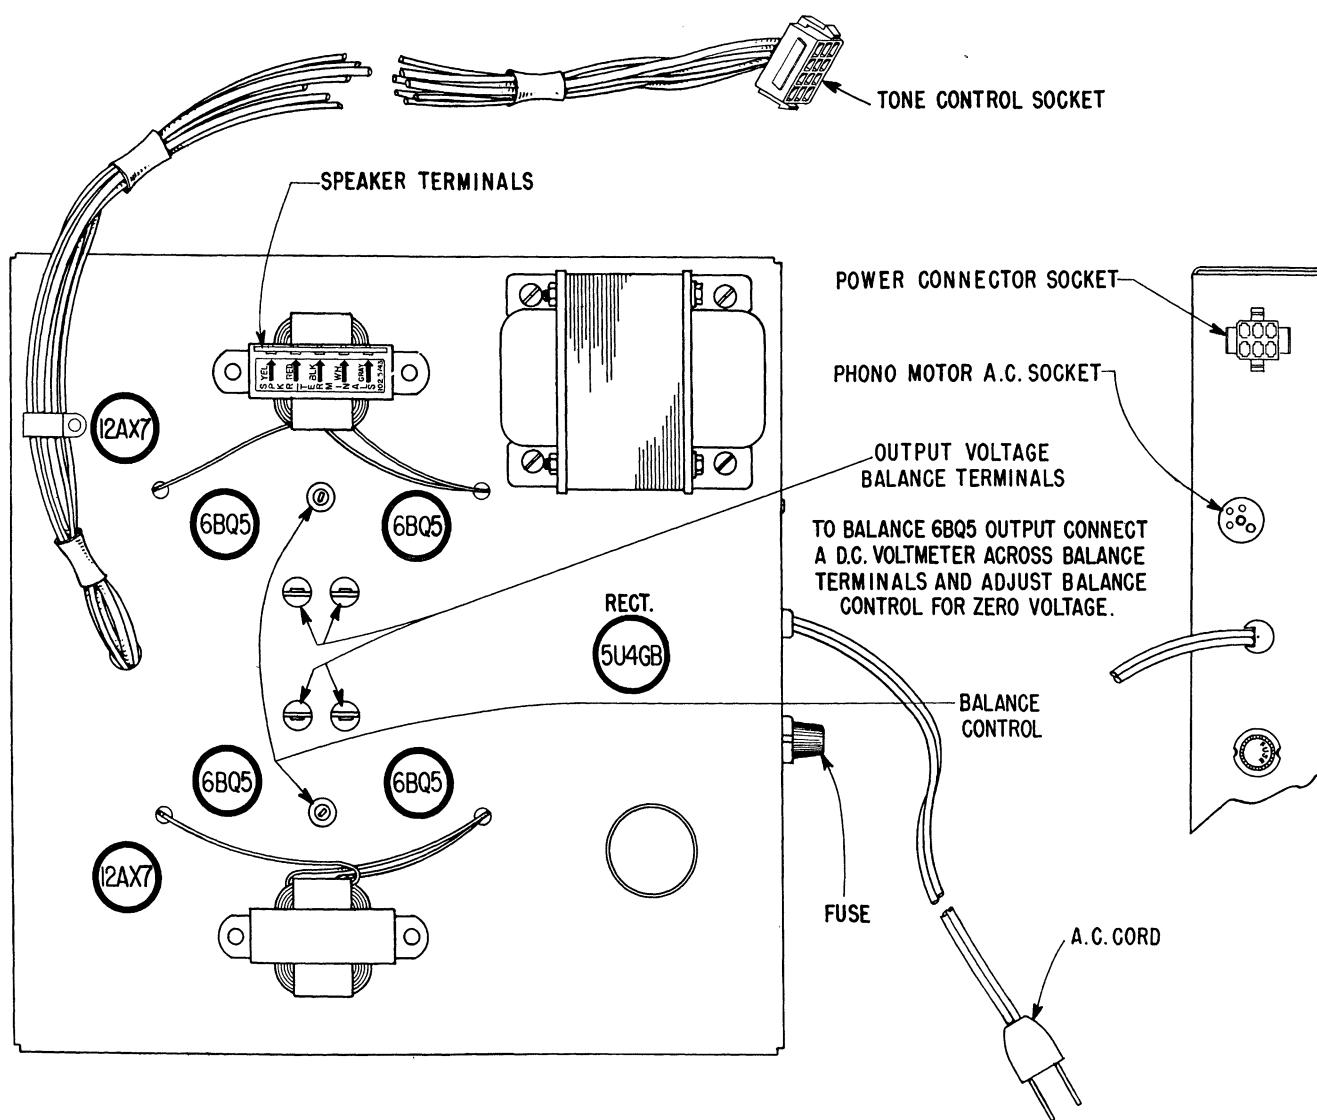


7D31 Chassis For Models SFD283, SFD285, SFD288, SFD290, SFD2560,
SFD2565, SFD2570, SFD2575, SFD2580

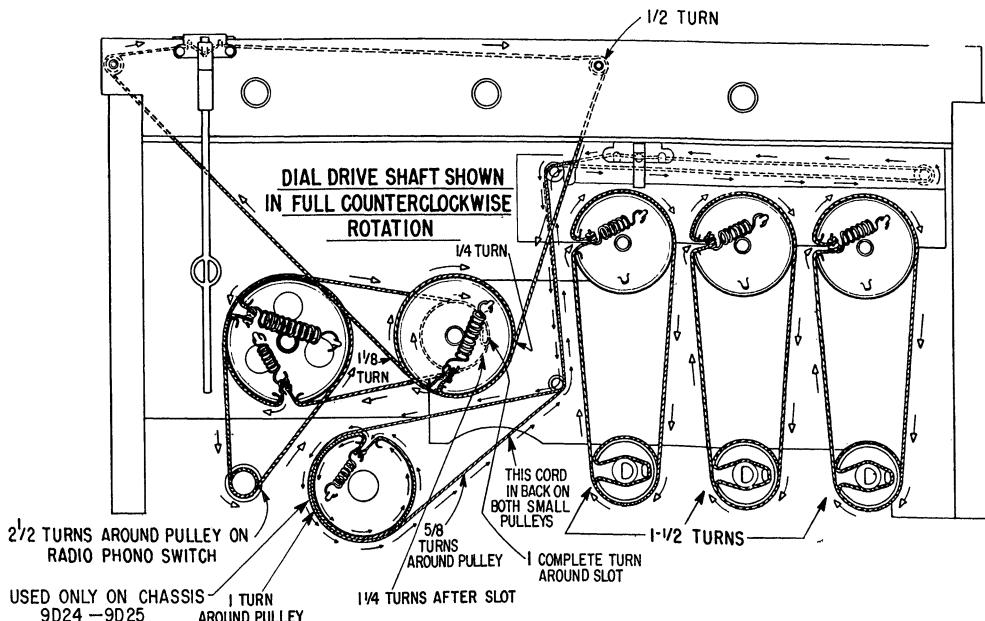


9D24-9D25-9D26 Dial Cord Drive


ALIGNMENT PROCEDURE FOR CHASSIS 9D24-9D25

OPERATION	CONNECT OSCILLATOR TO	DUNHAY ANTENNA	INPUT SIGNAL FREQUENCY	BAND SET DIAL TO	ADJ. TRIMMERS	PURPOSE
1	Pin 7 12AT7 mixer	.05 mfd.	455 Kc. Modulated	AM 600 Kc.	L17,16,13,11,10	Align IF channel for max. output
2	Two turns loosely coupled to wavemagnet	.05 mfd.	1600 Kc. Modulated	AM 1600 Kc.	C8E	Set oscillator to dial scale
3	Two turns loosely coupled to wavemagnet	.05 mfd.	1400 Kc. Modulated	AM 1400 Kc.	C8D,C8B	Align detector and antenna stage
4	IMPORTANT: Before attempting to align the FM portion of this receiver the bandswitch should be turned to "FM".					
5(a)	Pin 1 (grid) on 6AU6 limiter	.05 mfd.	10.7 Mc. Unmodulated	FM 1.8		Align primary of discriminator for maximum reading.
6(b)	Pin 1 (grid) on 6AU6 limiter	.05 mfd.	10.7 Mc. Unmodulated	FM 1.9		Adjust secondary of discriminator for zero reading.
7(c)	Pin 1 (grid) on 6BA6 2nd IF	.05 mfd.	10.7 Mc. Unmodulated	FM 1.14,15		Align 3rd IF transformer for maximum reading.
8(c)	Pin 1 (grid) on 6BA6 1st IF	.05 mfd.	10.7 Mc. Unmodulated	FM 1.12		Align 2nd IF transformer for maximum reading.
9(c)	Pin 7 on 12AT7 mixer	.05 mfd.	10.7Mc. Unmodulated	FM 1.6,9		Align 1st IF transformer for maximum reading.
10(c)	REPEAT STEPS 7, 8, & 9.					
11(c)	Antenna post FM (remove line antenna)	270 ohms	98 Mc. Unmodulated	L7 osc. coil slug		Set oscillator to dial scale
12(c)	Antenna post FM (remove line antenna)	270 ohms	98 Mc. Unmodulated	L4 det. coil slug		Align det. stage to max. reading
(d)						

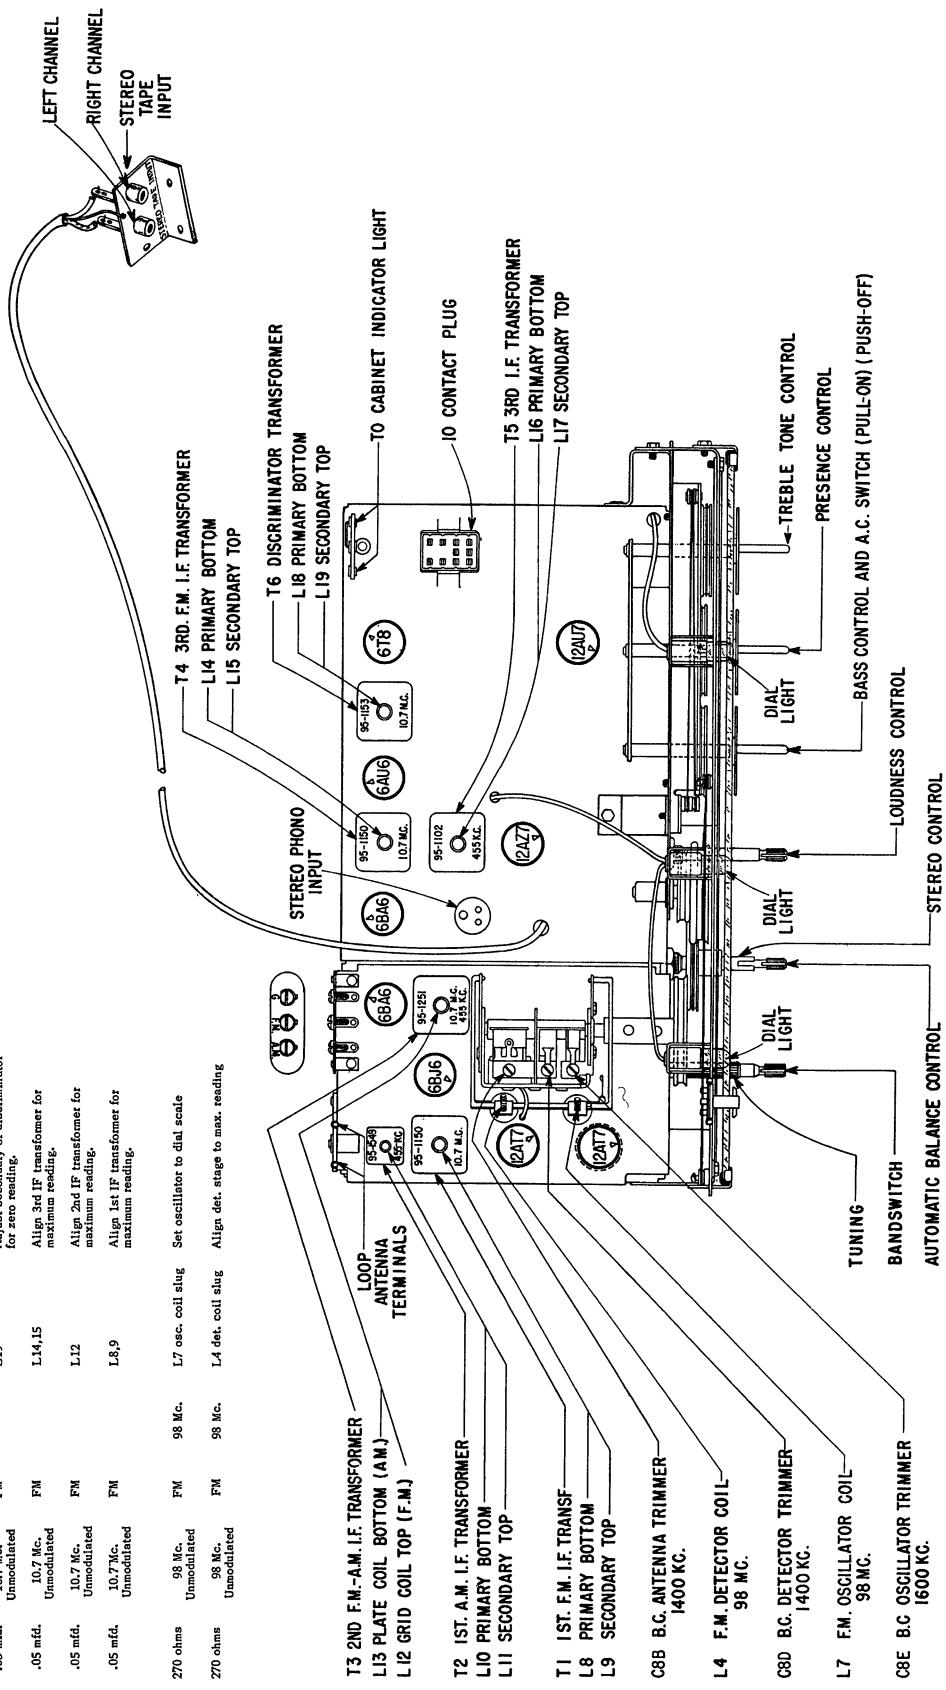


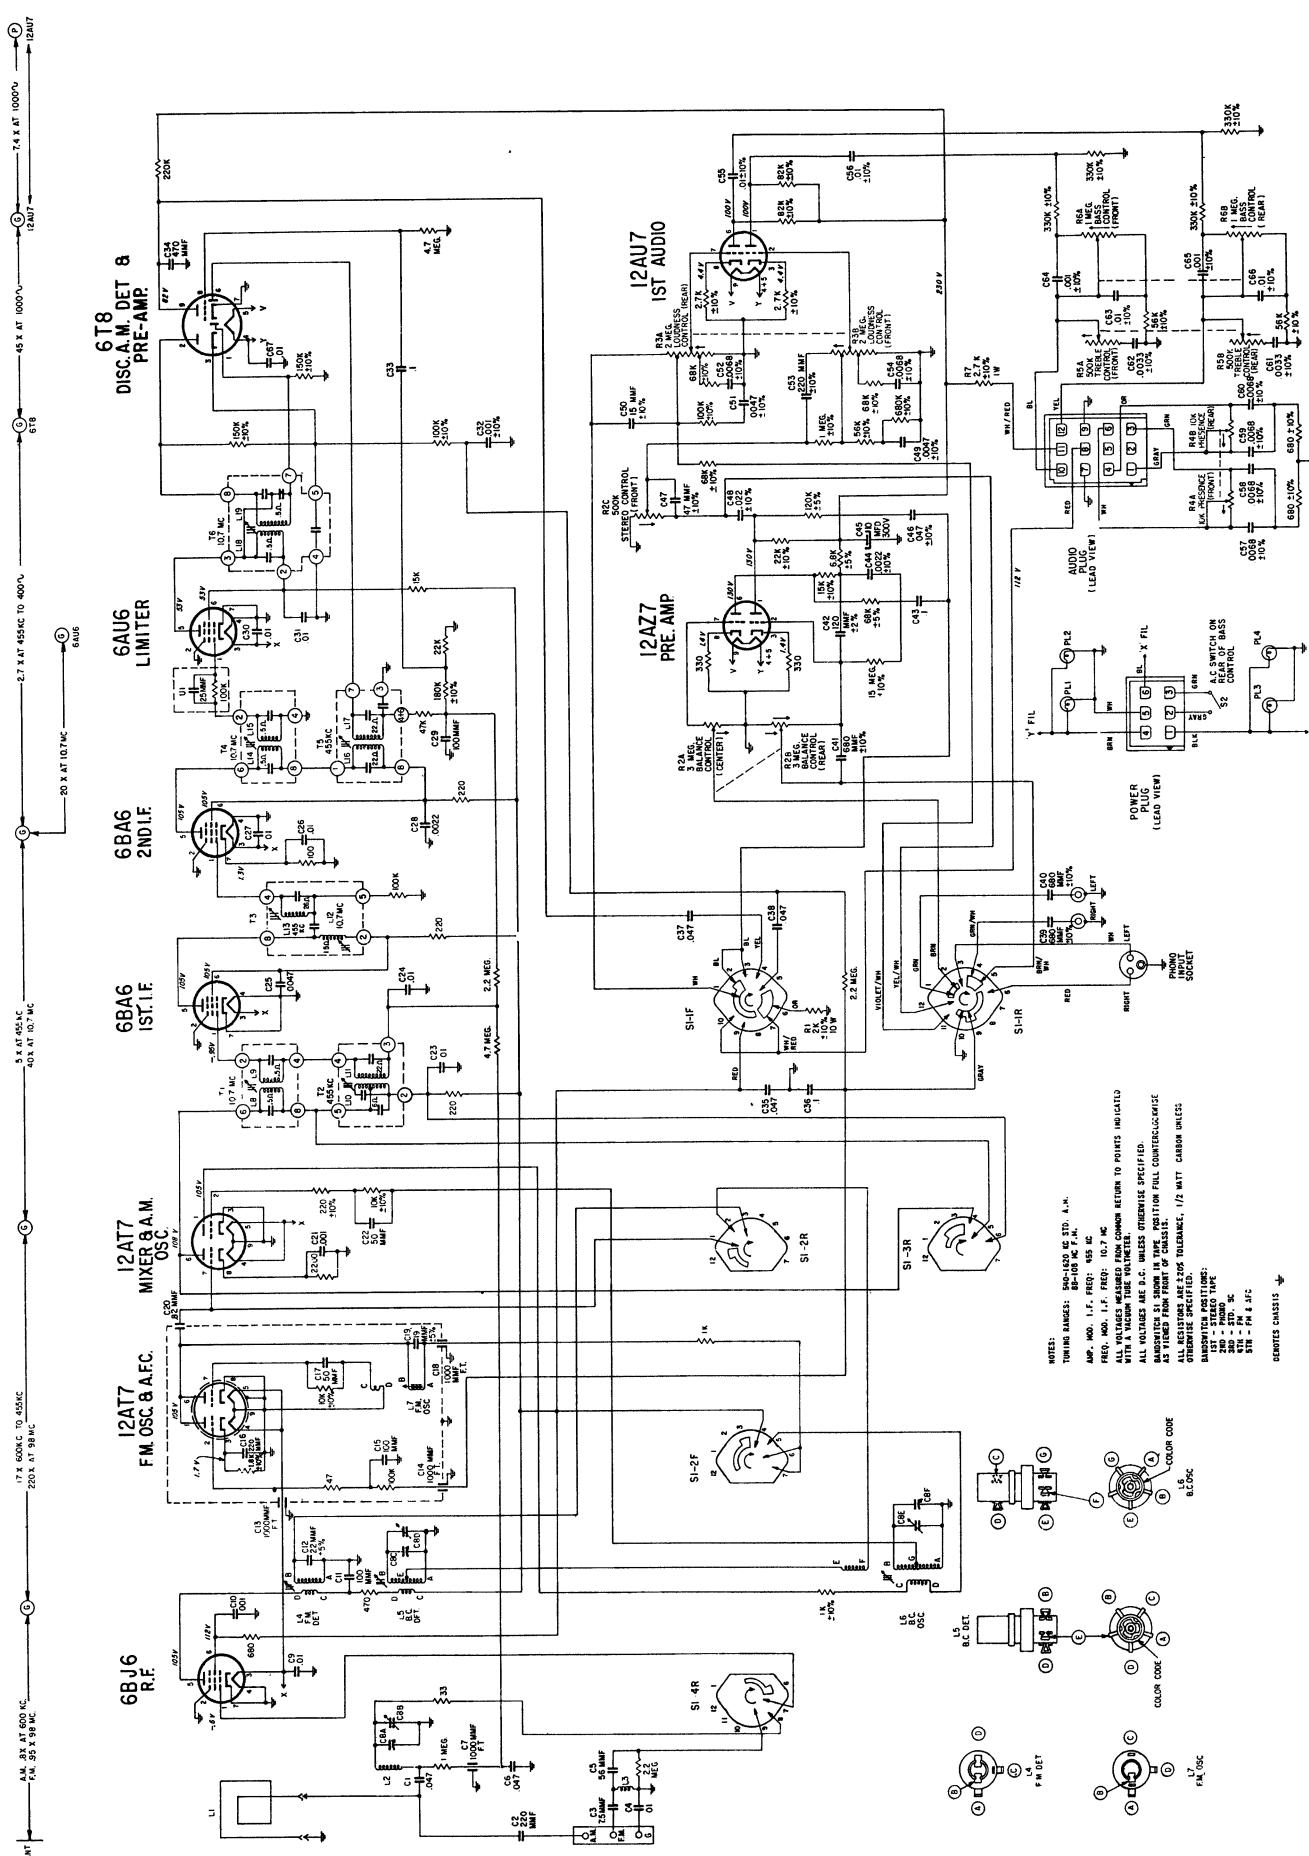



8D21 Schematics For Models SED283 SED285 SED288 SED2560 SED2565

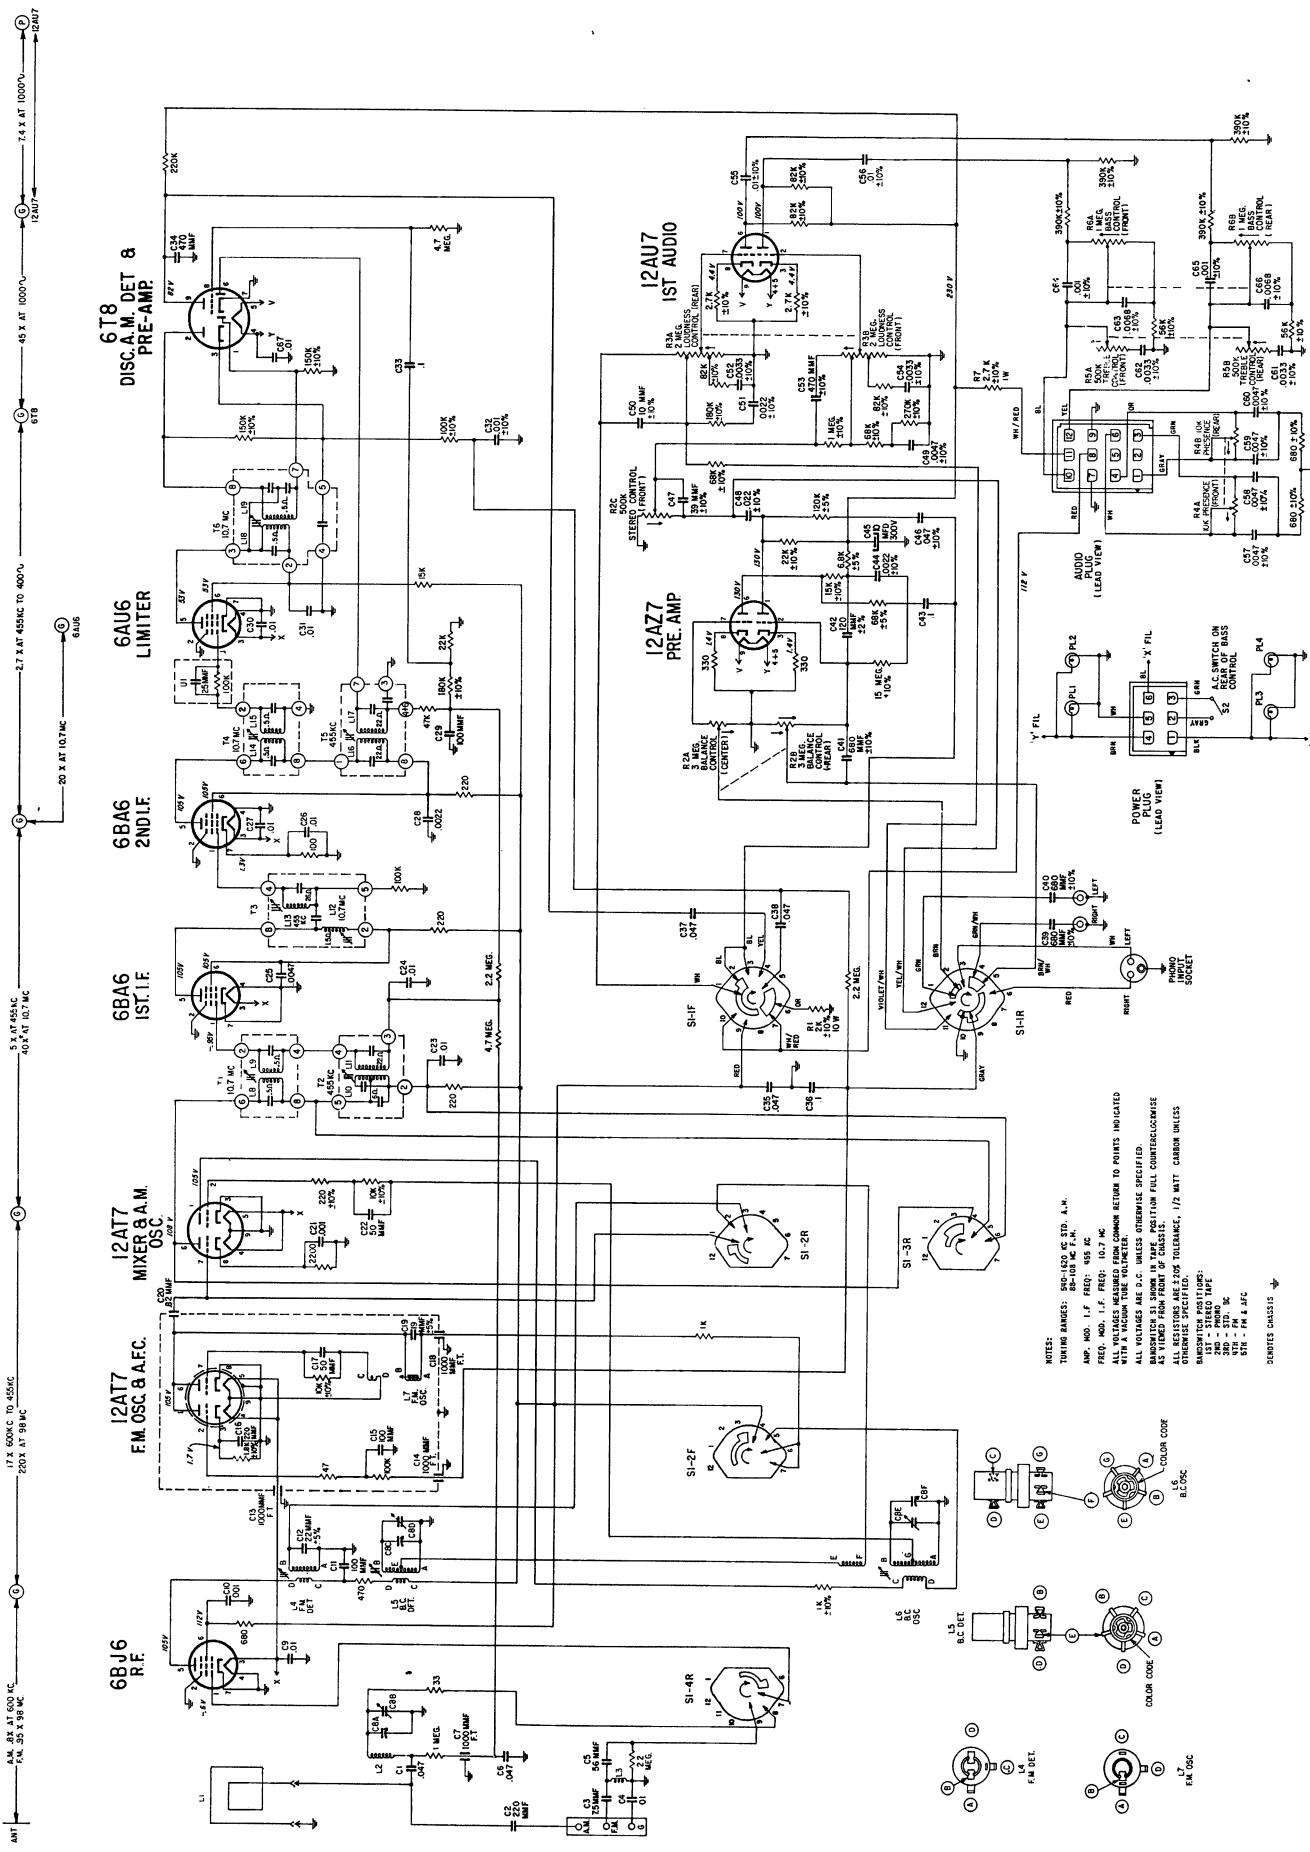

AT 1 WATT
2 x AT 1000V → 6 → 265 x AT 1000V → P OUTPUT

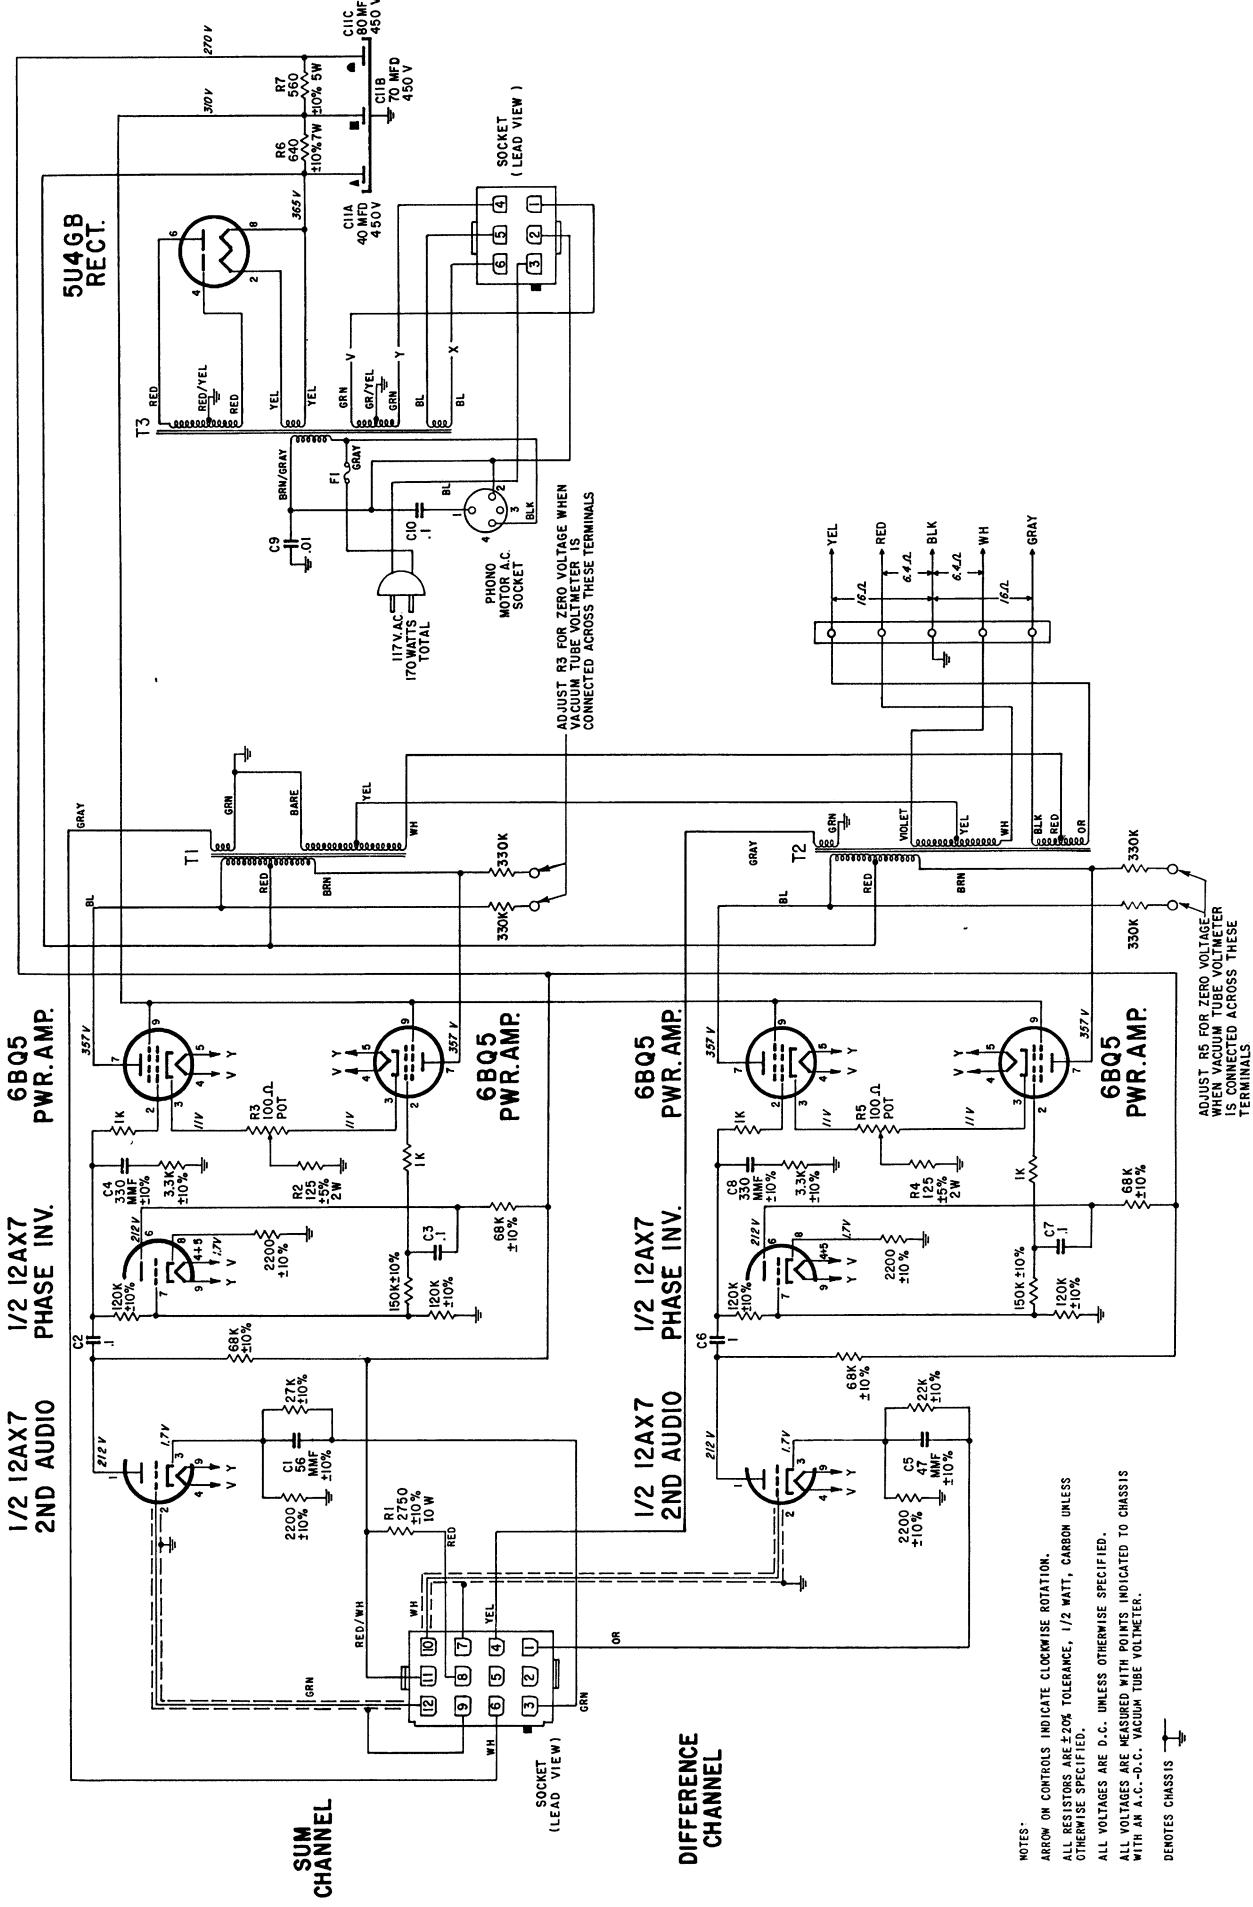


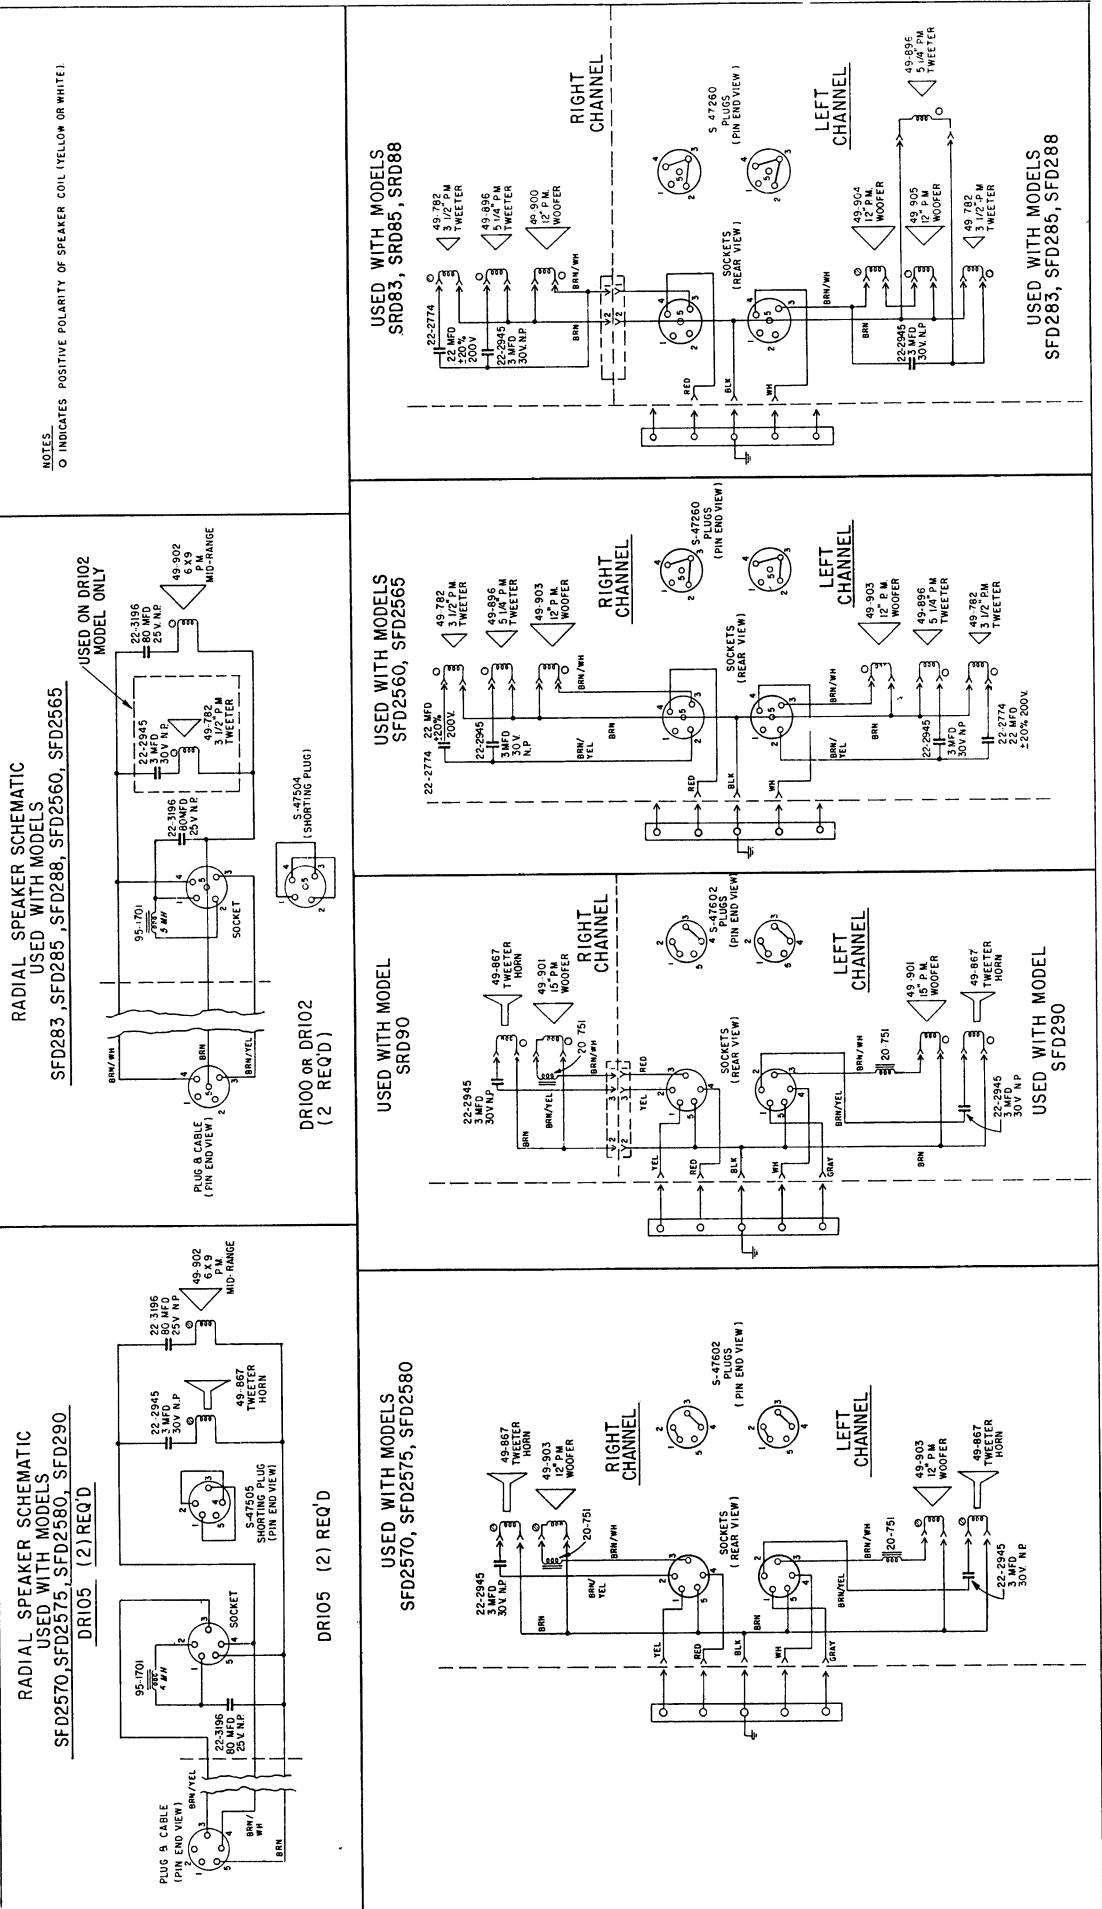

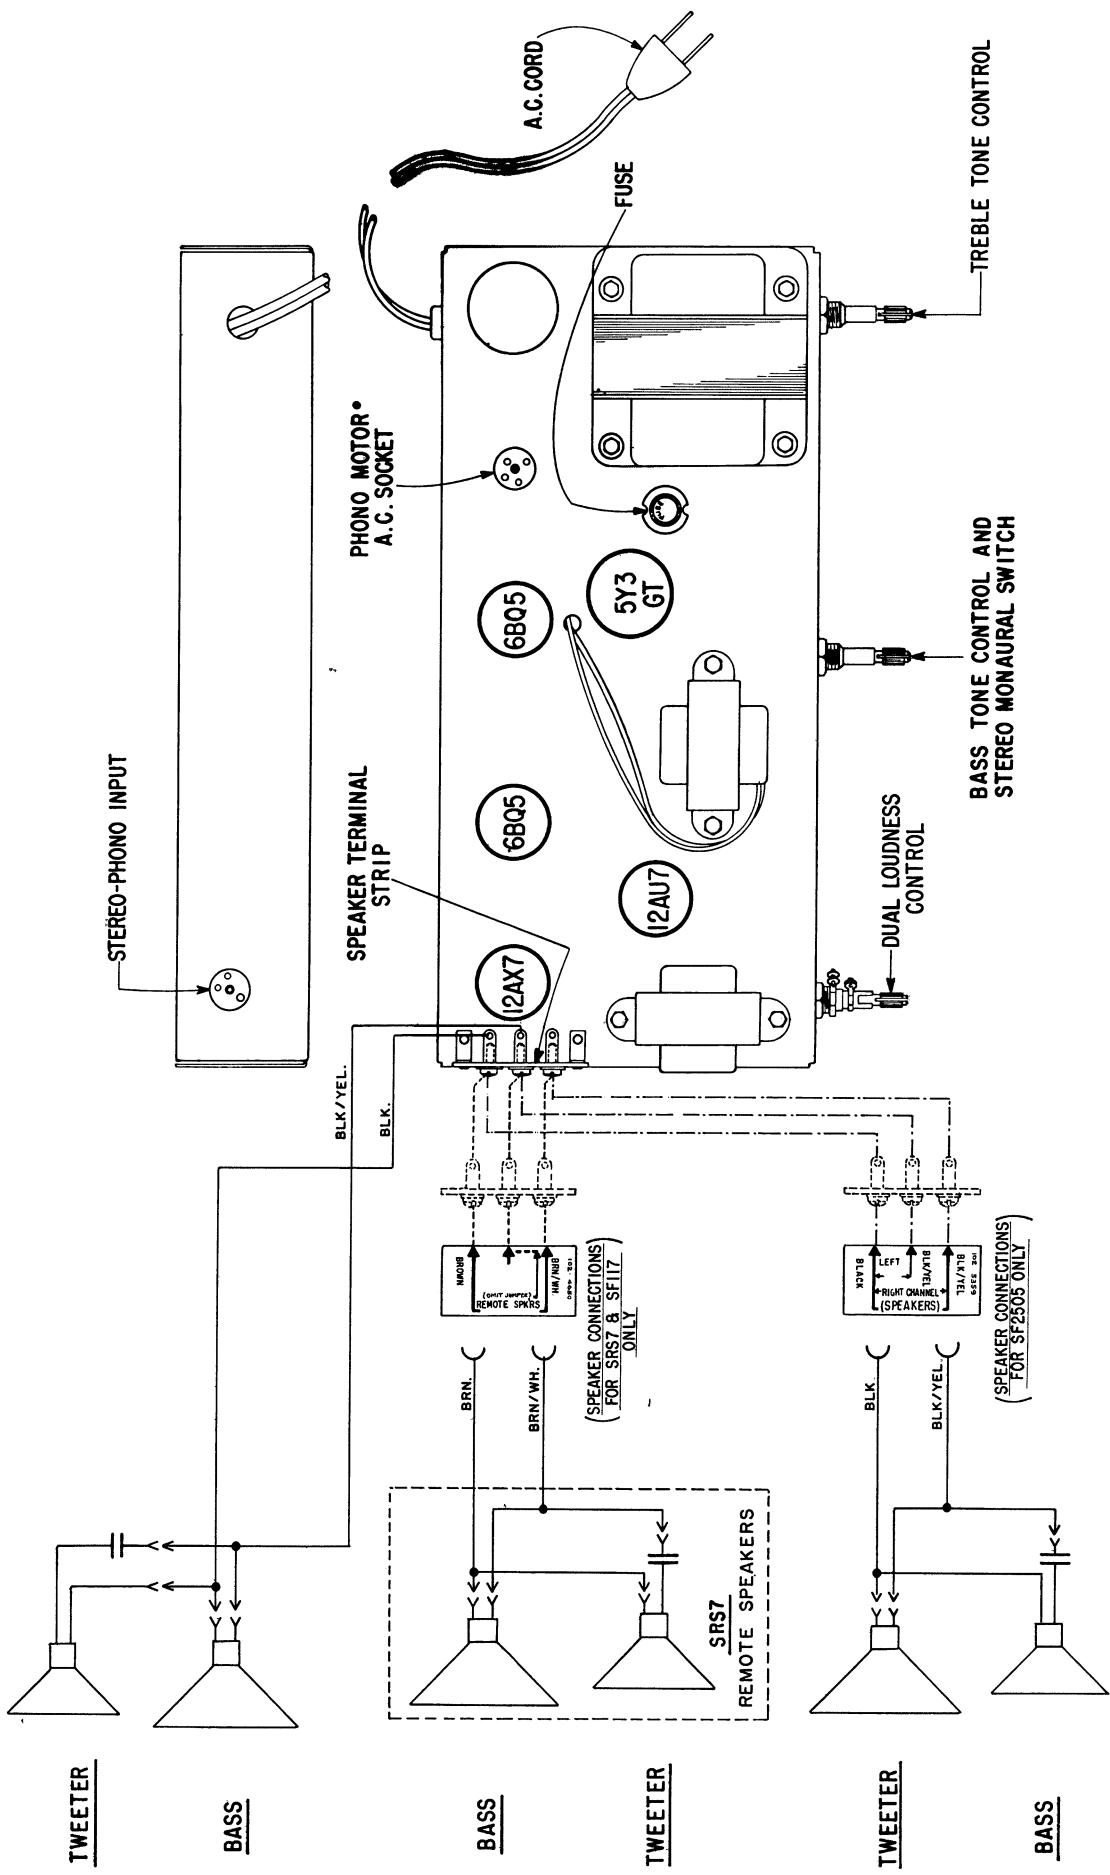


5B29 Chassis For Model SFD2505


5B29 Schematic For Model SFD2505

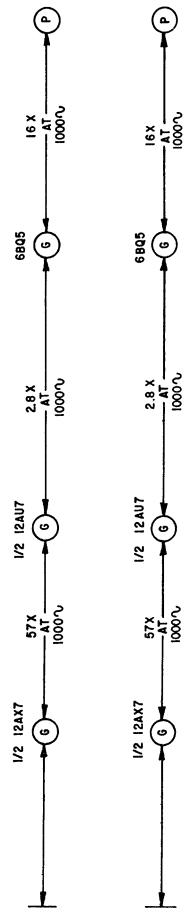


1/2 12AX7 DRIVER

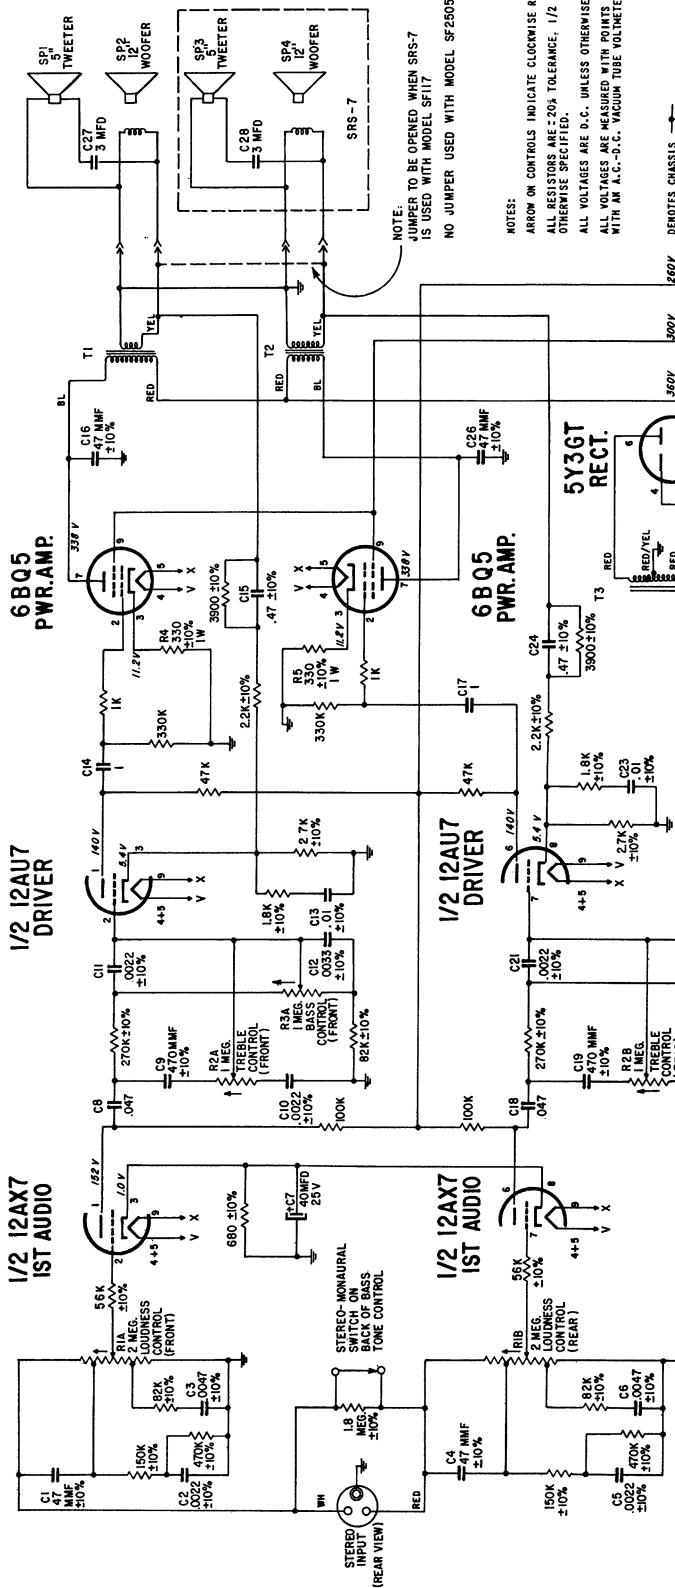

1/2 12AX7 1ST AUDIO

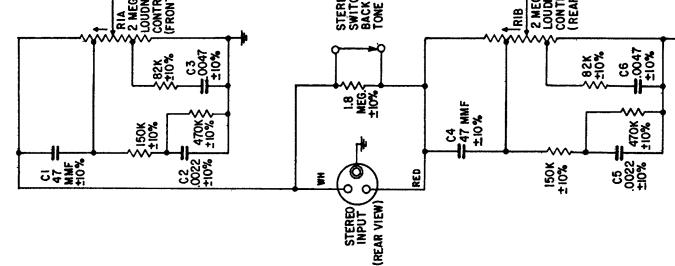


6BQ5 PWR.AMP.

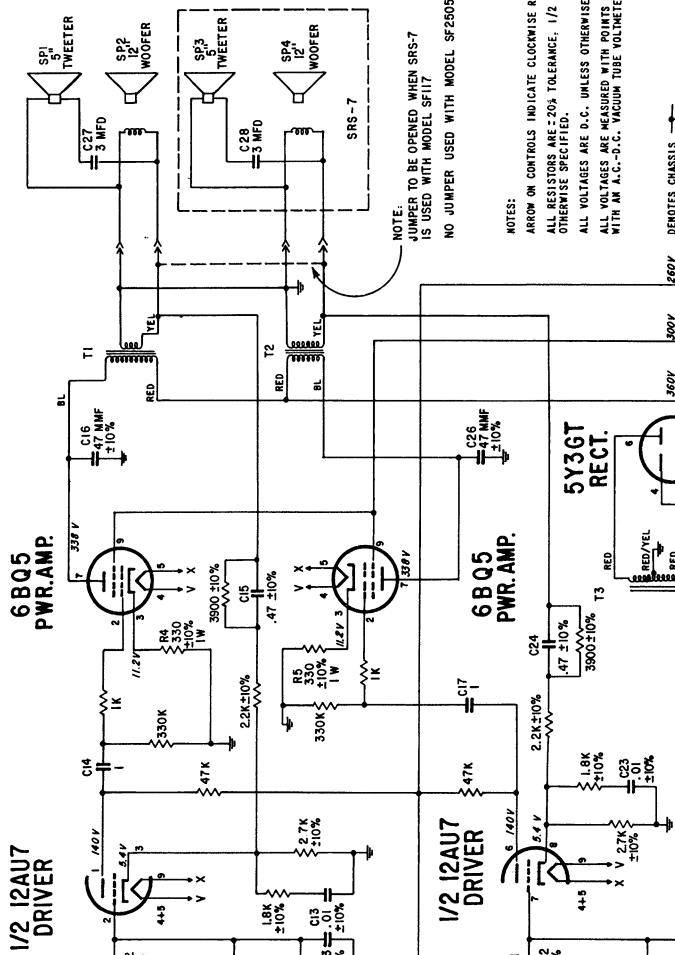


NOTE: JUMPER TO BE OPENED WHEN SRS-7 IS USED WITH MODEL SFD2505.

NO JUMPER USED WITH MODEL SF2505.

6BQ5 PWR.AMP.

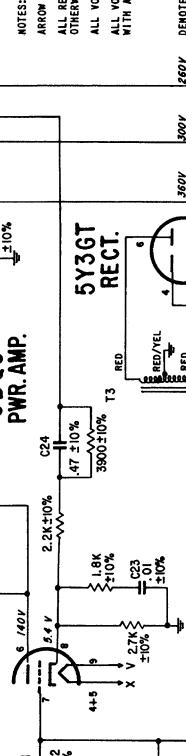

1/2 12AU7 DRIVER



NOTES:




ARROW ON CONTROLS INDICATE CLOCKWISE ROTATION.


ALL RESISTORS ARE $\pm 20\%$ TOLERANCE, 1/2 WATT, CARBON UNLESS OTHERWISE SPECIFIED.

ALL VOLTAGES ARE D.C. UNLESS OTHERWISE SPECIFIED.


ALL VOLTAGES ARE MEASURED WITH POINTS INDICATED TO CHASSIS WITH AN A.C.-D.C. VACUUM TUBE VOLTMETER.

5Y3GT RECT.

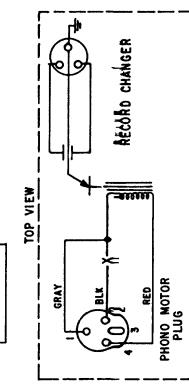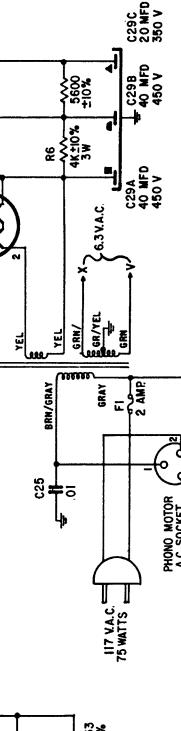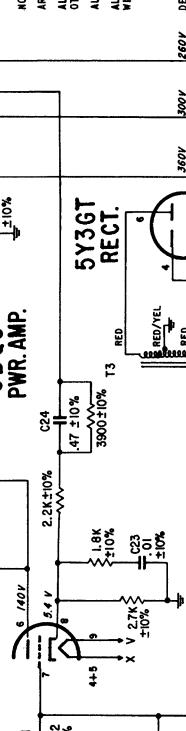

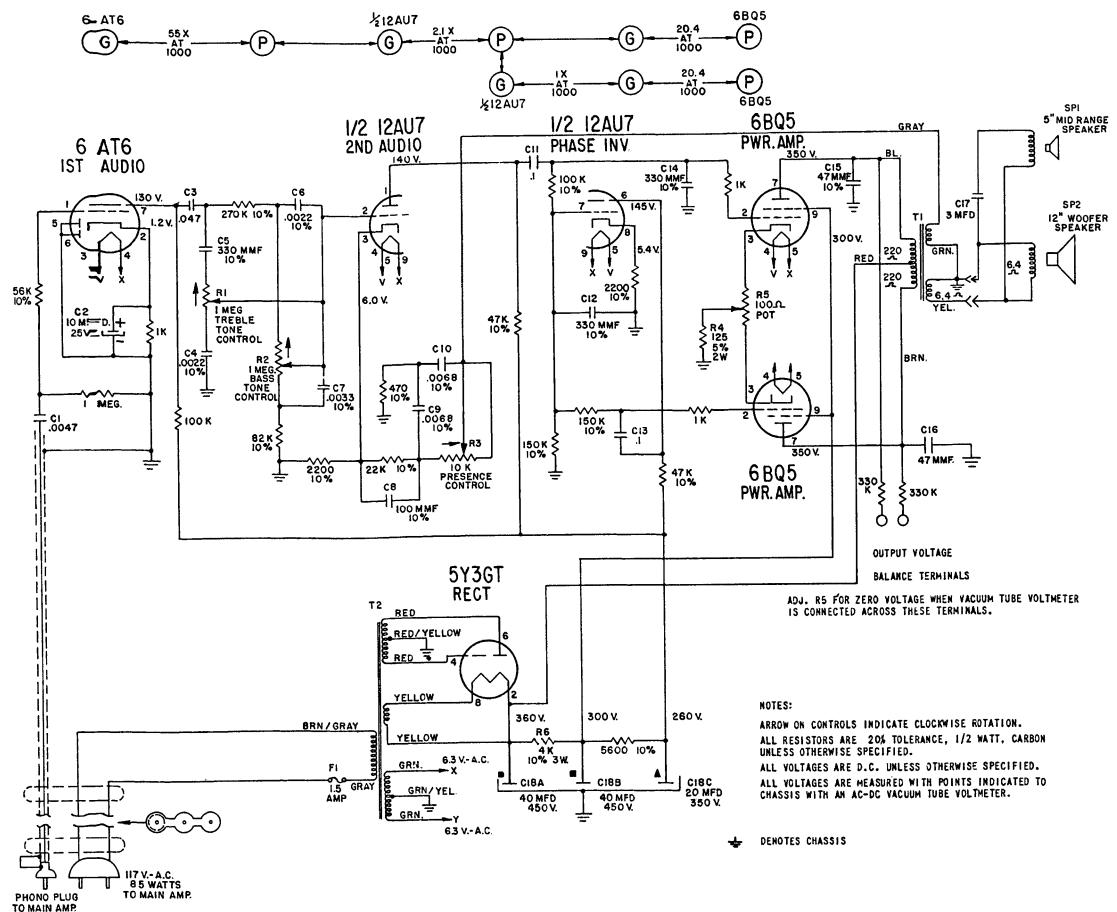

5B24 Schematic For Models SRS12, SRD22

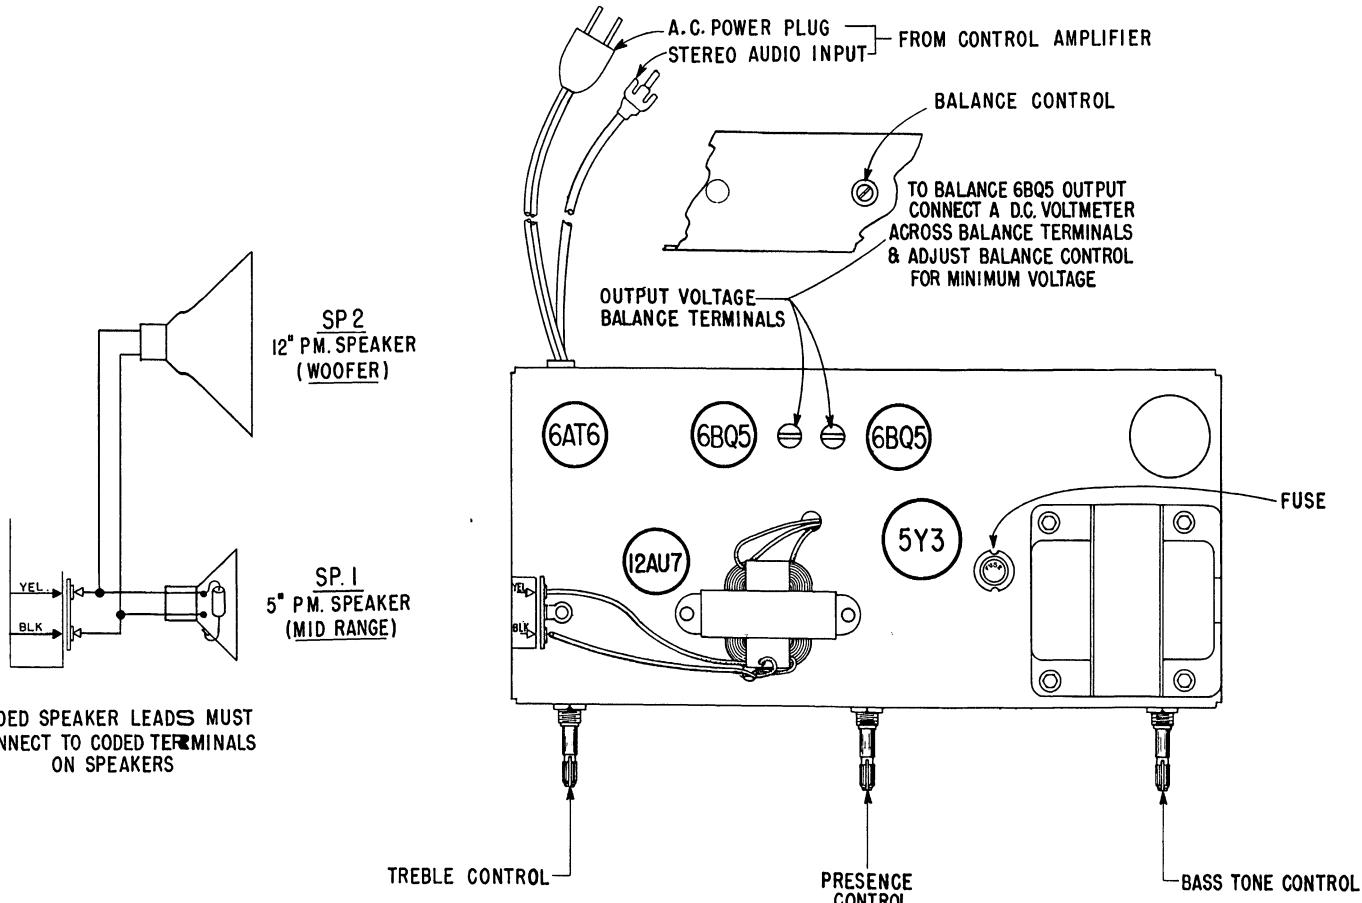

5B24 Chassis For Models SRS12, SRD22

NUMERICAL PARTS LIST

2D30 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
12-2830		Stereo Control Mtg. Brkt.		63-1803		2700 Ohm 1/2W Ins. 10% (2 used)	.17
22-14	C10	.0047 Mfd. Ceramic Disc.-500V	.25	63-1819		6800 Ohm 1/2W Ins. 5%	.34
22-17	C20,22	.001 Mfd. Ceramic Disc.-1 KV (2 used)	.25	63-1834		15 K Ohm 1/2W Ins. 10%	.17
22-18	C4,14	.0022 Mfd. Ceramic Disc.-500V (2 used)	.25	63-1841		22 K Ohm 1/2W Ins. 10%	.17
22-1953	C13	10 Mmf. Ceramic - 500V	.25	63-1861		68 K Ohm 1/2W Ins. 5%	.34
22-2321	C11	220 Mmf. Ceramic - 500V	.25	63-1862		68 K Ohm 1/2W Ins. 10%	.17
22-2376	C1,9	47 Mmf. Ceramic Disc.-500V	.25	63-1866		82 K Ohm 1/2W Ins. 10% (4 used)	.17
22-2670	C17,19	.0033 Mfd. Ceramic Disc.-500V (2 used)	.25	63-1872		120 K Ohm 1/2W Ins. 5%	.34
22-2782	C2,3, 6,7	.1 Mfd. Paper-600V	.45	63-1880		180 K Ohm 1/2W Ins. 10%	.17
22-2797	C7	.047 Mfd. Paper-600V	.30	63-1887		270 K Ohm 1/2W Ins. 10%	.17
22-2806	C8	.022 Mfd. Paper-600V	.30	63-1890		330 K Ohm 1/2W Ins. 10% (2 used)	.17
22-2815	C16,18	.01 Mfd. Paper-600V (2 used)	.25	63-1897		470 K Ohm 1/2W Ins. 10%	.17
22-2819	C12,15, 21,23	.0068 Mfd. Paper-200V	.25	63-1911		1 Megohm 1/2W Ins. 10%	.17
22-2825	C24,25, 27,28	.0047 Mfd. Paper-200V (4 used)	.25	63-1960		15 Megohm 1/2W Ins. 10%	.17
22-2939	C1,2,3	680 Mmf. Ceramic Disc.-800V (3 used)	.25	63-4418	R4A, R4B	Dual Treble Tone Control	
22-2943	C26	10 Mfd. Electrolytic - 350V	1.85	63-4419	R6A, R6B	Dual Presence Control	
22-3097	C5	120 Mmf. Mica-500V	.35	63-4638	R3A, R3B	Dual Volume Control	
43-419		Socket Terminal Hous- ing (male)		63-4639	R5A, R5B	Dual Bass Tone Control & Sw.	
44-33		Connector Jack (2 Pt. of S-44775)	.15	63-4640	R1A, R1B	Dual Balance Control	2.75
52-813		2 Conductor Shielded Lead	.45	63-4641	R2	Stereo Control	1.40
54-139		3/8-32x9/16 Palnut (1 used on 63-4418, 4419, 4638, 4639, 4640, & 4641)	.03	78-846		9 Contact Wafer Tube	
				78-1099		Socket (2 used)	.25
				83-2216		3 Contact Socket	.20
				83-2639		7 Lug Terminal Strip (2 used)	.15
				83-2642		3 Lug Terminal Strip	.05
				83-3240		5 Lug Terminal Strip	.10
				86-303		6 Lug Terminal Strip (2 used)	.10
				114-78		Socket Terminal (11 used on 43-419)	.04
63-1765		330 Ohm 1/2W Ins. 20% (2 used)	.17			8-18x5/16x1/4 Hex. Hd.	
63-1771		470 Ohm 1/2W Ins. 10% (2 used)	.17			Self tap screw (2 used on 12-2830)	.03
63-1799		2200 Ohm 1/2W Ins. 10%	.17	8-44775		Stereo Jack & Brkt. Assem.	.75

3B30 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
12-2187		Chassis Mtg. Brkt. (3 used)	.10	63-3988	R10	1200 Ohm Resistor 2W Ins. 10%	.34
15-201		Fuse Receptacle Cap	.30	63-4387	R9	1500 Ohm Resistor 3W 10%	.45
22-2376	C30,31	47 Mmf. Ceramic Disc. Capacitor-500V	.25	63-4468		Balance Control	1.40
22-2781		.1 Mfd. Paper Capacitor 400V		63-4469		125 Ohm Resistor 2W 5%	.68
22-3046	C34B, 34C	22-3046 Electrolytic 20/350-40/450-40/450	4.50	78-402		4 Contact Socket	.15
54-473		Fuse Receptacle Nut	.05	78-755		Octal Tube Socket	.20
58-172		9 Prong Plug	.30	78-939		Molded Tube Socket (9 Contact) (2 used)	.40
62-23		Fuse Receptacle	.50	78-1043		7 Contact Socket	.25
63-1786		1 K Ohm Resistor 1/2W Ins. 20% (2 used)	.17	83-1475		Armitite Strip	.03
63-1891		330 K Ohm Resistor 1/2W Ins. 20% (2 used)	.17	83-2639		3 Lug Terminal Strip (2 used)	.05
63-1912		1 Megohm Resistor 1/2W Ins. 20% (2 used)	.17	83-2898		3 Lug Terminal Strip	.10
				93-1179		Rubber Washer	.03

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
93-1180		Lockwasher	.03				
95-1624 T4		Power Transformer	19.00	114-370		10-32x1/2 Hex. Hd.	
95-1625 T3		Audio Output Trans- former	5.75			Self-Tap Screw Flat	
114-78		8-18x5/16x1/4 AF				Washer Att. (4 Mt.)	
		Hex. Hd. Self-Tap		125-85		95-1624)	.05
		Screw (2 Mt. 95-1625)	.03	136-36		Rubber Grommet	.05
						Fuse 2 Amp.	.10

3D32 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
12-2187		Chassis Mtg. Brkt. (3 used)	.10	78-402		4 Contact Socket	.15
15-201		Fuse Receptacle Cap	.30	78-755		Octal Tube Socket	.20
22-2376 C4, 5		47 Mmf. Ceramic Disc.-500V (2 used)	.25	78-939		9 Contact Molded Tube	
22-2781 C1, 2A		.1 Mfd. Paper-400V	.45	78-1043		Socket (2 used)	.40
22-3159 C2B, 2C		Electrolytic-30/350 40/450 80/450	5.50	83-1475		7 Contact Socket	.25
22-3160 C3		100 Mfd. Electrolytic-50V	1.75	83-2307		Armitite Strip	.03
43-419		Socket Terminal		83-2639		4 Lug Terminal Strip	.10
		Housing (male)	.35	86-303		3 Lug Terminal Strip	.05
54-473		Fuse Receptacle Nut	.05	93-1179		Socket Terminal (9 used on 43-419)	.04
62-23		Fuse Receptacle	.50	93-1180		Rubber Washer	.03
63-1786		1,000 Ohm 1/2W Ins. 20% (2 used)	.17	95-1633 T1		Lockwasher	.03
63-1912		1 Megohm 1/2W Ins. 20% (2 used)	.17	95-1660 T2		Power Transformer	19.00
63-4033 R4, 5		2000 Ohm 4W Ins. 10% (2 used)	.65	114-78		Audio Output Transfor- mer (2 used)	5.75
63-4395 R1		2200 Ohm 10W WW		114-370		8-18x5/16x1/4 Hex. Hd.	
63-4474 R3		10%	.90			Self-Tap Screw (4 used)	.03
63-4475 R2		165 Ohm 2W Ins. 10%	.34	125-85		10-32x1/2 Hex. Hd.	
		1200 Ohm 7W Ins. 10%	.90	136-31 F1		Self-Tap Screw Flat	
				237-1		Washer Att. (4 used)	.05
						Rubber Grommet	.05
						Fuse (4 Ampere)	.25
						Cable Retaining Clip	.03

4B22Z CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
11-103		Line Cord & Plug	1.00	22-3086 C1A,1B, 1C, 1D		2 Section Variable	3.75
12-2637		Dial Scale Ext. Brkt.	.10				
12-2660		Dial Scale Support Brkt. (2 used)	.30	22-3132		20 Mfd. Electrolytic-400V	2.00
12-2661		Plate Support Brkt.	.10	26-622		Presence & Tone Indica- tor Scale	1.25
12-2676		Background Support Brkt.	.05	44-33		Connector Jack (2 used)	.15
19-306		Coil Mtg. Clip	.10	52-804		Shielded Lead	.75
22-9 C1B		100 Mmf. Ceramic Disc.		52-815		Shielded Lead	.40
		Capacitor-500V	.25	52-817		Shielded Lead	.70
22-17 C8, 25		.001 Mfd. Ceramic Disc.		52-818		Shielded Lead	.70
		Capacitor 1 KV (2 used)	.25	54-139		3/8-32x9/16 Palnut (1 used on Ea. 63-4385, 4386, & 4459, 85-611 & 612)	.03
22-18 C1B, 14, 23		.0022 Mfd. Ceramic Disc. Capacitor-500V (3 used)	.25	54-140		3/8-32x9/16 Hex. Nut (used on 63-4383)	.03
22-2309 C1B, 18, 22		330 Mmf. Ceramic Capacitor-500V (3 used)	.25	54-271		6-32x1/2 Palnut (1 used on Ea. 95-1101 & 1102)	.03
22-2569		.047 Mfd. Molded Capacitor-600V	.40	58-169		7 Prong Plug	.20
22-2782 C1B, 21		.1 Mfd. Paper Capacitor 600V (2 used)	.45	59-341		Dial Pointer	.75
22-2792 C2, 4		.047 Mfd. Paper Capacitor-200V (2 used)	.30	61-207		Plastic Pulley (3 used)	.25
22-2794 C9, 11		.047 Mfd. Paper Capacitor-600V (3 used)	.30	63-1736		68 Ohm Resistor 1/2 W	
22-2813 C7, 26		.01 Mfd. Paper Capacitor 200V (2 used)	.35	63-1771		Ins. 10%	
22-2819 C1B, 19, 20		.0068 Mfd. Paper Capacitor-200V (3 used)	.25	63-1786		470 Ohm Resistor 1/2 W	
22-2903 C6, 24		22 Mmf. Ceramic Disc.-500V (2 used)	.25	63-1792		Ins. 10%	
22-3076 C1D		10 Mfd. Electrolytic-25V	1.75	63-1799		1 K Ohm Resistor 1/2 W	
						Ins. 20%	
						1500 Ohm Resistor 1/2 W	
						Ins. 10%	
						2200 Ohm Resistor 1/2 W	
						Ins. 10%	

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
63-1827		10K Ohm Resistor 1/2W Ins. 10%	.17	83-2612		2 Lug Terminal Strip	.05
63-1828		10 K Ohm Resistor 1/2W Ins. 20%	.17	83-2627		2 Lug Terminal Strip (3 used)	.05
63-1831		12 K Ohm Resistor 1/2W Ins. 10%	.17	83-2638		3 Lug Terminal Strip	.05
63-1841		22 K Ohm Resistor 1/2W Ins. 10%	.17	83-2639		3 Lug Terminal Strip	.05
63-1842		22 K Ohm Resistor 1/2W Ins. 20%	.17	83-2642		5 Lug Terminal Strip	.10
63-1855		47 K Ohm Resistor 1/2W Ins. 10% (5 used)	.17	83-2649		2 Lug Terminal Strip	.05
63-1856		47 K Ohm Resistor 1/2W Ins. 20%	.17	83-2898		3 Lug Terminal Strip	.10
				83-2900		Insulating Strip	
				83-3075		Bearing Strip	.03
				85-611 S1		Record Compensator Switch	2.50
				85-612 S2		Phono-Radio Switch	2.50
				93-127		Lockwasher	.03
				94-295		Capacitor Mtg. Bushing (3 used)	.05
63-1869		100 K Ohm Resistor 1/2W Ins. 10%	.17				
63-1870		100 K Ohm Resistor 1/2W Ins. 20%	.17	95-1101 T1		1st I.F. Transformer	3.00
63-1876		150 K Ohm Resistor 1/2W Ins. 10% (3 used)	.17	95-1102 T2		2nd I.F. Transformer	3.00
63-1883		220 K Ohm Resistor 1/2W Ins. 10%	.17	100-221 PL1,2, 3,4		Pilot Light Bulb (3 used)	
63-1884		220 K Ohm Resistor 1/2W Ins. 20%	.17	103-21		Crystal Diode	.75
63-1887		270 K Ohm Resistor 1/2W Ins. 10%	.17	113-34		6-32x3/8x1/4 Hex. Hd. Mach. Screw Lockwasher	
63-1890		330 K Ohm Resistor 1/2W Ins. 10% (3 used)	.17	114-78		Att. (3 used on 22-3086) 8-18x5/16x1/4 Hex. Hd.	.03
63-1904		680 K Ohm Resistor 1/2W Ins. 10%	.17			Self-Tap Screw (1 used on 12-2676, 2 on Ea.)	
63-1919		1.5 Megohm Resistor 1/2W Ins. 20%	.17	114-652		12-2660, 2661, & 2664 & 3 on S-44034)	.03
63-1922		1.8 Megohm Resistor 1/2W Ins. 10%	.17	125-17		8-18x1/4 Hex. Hd. Self- Tap Screw (2 used on S-44159)	.03
63-1925		2.2 Megohm Resistor 1/2W Ins. 10% (2 used)	.17			Rubber Grommet (1 used on Ea. 94-295)	.03
63-1926		2.2 Megohm Resistor 1/2W Ins. 20%	.17	125-96		Strain Relief Grommet (2 used)	.10
63-3685 R1		5600 Ohm Resistor 4W Ins. 10%	.65	126-553		Tube Shield	.15
63-3986 R3		5600 Ohm Resistor 7W Ins. 10%	.90	126-892		Pilot Light Shield	.05
63-4383 R2A, 2B		Dual Loudness Control	2.75	149-211		Iron Core (Pt. of S-43104)	.10
63-4385 R4		Tone Control-Treble	1.40	188-148		Retaining Ring (2 used on S-44153)	.03
63-4386 R6		Presence Control	1.40	188-149		Retaining Ring (3 used)	.03
63-4459		Bass Tone Control & A.C. Switch	2.05	188-177		Clamping Ring (1 Pt. of Ea. S-44160)	.03
69-320		2-64x5/16 Rd. Hd. Mach. Screw (2 used on S-44316)	.03	188-221		Retaining Ring (used on S-43878)	.04
78-788		Noval Wafer Tube Socket	.40	199-182		Shielded Paper Sleeve	.05
78-807		7 Contact Miniature Wafer Tube Socket (2 used)	.15	199-198		Shielded Paper Sleeve	.05
78-846		Noval Wafer Tube Socket	.25	199-265		Shielded Paper Sleeve	.03
78-883		Molded Noval Tube Socket	.25	S-15440		Drive Cord & Eyelet Assem. Gang	.10
78-1099		3 Contact Socket	.20	S-40013		Drive Cord & Eyelet Assem. Idler	.15
78-1116		A.C. Socket & Wire	.65			Osc. Coil	.85
78-1119		Dual Pilot Light Socket & Wire	.60	S-43104 L2		Tuning Shaft & Pulley Assem.	.75
78-1120		Pilot Light Socket & Wire	.25	S-43878		A.C. Socket, Jack & Brkt. Assem.	1.25
80-69		Dial Cord Tension Spring	.15	S-43879		Plate, Brkt. & Bushing Assem.	.90
80-209		Dial Cord Tension Spring (4 used)	.03	S-44034		Pulley & Shaft Assem. (3 used)	.25
80-1091		Dial Cord Tension Spring	.08	S-44122		Drive Cord & Eyelet Assem. - Pointer	.15
80-1249		Shaft Friction Spring	.15	S-44151		Drive Cord & Eyelet Assem. (3 used)	
80-1250		Sleeve Friction Spring	.15	S-44152		(Presence-Tone Cont.)	.15
83-2216		7 Lug Terminal Strip (2 used)	.15	S-44153		Pulley & Shaft Assem.	.60
83-2522		6 Lug Terminal Strip	.10	S-44159		Idler Pulley & Strip Assem.	1.35

5B23 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
11-103		Line Cord & Plug	1.00	63-1887		270 K Ohm 1/2W Ins. 10%	.17
15-201		Fuseholder Cap	.30	63-1890		330 K Ohm 1/2W Ins. 10%	
22-3	C7, 29	.01 Mfd. Ceramic Disc.- 1 KV (1 used)	.30	63-1891		(2 used) 330 K Ohm 1/2W Ins. 20%	.17
22-9	C15	100 Mmf. Ceramic Disc.-500V	.25	63-1904		(2 used) 680 K Ohm 1/2W Ins. 10%	.17
22-17	C2, 6	.001 Mfd. Ceramic Disc. 1 KV (2 used)	.25	63-1912		1 Megohm 1/2W Ins. 20%	.17
22-18	C11, 13, 28	.0022 Mfd. Ceramic Disc.-500V (3 used)	.25	63-1918		1.5 Megohm 1/2W Ins. 10%	.17
22-2056	C9	12 Mfd. Electrolytic Capacitor-150V	1.20	63-1922		1.8 Megohm 1/2W Ins. 10%	.17
22-2309	C12, 19, 21	330 Mmf. Ceramic- 500V (3 used)	.25	63-1925		2.2 Megohm 1/2W Ins. 10% (2 used)	.17
22-2376	C22, 23	47 Mmf. Ceramic Disc.-500V (2 used)	.25	63-4064 R3		Bass Tone Control	1.40
22-2782	C18, 20	.1 Mfd. Paper-600V (2 used)	.45	63-4065 R2		Treble Tone Control	1.40
22-2794	C10-	.047 Mfd. Paper-600V	.35	63-4066 R4		Presence Control	1.40
22-2812		.01 Mfd. Paper	.30	63-4069 R7		4000 Ohm 3W 10%	.45
22-2813	C4, 8	Capacitor 600V (2 used)	.25	63-4373 R1A, 1B		Dual Volume Control	2.75
22-2819	C14, 16, 17	.0068 Mfd. Paper-200V (3 used)	.30	63-4468 R6		Current Balance Control	1.40
22-2903	C1, 5	22 Mmf. Ceramic Disc. 500V (2 used)	.25	63-4469		125 Ohm Resistor 2W 5%	.68
22-3046	C30 A, 30B, 30C	20-40-40 Mfd. Electroly- tic-350V-450V-450V	4.50	69-320		2/64x5/16 Rd. Hd. Mach. Screw (2 used on 63-4373)	
22-3076	C3	10 Mfd. Electrolytic Capacitor-30V	1.75	78-402		4 Contact Socket	.15
44-33		Connector Jack (2 Pt. of S-43879)	.15	78-755		Octal Tube Socket	.20
52-797		Shielded Lead	.50	78-846		9 Contact Wafer Tube Socket (2 used)	.25
54-139		3/8-32x9/16 Palnut (4 used)	.03	78-939		9 Contact Molded Tube Socket (2 used)	.40
54-140		3/8-32x9/16x3/32 Thk. Hex. Nut (used on 63-4373)	.06	78-1099		3 Contact Socket	.20
54-473		Hex. Nut (used on 62-23)	.05	78-1116		A.C. Socket & Wire	.65
62-23		Fuse Receptacle	.40	80-1249		Shaft Friction Spring	.15
63-1771		470 Ohm 1/2W Ins. 10%	.17	80-1250		Sleeve Friction Spring	.15
63-1786		1000 Ohm 1/2W Ins. 20%		83-2145		5 Lug Terminal Strip	
		(4 used)	.17	83-2307		(1 used)	.10
63-1799		2200 Ohm 1/2W Ins. 10% (2 used)	.17	83-2522		4 Lug Terminal Strip	.10
63-1817		5600 Ohm 1/2W Ins. 10%	.17	83-2612		6 Lug Terminal Strip	.10
63-1838		18 K Ohm 1/2W Ins. 10%	.17	83-2618		2 Lug Terminal Strip	.05
63-1841		22 K Ohm 1/2W Ins. 10%	.17	83-2627		8 Lug Terminal Strip	.10
63-1855		47 K Ohm 1/2W Ins. 10% (5 used)	.17	83-2898		2 Lug Terminal Strip	.05
63-1859		56 K Ohm Resistor 1/2W Ins. 10%	.17	83-2915		3 Lug Terminal Strip	.10
63-1869		100 K Ohm 1/2W Ins. 10%	.17	83-3075		4 Lug Terminal Strip	.10
63-1870		100 K Ohm 1/2W Ins. 20% (3 used)	.17	85-607 S1		Bearing Strip	.03
63-1876		150 K Ohm 1/2W Ins. 10% (2 used)	.17	93-1179		Record Compensator Sw.	2.50
63-1883		220 K Ohm 1/2W Ins. 10%	.17	93-1180		Rubber Washer (used on 62-23)	.03
				95-1657 T2		Lockwasher (used on 62-23)	.03
				95-1604 T1		Power Transformer	15.00
				114-699		Output Transformer	5.50
						10-16x3/8 Hex. Hd.	
						Self-Tap Screw (4 used on 95-1657)	
						Strain Relief Grommet (2 used)	.03
						Fuse 2 Amp. Type 3AG	.10
						A.C. Socket, Jack & Brkt.	.10
						Assem.	1.25

5B24 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
15-1150R		Fuse Holder Cap	.25	22-18	C1, 4, 6	.0022 Mfd. Ceramic Disc. Capacitor-500V (2 used)	
15-201		Fuse Holder Cap	.30			(2 used) 330 Mmf. Ceramic	.25
22-7		100 Mmf. Ceramic Disc. Capacitor-500V	.25	22-2309	C5, 12,	330 Mmf. Ceramic Disc. Capacitor-500V (3 used)	.25
22-14		.0047 Mfd. Ceramic Disc. Capacitor- 1 KV	.25		14	47 Mmf. Ceramic Disc. Capacitor-500V (2 used)	.25

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
22-2670 C7		.0033 Mfd. Ceramic Disc. Capacitor-500V	.25	63-4064 R2		Bass Tone Control	1.40
22-2782 C11,13		.1 Mfd. Paper Capacitor 600V (2 used)	.25	63-4065 R1		Treble Tone Control	1.40
22-2794 C3		.047 Mfd. Paper Capacitor-200V	.50	63-4066 R3		Presence Tone Control	1.40
22-2819 C9,10		.0068 Mfd. Paper Capacitor-200V (2 used)	.30	63-4069 R6		4 K Ohm Resistor 3W 10%	.45
22-3046 C18B, 18C		Electrolytic Capacitor 20/350, 40/450, 40/450	4.50	63-4397or		135 Ohm Resistor 2W 5%	.68
22-3076 C2		10 Mfd. Electrolytic Capacitor 25V	1.75	63-4469 R4		125 Ohm Resistor 2W 5%	.68
54-139		3/8-32x9/16 Palnut (1 used on Ea. 63-4064, 4065 & 4066)	.03	63-4402or		Current Balance Control	1.40
54-382		Hex. Nut (used on 62-17)	.06	63-4468 R5		Current Balance Control	1.40
54-473		Hex. Nut (used on 62-23)	.05	78-755		Octal Tube Socket	.20
62-17or		Fuse Receptacle	.40	78-806		Miniature 7 Contact Wafer Tube Socket	.15
62-23		Fuse Receptacle	.50	78-846		Noval Wafer Tube Socket	.25
63-1771		470 Ohm Resistor 1/2W Ins. 10%	.17	78-939		Molded Tube Socket 9 Contact	.40
63-1786		1 K Ohm Resistor 1/2W Ins. 10% (3 used)	.17	83-2135		4 Lug Terminal Strip (2 used)	.10
63-1799		2200 Ohm Resistor 1/2W Ins. 10% (2 used)	.17	83-2145		5 Lug Terminal Strip	.10
63-1817		5600 Ohm Resistor 1/2W Ins. 10%	.17	83-2307		4 Lug Terminal Strip	.10
63-1841		22 K Ohm Resistor 1/2W Ins. 10%	.17	83-2522		6 Lug Terminal Strip	.10
63-1855		47 K Ohm Resistor 1/2W Ins. 10% (2 used)	.17	83-2639		3 Lug Terminal Strip	.05
63-1859		56 K Ohm Resistor 1/2W Ins. 10%	.17	83-2898		3 Lug Terminal Strip Special	.10
63-1866		82 K Ohm Resistor 1/2W Ins. 10%	.17	83-2989		Cable Retaining Strip	.05
63-1869		100 K Ohm Resistor 1/2W Ins. 10%	.17	93-1179		Rubber Washer (used on 62-17 or 62-23)	.03
63-1870		100 K Ohm Resistor 1/2W Ins. 20%	.17	95-1603or		1/2" Lock Washer (used on 62-17 or 62-23)	.03
63-1876		150 K Ohm Resistor 1/2W Ins. 10% (2 used)	.17	93-1180		Power Transformer	15.50
63-1887		270 K Ohm Resistor 1/2W Ins. 10%	.17	95-1603orT2		Power Transformer	15.00
63-1891		330 Ohm Resistor 1/2W Ins. 10% (2 used)	.17	95-1657		Output Transformer	5.75
63-1912		1 Megohm Resistor 1/2W Ins. 20%	.17	95-1623orT1		Label (Speaker Lead Connection)	.10
				102-3790		10-32x1/2 Hex. Hd. Self-Tap Screw Flat	
				114-370		Washer Att. (4 used only when 95-1603 is used)	.05
				114-699		10-16x3/8 Hex. Hd. Self- Tap Screw (4 used only when 95-1657 is used)	
				136-32 F1		Fuse 1 1/2 Amp. Type	.03
				or		3AG	.15
				136-36		Fuse 2 Amp.	.10

5B29 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
11-103		A.C. Cord & Plug	1.00	22-2825 C3,6		.0047 Mfd. Paper-200V (2 used)	.25
15-201		Fuseholder Cap	.30	22-3046 C29A,B, C		Electrolytic-20/350 40/450 40/450	4.50
22-18	C2,5, 10,11, 20,21	.0022 Mfd. Ceramic Disc.-500V (6 used)	.25	54-139		3/8-32x9/16 Hex. Pal- nut (1 Mts. Ea. 63-4448 & 4449)	.03
22-1156 C7		40 Mfd. Electrolytic- 25V	.64	54-140		3/8-32x9/16 Hex. Nut	.03
22-2302 C9,19		470 Mmf. Ceramic- 500V (2 used)	.25	54-473		Hex. Nut (Mts. 62-23)	.05
22-2376 C1,4, 16,26		47 Mmf. Ceramic Disc. (4 used)	.25	62-23		Fuse Receptacle	.50
22-2670 C12,22		.0033 Mfd. Ceramic Disc.-500V (2 used)	.25	63-1778		680 Ohm 1/2W Ins. 10%	.17
22-2765 C15,24		.47 Mfd. Paper-200V (2 used)	.55	63-1786		1000 Ohm 1/2W Ins. 20% (2 used)	.17
22-2782 C14,17		.1 Mfd. Paper-600V (2 used)	.45	63-1796		1800 Ohm 1/2W Ins. 10% (2 used)	.17
22-1794 C8,18		.047 Mfd. Paper-600V (2 used)	.30	63-1799		2200 Ohm 1/2W Ins. 10% (2 used)	.17
22-2812 C25		.01 Mfd. Paper-600V	.30	63-1803		2700 Ohm 1/2W Ins. 10% (2 used)	.17
22-2813 C13,23		.01 Mfd. Paper-200V (2 used)	.25	63-1810		3900 Ohm 1/2W Ins. 10% (2 used)	.17
				63-1817		5600 Ohm 1/2W Ins. 10%	.17

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
63-1856		47 K Ohm 1/2W Ins. 20% (2 used)	.17	78-939		9 Contact Molded Tube Socket (2 used)	.40
63-1859		56 K Ohm 1/2W Ins. 10% (2 used)	.17	78-1099		3 Contact Socket	.20
63-1866		82 K Ohm 1/2W Ins. 10% (4 used)	.17	80-1249		Shaft Friction Spring	.15
63-1870		100 K Ohm 1/2W Ins. 20% (2 used)	.17	80-1250		Sleeve Friction Spring	.15
63-1876		150 K Ohm 1/2W Ins. 10% (2 used)	.17	83-2216		7 Lug Terminal Strip	.15
63-1887		270 K Ohm 1/2W Ins. 10% (2 used)	.17	83-2538		3 Lug Terminal Strip	.10
63-1891		330 K Ohm 1/2W Ins. 20% (2 used)	.17	83-2639		3 Lug Terminal Strip (2 used)	.05
63-1897		470 K Ohm 1/2W Ins. 10% (2 used)	.17	83-2649		2 Lug Terminal Strip (2 used)	.05
63-1922		1.8 Megohm 1/2W Ins. 10%	.17	83-2915		4 Lug Terminal Strip	.10
63-3162 R4,5		330 Ohm 1W Ins. 10% (2 used)	.25	83-2965		7 Lug Terminal Strip	.10
63-4069 R6		4000 Ohm 3W 10%	.45	83-3075		Bearing Strip (2 used)	.03
63-4447 R1A,B		Dual Loudness Control	3.50	83-3093		Terminal Strip (Speaker Lead Conn.)	.25
63-4448 R2A,B		Dual Treble Tone Control	2.75	86-237		Connector Terminal (4 used)	.03
63-4449 R3A,B		Dual Bass Tone Control & Sw.	3.50	93-1179		Rubber Washer (used on 62-17)	.03
69-320		2/64x5/16 Rd. Hd. Mach. Screw (2 used)	.03	93-1180		Lockwasher (used on 62-17)	.03
78-402		4 Contact Socket	.15	95-1650 T1,2		Audio Output Transformer (2 used)	4.75
78-755		Octal Tube Socket	.20	95-1651 T3		Power Transformer	15.00
78-846		9 Contact Wafer Tube Socket (2 used)	.25	114-699		10-16x3/8 Hex. Hd. Self- Tap Screw (4 used on 95-1651)	.03
				125-96		Strain Relief Grommet (used on 11-103)	.10
				136-36 F1		Fuse - 2 Amp.	.10

7D30 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
11-103		Line Cord & Plug	1.00	63-4468 R2,4		Current Balance Control (2 used)	1.40
15-201		Fuseholder Cap	.30	63-4469 R1,3		125 Ohm 2W WW 5% (2 used)	.68
17-149		Cable Clamp	.05	78-402		4 Contact Socket	.15
22-2309 C4,8		330 Mmf. Ceramic- 500V (2 used)	.25	78-755		Octal Tube Socket	.20
22-2397 C5		100 Mmf. Ceramic Disc.-500V	.30	78-846		Noval Wafer Tube Socket (2 used)	.25
22-2782 C2,3 , 6,7		.1 Mfd. Paper-600V (4 used)	.45	78-1089		Noval Molded Tube Socket	.25
22-2812 C9,10A		.01 Mfd. Paper-600V	.30	83-1475		Ins. Strip (used on 43- 422)	.03
22-2376 C1,9		47 Mmf. Ceramic Disc.-500V	.25	83-2216		7 Lug Terminal Strip (4 used)	.15
22-3106 C10B, C10C		40-40-80- Mfd. Electro- lytic-450V	5.75	83-2639		3 Lug Terminal Strip (2 used)	.05
43-422		Socket Terminal Hous- ing (female)		83-2898		3 Lug Terminal Strip (2 used)	.10
52-871		Shielded Lead		86-303		Socket Terminal (11 used on 43-422)	.04
57-872		Shielded Lead		93-1179		Rubber Washer (used on 62-23)	.03
54-473		Hex. Nut (Mts. 62-23)	.05	93-1180		Lockwasher (used on 62-23)	.03
62-23		Fuse Receptable	.50	95-1641		Power Transformer	19.00
63-1573 R6		2700 Ohm 1W Ins. 10%	.25	95-1698 T1		Output Transformer (left channel)	
63-1786		1000 Ohm 1/2W Ins. 20% (4 used)	.17	95-1699 T2		Output Transformer (right channel)	
63-1799		2200 Ohm 1/2W Ins. 10% (4 used)	.17	114-78		8-18x5/16x1/4 Hex. Hd. Self-Tap Screw (2 used on Ea. 95-1698 & 1699)	.03
63-1806		3300 Ohm 1/2W Ins. 10% (2 used)	.17	114-699		10-16x3/8 Hex. Hd. Self-Tap Screw (4 used on 95-1641)	
63-1845		27 K Ohm 1/2W Ins. 10% (2 used)	.17	125-96		Strain Relief Grommet (used on 11-103)	.10
63-1862		68 K Ohm 1/2W Ins. 10% (4 used)	.17	136-31 F1		Fuse - 4 Amp-Type 3AG	.25
63-1873		120 K Ohm 1/2W Ins. 10% (4 used)	.17				
63-1876		150 K Ohm 1/2W Ins. 10% (2 used)	.17				
63-1891		330 K Ohm 1/2W Ins. 20% (4 used)	.17				
63-4417 R5		2000 Ohm 3W Ins. 10%	.45				

7D3I CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
11-103		Line Cord & Plug	1.00				
15-201		Fuseholder Cap	.30				
17-149		Cable Clamp	.05				
22-2309	C4,8	330 Mmfd. Ceramic- 500V (2 used)	.25	63-4405	R7	560 Ohm 5W WW 10%	.75
22-2376	C5	47 Mmfd. Ceramic Disc.-500V	.25	63-4424	R6	640 Ohm 7W WW 10%	.80
22-2781	C10	.1 Mfd. Paper-400V	.35	63-4468	R,3,5	Current Balance Control (2 used)	1.40
22-2782	C2,3, 6,7	.1 Mfd. Paper-600V	.45	63-4469	R2,4	125 Ohm 2W WW 5% (2 used)	.68
22-2812	C9	.01 Mfd. Paper-600V	.25	63-4630	R1	2750 Ohm 10W 10%	.90
22-2927	C1	56 Mmfd. Ceramic Disc.-500V	.25	78-402		4 Contact Socket	.15
22-3099	C11A, B,C	40-70-80 Mfd. Electro- lytic-450V	6.50	78-425		Octal Tube Socket	.20
43-420		Socket Terminal Hous- ing (Female)		78-446		Noval Wafer Tube Socket (2 used)	.25
43-422		Socket Terminal Hous- ing (Female)	.35	78-1089		Noval Molded Tube Socket (4 used)	.25
52-871		Shielded Lead		83-1475		Insulating Strip	.03
52-872		Shielded Lead		83-2145		5 Lug Terminal Strip	.10
54-473		Hex. Nut (used on 62-23)	.05	83-2216		7 Lug Terminal Strip (5 used)	.15
62-23		Fuse Receptacle	.50	83-2898		3 Lug Terminal Strip	
63-1786		1 K Ohm 1/2W Ins. 20%		86-303		Special (2 used)	.10
	(4 used)			93-1179		Socket Terminal (16 used)	.04
63-1799		2200 Ohm 1/2W Ins. 10%		93-1180		Rubber Washer (used on 62-23)	.03
	(4 used)			95-1638	T3	1/2" Lockwasher (used on 62-23)	.03
63-1806		3300 Ohm 1/2W Ins. 10%		95-1691	T1	Power Transformer	19.00
	(2 used)			95-1692	T2	Output Transformer	6.00
63-1841		22 K Ohm 1/2W Ins. 10%		114-78		Output Transformer	6.00
63-1845		27 K Ohm 1/2W Ins. 10%				8-18x5/16x1/4 Hex. Hd.	
63-1862		68 K Ohm 1/2W Ins. 10%				Self-Tap Screw (2 used on Ea. 95-1691 & 95-1692)	.03
	(4 used)			114-699		10-16x3/8 Hex. Washer Hd. Self-Tap Screw (4 used on 95-1638)	.03
63-1873		120 K Ohm 1/2W Ins. 10% (4 used)				Strain Relief Grommet (used on 11-103)	.10
63-1876		150 K Ohm 1/2W Ins. 10% (2 used)		125-96		Fuse 4 Amp. - Type 3AG	.25
63-1891		330 K Ohm 1/2W Ins. 20%		136-31	F1	Shielded Paper Sleeve	.03
				199-213			

9D24 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
12-2386		Bandsw. Support Brkt. (Pt. of 85-633)	.20	22-1852	C3	7.5 Mmfd. Ceramic	
12-2411		Capacitor Mtg. Brkt.	.20	22-1888	C10,21	Capacitor-500V	.25
12-2443		Bandsw. Support Brkt. (Pt. of 85-633)	.20	22-2329	C50	.001 Mfd. Ceramic	
12-2637		Dial Scale Ext. Brkt.	.10	22-2370	C17,22	Capacitor-500V (2 used)	.25
12-2660		Dial Scale Support Brkt.	.30	22-2372	C12	15 Mmfd. Ceramic	
12-2661		Plate Support Brkt.	.10	22-2376	C47	Capacitor-500V	.25
12-2676		Background Support Brkt.	.05	22-2630	C19	50 Mmfd. Ceramic	
17-149		Cable Clamp	.05	22-2703	C2,16, 53	Capacitor-500V (2 used)	.25
19-249		Coil Mtg. Clip (2 used)	.05	22-2732	C7,13, 14,18	22 Mmfd. Ceramic	
20-355	L3	FM Antenna Coil	.20	22-2780	C33,36, 43	Capacitor-500V	.25
22-3	C4,9, 23,24, 26,27, 30,31	.01 Ceramic Disc.- 500V (8 used)	.30	22-2792	C1,6, 37,38	.1 Mfd. Paper Capacitor	.30
22-5	C15,29	100 Mmfd. Ceramic Disc. 500V (2 used)	.25	22-2794	C35	200V	.30
22-14	C25,49,	.0047 Mfd. Ceramic 51 Disc.-500V (3 used)	.25	22-2795	C46	.047 Mfd. Paper Capacitor- 200V (4 used)	.30
22-16	C34	470 Mmfd. Ceramic Disc.-500V	.25			.047 Mfd. Paper Capacitor- 600V	.30
22-17	C32,64,	.001 Mfd. Ceramic 65 Disc.-1000V (3 used)	.25			.047 Mfd. Paper Capacitor- 200V	.30
22-1669	C11	100 Mmfd. Ceramic Capacitor-500V	.25				

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
22-2809	C48	.022 Mfd. Paper Capacitor-600V	.30	63-1835		15 K Ohm Resistor 1/2W	
22-2813	C63,66	.01 Mfd. Paper Capacitor-200V (2 used)	.25	63-1841		Ins. 20%	.17
22-2815	C55,56	.01 Mfd. Paper Capacitor-600V (2 used)	.25	63-1842		22 K Ohm Resistor 1/2W	.17
22-2819	C52,54, 57,:58, 59,:60	.0068 Mfd. Paper Capacitor-200V (6 used)	.25	63-1856		Ins. 10%	.17
22-2831	C61,62	.0033 Mfd. Paper Capacitor-200V (2 used)	.25	63-1859		22 K Ohm Resistor 1/2W	.17
22-2927	C5	56 Mmf. Ceramic Disc.-500V	.25	63-1861		Ins. 20%	.17
22-2939	C39,40 41	680 Mmf. Ceramic Disc.-500V (5 used)	.25	63-1862		68 K Ohm Resistor 1/2W	.34
22-2944	C8A,B, C,D,E, F	Three Section Variable Capacitor	4.25	63-1866		Ins. 5%	.17
22-3031	C20	.82 Mmf. Gimmick-500V	.25	63-1869		68 K Ohm Resistor 1/2W	.17
22-3097	C42	120 Mmf. Mica-500V	.35	63-1870		Ins. 10% (3 used)	.17
22-3133	C45	10. Mfd. Electrolytic-300V	1.75	63-1872		100 K Ohm Resistor 1/2W	.17
43-417		Socket Terminal Housing (Male)		63-1876		Ins. 20% (2 used)	.17
43-419		Socket Terminal Housing (Male)	.35			120 K Ohm Resistor 1/2W	.17
44-33		Connector Jack (2 Pt. of S-44775)	.15			Ins. 5%	.34
52-870		Two Conductor Shielded Lead (used on S-44775)				150 K Ohm Resistor 1/2W	.17
54-139		3/8-32x9/16 Palnut (1 Mt. Ea. 63-4410,4411,4460, 4631 & 4632)	.03			Ins. 10% (2 used)	.17
54-271		6-32x1/4 Palnut (1 used on Ea. 95-1102,1150, 1153,1251 & S-44785)	.03			180 K Ohm Resistor 1/2W	
57-2596		R.F. Plate	1.65			Ins. 10% (2 used)	.17
59-341		Dial Pointer	.75			220 K Ohm Resistor 1/2W	
59-355		Stereo Balance Pointer				Ins. 20%	.17
63-1573	R7	2700 Ohm Resistor 1W				33 K Ohm Resistor 1/2W	
		Ins. 10%	.25			Ins. 10% (4 used)	.17
63-1723		33 Ohm Resistor 1/2W				680 K Ohm Resistor 1/2W	
		Ins. 20%	.17			Ins. 10%	.17
63-1730		47 Ohm Resistor 1/2W				1 Megohm Resistor 1/2W	
		Ins. 20%	.17			Ins. 10%	.17
63-1744		100 Ohm Resistor 1/2W				1 Megohm Resistor 1/2W	
		Ins. 20%	.17			Ins. 20%	.17
63-1757		220 Ohm Resistor 1/2W				2.2 Megohm Resistor	
		Ins. 10%	.17			1/2W Ins. 20% (3 used)	.17
63-1758		220 Ohm Resistor 1/2W				4.7 Megohm Resistor	
		Ins. 20% (3 used)	.17			1/2W Ins. 20% (2 used)	.17
63-1765		330 Ohm Resistor 1/2W				15 Megohm Resistor	
		Ins. 20% (2 used)	.17			1/2W Ins. 10%	.17
63-1772		470 Ohm Resistor 1/2W		63-4410	R5A,B	Dual Tone Control	
		Ins. 20%	.17	63-4411	R4A,B	Treble	2.75
63-1778		680 Ohm Resistor 1/2W		63-4414	R1,2A	Dual Presence Control	2.75
		Ins. 10% (2 used)	.17			2 K Ohm Resistor 7W	
63-1779		680 Ohm Resistor 1/2W				10%	.90
		Ins. 20%	.17			63-4460	R6A,B
63-1785		1 K Ohm Resistor 1/2W				Bass Tone Control &	
		Ins. 10%	.17			A.C. Switch	3.50
63-1786		1 K Ohm Resistor 1/2W		63-4631	R3A,B	63-4632	R2B,C
		Ins. 20%	.17			Dual Loudness Control	2.75
63-1796		1800 Ohm Resistor 1/2W		73-39		Stereo-Balance Control	
		Ins. 10%	.17			8-32x1/8 Headless	
63-1800		2200 Ohm Resistor 1/2W				Set Screw (2 Pt. of S-47575)	
		Ins. 20%	.17	73-115		8-32x3/8 Slab Hd. Set	
63-1803		2700 Ohm Resistor 1/2W		78-788		Screw (2 Pt. of S-40695)	.04
		Ins. 10% (2 used)	.17	78-850		Wafer Tube Socket (9	
63-1819		6800 Ohm Resistor 1/2W		78-953		Contact) (2 used)	.40
		Ins. 5%	.34	78-1073		Molded Tube Socket	
63-1827		10 K Ohm Resistor 1/2W		78-1099		(9 Contact) (2 used)	.40
		Ins. 10% (2 used)	.17	78-1119		Wafer Tube Socket	
63-1834		15 K Ohm Resistor 1/2W		78-1120		(9 Contact)	.25
		Ins. 10%	.17	78-1143		Wafer Tube Socket	
				80-69		(7 Contact)	.20
						Dual Pilot Light Socket & Wire	.60
						Pilot Light Socket & Wire	.25
						Wafer Tube Socket (7 Contact)	.20
						Dial Cord Tension Spring (used on S-45586)	.15

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
80-209		Dial Cord Tension Spring (1 used on Ea. S-40013, S-47576, & S-44152)	.03	114-643		6-20x5/8x1/4 AF Hex. Hd. Self-Tap Screw (2 used on S-44159)	.03
80-444		Tuner Arm Tension Spring	.05	114-652		8-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used on S-44159)	.03
80-780		Iron Core Tension Spring (2 used)	.05	125-17		Rubber Grommet (4 used)	.03
80-1091		Dial Cord Tension Spring (used on S-44151)	.08	125-73		Rubber Grommet (2 used)	.10
80-1142		Ground Spring	.20			Tube Shield	.10
80-1333		Tuner Arm Stop Spring		126-797		Pilot Light Shield	.05
83-1475		Armitie Strip	.03	126-892		Tuner Arm	.10
83-1884		Antenna Terminal Strip	.30	148-149		Iron Core & Spring (2 used)	.75
83-2132		Single Lug Terminal Strip	.05	149-64		Iron Core (1 Pt. of Ea. S-41087 & S-41088)	.10
83-2135		4 Lug Terminal Strip	.10	149-211		Retaining Ring (2 used on S-44153)	.03
83-2307		4 Lug Terminal Strip (2 used)	.10	188-148		Retaining Ring (used on S-44122)	.03
				188-149		Clamping Ring (1 Pt. of Ea. S-44160)	.03
83-2522		6 Lug Terminal Strip	.10			Retaining Ring (used on S-44244)	.04
83-2612		2 Lug Terminal Strip	.05	188-177		FM Oscillator Coil Assem.	.50
83-2617		6 Lug Terminal Strip	.10			FM Detector Coil Assem.	.80
83-2618		8 Lug Terminal Strip	.10	188-221		Loop Loading Coil Assem.	.80
83-2627		2 Lug Terminal Strip	.05			Drive Cord & Eyelet Assem. (Idler)	.15
83-2628		Single Lug Terminal Strip	.05	S-15691 L7		Bushing, Cam & Pulley Assem.	1.25
83-2641		3 Lug Terminal Strip	.10			Broadcast Oscillator Coil Assem.	1.00
83-2642		5 Lug Terminal Strip	.10			Broadcast Detector Coil Assem.	1.00
83-2649		2 Lug Terminal Strip	.05	S-15743 L4		Oscillator Shield & Terminal Strip Assem.	.25
83-2712		Terminal Strip (Loop Antenna)	.20	S-18812 L2		Pulley & Shaft Assem. (3 used)	.25
83-2964		6 Lug Terminal Strip (2 used)	.10	S-40013		Drive Cord & Eyelet Assem. (Dial Pointer)	.15
83-2972		Pointer Support Strip (used on S-44159)	1.00	S-40695		Drive Cord & Eyelet Assem. Presence-Tone Control	.15
83-3007		Insulating Strip	.05	S-41087 L6			
				S-41088 L5			
86-303		Socket Terminal (16 used)	.04	S-41812			
94-946		R.F. Plate Mtg. Bush- ing (4 used)	.03	S-44122			
95-1102 T5		3rd I.F. Transformer (BC)	3.00	S-44151			
95-1150 T1,4		1st & 3rd I.F. Trans- former (FM)	3.50	S-44152			
95-1153 T6		Discriminator Trans- former (FM)	3.50				
95-1251 T3		2nd I.F. Transformer (FM & BC)	3.00				
95-1549 T2		1st I.F. Transformer (BC)	1.50				
100-221 PL1,2, 3,4		Pilot Light Bulb- Type #45 (3 used)	.15	S-44153		Pulley & Shaft Assem.	.60
105-42 U1		R/C Network	.50	S-44159		Idler Pulley & Strip Assem.	1.35
113-8		6-32x1/4 lg. x1/4 AF Hex. Hd. Mach. Screw (2 used on 83-2944)	.03	S-44160		Pulley & Ring Assem. (Presence & Tone Control)	.03
113-10		6-32x3/16x1/4 AF Hex. Hd. Mach. Screw (4 used on 22-2944)	.03	S-44244		Tuning Shaft & Pulley Assem.	.75
114-78		8-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (3 used on S-47572 & 2 used on Ea. S-47575, 12-2660,12-2661, & 1 used on 12-2676)	.03	S-44775		Stereo Jack & Brkt. Assem.	.75
				S-44785		Shield Cover, Braid Lug & Strip Assem.	.50
				S-45586		Drive Cord & Eyelet Assem.-Tuning	.20
114-180		6-20x1/4x1/4 AF Hex. Hd. Self-Tap Screw (used on S-44785)	.03	S-47572		Plate, Brkt. Bushing & Stud Assem. Staking Idler Pulley & Brkt.	
				S-47575		Assem.	
114-200		6-32x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used)	.03	S-47576		Drive Cord & Eyelet Assem. Stereo Balance Pointer	

9D25 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
12-2386		Bandsw. Support Brkt. (Pt. of 85-633)	.20	22-2944	C8A,B, C,D,E	Three Section Variable Capacitor	4.25
12-2411		Capacitor Mtg. Brkt.	.20	22-3031	C20	.82 Mmfd. Gimmick-500V	.25
12-2443		Bandsw. Support Brkt. (Pt. of 85-633)	.20	22-3042	C47	39 Mmfd. Gimmick-500V	.20
12-2637		Dial Scale Ext. Brkt.	.10	22-3097	C42	120 Mmfd. Mica-500V	.35
12-2660		Dial Scale Support Brkt.	.30	22-3133	C45	10 Mfd. Electrolytic-300V	1.75
12-2661		Plate Support Brkt.	.10	43-417		Socket Terminal Housing (Male)	
12-2676		Background Support Brkt.	.05	43-419		Socket Terminal Housing (Male)	.35
17-149		Cable Clamp	.05				
19-249		Coil Mtg. Clip (2 used)	.05				
20-355	L3	FM Antenna Coil	.20				
22-3	C4, 9, 23, 24, 26, 27, 30, 31	.01 Ceramic Disc.-500V (8 used)	.30	44-33		Connector Jack (2 Pt. of S-44775)	.15
22-5	C15-, 29	100 Mmfd. Ceramic Disc.-500V (2 used)	.25	52-870		Two Conductor Shielded Lead (used on S-44775)	
22-14	C25-, 49	.0047 Mfd. Ceramic Disc.-500V (2 used)	.25	54-139		3/8-32x9/16 Palnut (1 Mt. Ea. 63-4410, 4411, 4460, 4631 & 4632)	.03
22-16	C34	470 Mmfd. Ceramic Disc.-500V	.25	54-271		6-32x1/4 Palnut (1 used on Ea. 95-1102, 1150, 1153, 1251 & S-44785)	.03
22-17	C32 , 64, 65	.001 Mfd. Ceramic Disc.-1000V (3 used)	.25	57-2596		R.F. Plate	1.65
22-18	C28 , 44, 51	.002 Mfd. Ceramic Disc.-500V (3 used)	.25	59-341		Dial Pointer	.75
22-1669	C11	100 Mmfd. Ceramic Capacitor-500V	.25	59-355		Stereo Balance Pointer	
22-1852	C3	7.5 Mmfd. Ceramic Capacitor-500V	.25	63-1573 R7		2700 Ohm Resistor 1W Ins. 10%	.25
22-1888	C10 , 21	.001 Mfd. Ceramic Capacitor-500V (2 used)	.25	63-1723		33 Ohm Resistor 1/2W Ins. 20%	.17
22-2302	C53	470 Mmfd. Ceramic Capacitor-500V	.25	63-1730		47 Ohm Resistor 1/2W Ins. 20%	.17
22-2370	C17 , 22	50 Mmfd. Ceramic Capacitor-500V (2 used)	.25	63-1744		100 Ohm Resistor 1/2W Ins. 20%	.17
22-2372	C12 , 13, 14	22 Mmfd. Ceramic Capacitor-500V	.25	63-1757		220 Ohm Resistor 1/2W Ins. 10%	.17
22-2411	C50	10 Mmfd. Ceramic Disc. Capacitor-500V	.25	63-1758		220 Ohm Resistor 1/2W Ins. 20% (3 used)	.17
22-2630	C19	19 Mmfd. Ceramic Capacitor-500V	.25	63-1765		330 Ohm Resistor 1/2W Ins. 20% (2 used)	.17
22-2670	C52 , 54	.0033 Mfd. Ceramic Disc. Capacitor-500V (2 used)	.25	63-1772		470 Ohm Resistor 1/2W Ins. 20%	.17
22-2703	C2, L6	220 Mmfd. Ceramic Capacitor-500V (2 used)	.25	63-1778		680 Ohm Resistor 1/2W Ins. 10% (2 used)	.17
22-2732	C7, 1, 8	1000 Mmf. Feed Thru Capacitor-500V (4 used)	.30	63-1779		680 Ohm Resistor 1/2W Ins. 20%	.17
22-2780	C33 , 36, 43	.1 Mfd. Paper Capacitor 200V	.30	63-1785		1 K Ohm Resistor 1/2W Ins. 10%	.17
22-2792	C1, 6, 37, 3, 8	.047 Mfd. Paper Capacitor-200V (4 used)	.30	63-1786		1 K Ohm Resistor 1/2W Ins. 20%	.17
22-2794	C35	.047 Mfd. Paper Capacitor-600V	.30	63-1796		1800 Ohm Resistor 1/2W Ins. 10%	.17
22-2795	C46	.047 Mfd. Paper Capacitor-200V	.25	63-1800		2200 Ohm Resistor 1/2W Ins. 20%	.17
22-2809	C48	.022 Mfd. Paper Capacitor-600V	.30	63-1803		2700 Ohm Resistor 1/2W Ins. 10% (2 used)	.17
22-2815	C55, 56	.01 Mfd. Paper Capacitor 600V (2 used)	.25	63-1819		6800 Ohm Resistor 1/2W Ins. 5%	.34
22-2819	C63, 66	.0068 Mfd. Paper Capacitor-200V (2 used)	.25	63-1827		10 K Ohm Resistor 1/2W Ins. 10% (2 used)	.17
22-2825	C57, 58, 59, 6, 62	.0047 Mfd. Paper Capacitor-200V (4 used)	.25	63-1834		15 K Ohm Resistor 1/2W Ins. 10%	.17
22-2831	C61, 62	.0033 Mfd. Paper Capacitor-200V (2 used)	.25	63-1835		15 K Ohm Resistor 1/2W Ins. 20%	.17
22-2927	C5	56 Mmfd. Ceramic Disc.-500V	.25	63-1841		22 K Ohm Resistor 1/2W Ins. 10%	.17
22-2939	C39, -40, 41	680 Mmf. Ceramic Disc.-500V (5 used)	.25	63-1842		22 K Ohm Resistor 1/2W Ins. 20%	.17
				63-1856		47 K Ohm Resistor 1/2W Ins. 20%	.17
				63-1859		56 K Ohm Resistor 1/2W Ins. 10% (2 used)	.17

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
63-1861		68 K Ohm Resistor 1/2W Ins. 5%	.34	83-1884		Antenna Terminal Strip	-.30
63-1862		68 K Ohm Resistor 1/2W Ins. 10% (2 used)	.17	83-2132		Single Lug Terminal Strip	-.05
63-1866		82 K Ohm Resistor 1/2W Ins. 10% (4 used)	.17	83-2135		4 Lug Terminal Strip	-.10
63-1869		100 K Ohm Resistor 1/2W Ins. 10%	.17	83-2307		4 Lug Terminal Strip (2 used)	-.10
63-1870		100 K Ohm Resistor 1/2W Ins. 20% (2 used)	.17	83-2522		6 Lug Terminal Strip	-.10
63-1872		120 K Ohm Resistor 1/2W Ins. 5%	.34	83-2612		2 Lug Terminal Strip	-.05
63-1876		150 K Ohm Resistor 1/2W Ins. 10% (2 used)	.17	83-2617		6 Lug Terminal Strip	-.10
63-1880		180 K Ohm Resistor 1/2W Ins. 10% (2 used)	.17	83-2618		8 Lug Terminal Strip	-.10
63-1884		220 K Ohm Resistor 1/2W Ins. 20%	.17	83-2627		2 Lug Terminal Strip	-.05
63-1887		270 K Ohm Resistor 1/2W Ins. 10%	.17	83-2628		Single Lug Terminal Strip	-.05
63-1894		390 K Ohm Resistor 1/2W Ins. 10% (4 used)	.17	83-2641		3 Lug Terminal Strip	-.10
63-1911		1 Megohm Resistor 1/2W Ins. 10%	.17	83-2642		5 Lug Terminal Strip	-.10
63-1912		1 Megohm Resistor 1/2W Ins. 20%	.17	83-2649		2 Lug Terminal Strip	-.05
63-1926		2.2 Megohm Resistor 1/2W Ins. 20% (3 used)	.17	83-2712		Terminal Strip (Loop Antenna)	-.20
63-1940		4.7 Megohm Resistor 1/2W Ins. 20% (2 used)	.17	83-2964		6 Lug Terminal Strip (2 used)	-.10
63-1960		15 Megohm Resistor 1/2W Ins. 10%	.17	83-2972		Pointer Support Strip (used on S-44159)	1.00
63-4410 R5A,B		Dual Tone Control-Treble	2.75	83-3007	S1,2	Insulating Strip	-.05
63-4411 R4A,B		Dual Presence Control	2.75	85-633		Bandswitch	
63-4414 R1,2A		2 K Ohm Resistor 7W 10%	.90	86-303		Socket Terminal (16 used)	.04
63-4460 R6A,B		Bass Tone Control & A.C. Switch	3.50	94-946		R.F. Plate Mtg. Bushing (4 used)	.03
63-4631 R3A,B		Dual Loudness Control	2.75	95-1102 T5		3rd I.F. Transformer (BC)	3.00
63-4632 R2B,C		Stereo-Balance Control		95-1150 T1,4		1st & 3rd I.F. Transformer (FM)	3.50
73-39		8-32x1/8 Headless Set Screw (2 Pt. of S-47575)		95-1153 T6		Discriminator Transformer (FM)	3.50
73-115		8-32x3/8 Slab Hd. Set Screw (2 Pt. of S-40695)	.04	95-1251 T3		2nd I.F. Transformer (FM & BC)	3.00
78-788		Wafer Tube Socket (9 Contact) (2 used)	.40	95-1549 T2		1st I.F. Transformer (BC)	1.50
78-850		Molded Tube Socket (9 Contact) (2 used)	.40	100-221 PL1,2, 3,4		Pilot Light Bulb-Type #45 (3 used)	.15
78-953		Wafer Tube Socket (9 Contact)	.25	105-42 U1		R/C Network	.50
78-1073		Wafer Tube Socket (7 Contact) (3 used)	.25	113-8		6-32x1/4 x1/4 AF Hex. Hd. Mach. Screw (2 used on 83-2628)	.03
78-1099		3 Contact Socket	.20	113-10		6-32x3/16x1/4 AF Hex. Hd. Mach. Screw (4 used on 22-2944)	.03
78-1119		Dual Pilot Light Socket & Wire	.60	114-78		8-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (3 used on S-47572 & 2 used on Ea. S-47575, 12-2660, 2661 & 1 used on 12-2676)	.03
78-1120		Pilot Light Socket & Wire	.25	114-180		6-20x1/4x1/4 AF Hex. Hd. Self-Tap Screw (used on S-44785)	.03
78-1143		Wafer Tube Socket (7 Contact)	.20	114-200		6-32x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used)	.03
80-69		Dial Cord Tension Spring (used on S-45586)	.15	114-643		6-20x5/8x1/4 AF Hex. Hd. Self-Tap Screw (4 used)	.03
80-209		Dial Cord Tension Spring (1 used on Ea. S-40013, S-47576 & S-44152)	.03	114-652		8-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used on S-44159)	.03
80-444		Tuner Arm Tension Spring	.05	125-17		Rubber Grommet (4 used)	.03
80-780		Iron Core Tension Spring (2 used)	.05	125-73		Rubber Grommet (2 used)	.10
80-1091		Dial Cord Tension Spring (used on S-44151)	.08	126-797		Tube Shield	.10
80-1142		Ground Spring	.20	126-892		Pilot Light Shield	.05
80-1333		Tuner Arm Stop Spring		148-149		Tuner Arm	.10
83-1475		Armite Strip	.03	149-64		Iron Core & Spring (2 used)	.75

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
149-211		Iron Core (1 Pt. of Ea. S-41087 & S-41088)	.10	S-44151		Drive Cord & Eyelet Assem. (Dial Pointer)	.15
188-148		Retaining Ring (2 used on S-44153)	.03	S-44152		Drive Cord & Eyelet Assem. Presence-Tone	
188-149		Retaining Ring (used on S-44122)	.03	S-44153		Control	.15
188-177		Clamping Ring (1 Pt. of Ea. S-44160)	.03	S-44159		Pulley & Shaft Assem.	.60
188-221		Retaining Ring (used on S-44244)	.04	S-44160		Idler Pulley & Strip Assem.	1.35
S-15691 L7		FM Oscillator Coil Assem.	.50	S-44244		Pulley & Ring Assem.	
S-15743 L4		FM Detector Coil Assem.	.80	S-44775		Presence & Tone Control	.30
S-18812 L2		Loop Loading Coil Assem.	.80	S-44785		Tuning Shaft & Pulley Assem.	.75
S-40013		Drive Cord & Eyelet Assem. (Idler)	.15	S-45586		Stereo Jack & Brkt. Assem.	.75
S-40695		Bushing, Cam & Pulley Assem.	1.25			Shield Cover, Braid, Lug & Strip Assem.	.50
S-41087 L6		Broadcast Oscillator Coil Assem.	1.00	S-47572		Drive Cord & Eyelet Assem.-Tuning	.20
S-41088 L5		Broadcast Detector Coil Assem.	1.00	S-47575		Plate, Brkt. Bushing & Stud Assem.-Staking	
S-41812		Oscillator Shield & Terminal Strip Assem.	.25	S-47576		Idler Pulley & Brkt Assem.	
S-44122		Pulley & Shaft Assem. (3 used)	.25			Drive Cord & Eyelet Assem.-Stereo-Balance	
						Pointer	

9D26 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
11-103		Line Cord & Plug	1.00	22-2703 C16		220 Mmf. Ceramic Disc. 500V	.20
12-1406		Tuner Arm Pivot Brkt. (2 used)	.05	22-2732 C6,24		Feed-Thru 1000/500 (2 used)	.30
12-2386		Bandsw. Support Brkt. (2 Pt. of 85-614)	.20	22-2782 C51,54		.1 Mfd. Paper-600V (2 used)	.45
12-2637		Dial Scale Extension Brkt.	.10	22-2792 C21,38,39		.047 Mfd. Paper-200V (3 used)	.30
12-2660		Dial Scale Support Brkt. (2 used)	.30	22-2794 C48,59,62		.047 Mfd. Paper-600V (3 used)	.30
12-2661		Plate Support Brkt.	.10	22-2797 C27		.047 Mfd. Paper-600V	.30
12-2676		Background Support Brkt.	.05	22-2813 C43,44,55,56		.01 Mfd. Paper-200V (4 used)	.25
19-249		Coil Mounting Clip	.05	22-2825 C34,36		.0047 Mfd. Molded-200V (2 used)	.25
20-337	L3,6	R.F. Choke Coil (2 used)	.25	22-2831 C50,58		.0033 Mfd. Paper-200V (2 used)	.25
20-682	L2	F.M. Antenna Coil	.25	22-2837 C46,61		.0022 Mfd. Paper-200V (2 used)	.30
22-3	C3,7,11,15,18,19,20,22,25,26,30,31,	.01 Mfd. Ceramic Disc.-500V (12 used)	.30	22-2943 C52		10 Mfd. Electrolytic 350V	1.85
22-5	C2,17,29	100 Mmf. Ceramic Disc.-500V (3 used)	.25	22-3019 C5A,5B,2	Section Variable 5C,5D	2 Section Variable	3.50
22-9	C45,53	100 Mmf. Ceramic Disc.-500V (2 used)	.25	43-422		Socket Terminal Housing (female)	.35
22-14	C23	.0047 Mfd. Ceramic Disc-500V	.25	44-33		Connector Jack (2 Pt. of S-44775)	.15
22-17	C32,40	.001 Mfd. Ceramic Disc.-41,42	.25	52-807		Shielded Lead (A.C. Sw.)	.40
22-18	C28,35	.0022 Mfd. Ceramic Disc.-49,57	.25	52-813		2 Conductor Shielded Lead (stereo)	.45
22-1156	C33	40 Mfd. Electrolytic-25V	.64	52-817		Shielded Lead	.70
22-1367	C14	50 Mmf. Ceramic-500V	.45	52-818		Shielded Lead	.70
22-1506	C9	22 Mmf. Ceramic-500V	.25	54-139		3/8-32x9/16 Palnut (1 Mts. Ea. 63-4411,4460, 4476 & 85-631)	.03
22-1766	C12	.68 Mmf. Ceramic-500V	.20	54-140		3/8-32x9/16 Hex. Nut (Mts. 63-4383)	.03
22-1852	C1	7.5 Mmf. Ceramic-500V	.25	54-271		6-32x1/2 Palnut (1 used on Ea. 95-1102, 1150, 1153,1250, 1251)	.03
22-1888	C8,10,13	.001 Mfd. Ceramic-500V (3 used)	.25				
22-2321		.220 Mmf. Ceramic-500V (2 used)	.25				
22-2630	C4	19 Mmf. Ceramic-500V	.25				

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
58-169		7 Prong Plug	.20	78-1143		7 Contact Wafer Tube	.20
59-341		Dial Pointer	.75	80-69		Socket	.15
61-207		Plastic Pulley (Pt. of Ea. S-44160)	.25	80-209		Dial Cord Tension Spring	
63-1216		10 K Ohm 1W Ins. 20%	.25	80-444		Dial Cord Tension Spring (4 used)	.03
63-1730		47 Ohm 1/2W Ins. 20%	.17	80-780		Tuner Arm Tension Spring	.05
63-1743		100 Ohm 1/2W Ins. 10%	.17			Iron Core Tension Spring	.05
63-1758		220 Ohm 1/2W Ins. 20% (6 used)	.17	80-1091		Dial Cord Tension Spring	.08
63-1778		680 Ohm 1/2W Ins. 10% (3 used)	.17	80-1142		Ground Spring	.20
63-1786		1000 Ohm 1/2W Ins. 20%	.17	80-1249		Shaft Friction Spring	.15
63-1796		1800 Ohm 1/2W Ins. 10%	.17	80-1250		Sleeve Friction Spring	.15
63-1799		2200 Ohm 1/2W Ins. 10%	.17	80-1257		Limiter Spring	.10
63-1800		2200 Ohm 1/2W Ins. 20%	.17	83-2123		Ant. Terminal Strip(FM)	.25
63-1827		10 K Ohm 1/2W Ins. 10%	.17	83-2132		1 Lug Terminal Strip	.05
63-1835		15 K Ohm 1/2W Ins. 20%	.17	83-2135		4 Lug Terminal Strip	.10
63-1841		22 K Ohm 1/2W Ins. 10% (2 used)	.17	83-2216		7 Lug Terminal Strip	.15
63-1848		33 K Ohm 1/2W Ins. 10% (4 used)	.17	83-2307		4 Lug Terminal Strip	.10
63-1855		47 K Ohm 1/2W Ins. 10% (2 used)	.17	83-2627		2 Lug Terminal Strip	.05
63-1856		47 K Ohm 1/2W Ins. 20%	.17	83-2639		3 Lug Terminal Strip (4 used)	.05
63-1866		82 K Ohm 1/2W Ins. 10% (4 used)	.17	83-2715		3 Lug Terminal Strip	.05
63-1869		100 K Ohm 1/2W Ins. 10%	.17	83-2963		4 Lug Terminal Strip	.10
63-1870		100 K Ohm 1/2W Ins. 20% (4 used)	.17	83-2965		7 Lug Terminal Strip (2 used)	.10
63-1876		150 K Ohm 1/2W Ins. 10% (4 used)	.17	83-3075		Bearing Strip-Loudness Control (2 used)	.03
63-1884		220 K Ohm 1/2W Ins. 20%	.17	85-614	S1	Band Switch	6.00
63-1901		560 K Ohm 1/2W Ins. 10% (4 used)	.17	85-631	S2	Phono-Tape-Stereo-Switch	
63-1919		1.5 Megohm 1/2W Ins. 20% (2 used)	.17	86-303		Socket Terminal (9 used on 43-422)	.04
63-1925		2.2 Megohm 1/2W Ins. 10% (2 used)	.17	94-946		RF Plate Mtg. Bushing (4 used)	.03
63-1926		2.2 Megohm 1/2W Ins. 20%	.17	95-1102	T5	3rd I.F. Transformer-BC	3.00
63-1929		2.7 Megohm 1/2W Ins. 10%	.17	95-1150	T1,4	1st & 3rd I.F. Transformer-FM (2)	3.50
63-1940		4.7 Megohm 1/2W Ins. 20% (2 used)	.17	95-1153	T6	Discriminator Transformer (FM)	3.50
63-4383 R1A,1B		Dual Loudness Control	2.75	95-1250	T2	1st I.F. Transformer (BC)	3.00
63-4411 R3A,3B		Presence Control	2.75	95-1251	T3	2nd I.F. Transformer (BC) & (FM)	3.00
63-4414 R2		2000 Ohm 10W WW 10%	.90	100-221	PL1,2,	Pilot Light Bulb-Type #45	.15
63-4460 R5A,5B		Bass Tone Control & A.C. Sw.	3.50	105-42	U1	R/C Network	.50
63-4476 R4A,4B		Tone Control Treble	2.75	113-8		6-32x1/4 Hex. Hd. Mach. Screw-Lockwasher Att. (2 Mt. 85-614)	.03
69-320		2-64x5/16 Rd. Hd. Mach. Screw (1 used on Ea. 83-3075)	.03	113-10		6-32x3/16x1/4 Hex. Hd. Mach. Screw-Lockwasher Att. (6 used on 22-3019)	.03
73-115		8-32x3/8 Slab Hd. Set Screw-cuppoint (2 Pt. of S-40695)	.04	114-26		8-18x1/4x1/4 Hex. Hd. Self-Tap Screw (6 Mt. S-40799)	.03
78-788		9 Contact Wafer Tube	.04	114-78		8-18x5/16x1/4 Hex. Hd. Self-Tap Screw (1 used on 12-2676, 3 on S-44034, & 2 on Ea. 12-2660 & 2661)	.03
78-846		9 Contact Wafer Tube	.40			8-18x5/16x1/4 Hex. Hd. Self-Tap Screw (4 used)	.03
78-850		9 Contact Molded Tube	.25	114-643		6-20x5/8x1/4 Hex. Hd. Self-Tap Screw (2 used on S-44159)	.03
78-916		7 Contact Wafer Tube	.40	114-652		Rubber Grommet (4 used)	.03
78-1073		7 Contact Wafer Tube	.15	125-17		Rubber Grommet (1 used on Ea. S-15691 & 15743)	.10
78-1074		7 Contact Molded Tube	.25	125-73		Strain Relief Grommet (used on 11-103)	.20
78-1099		3 Contact Socket	.20	125-96		Tube Shield	.20
78-1119		Dual Pilot Light Socket & Wire	.60	126-622		Tube Shield (2 used)	.10
78-1120		Pilot Light Socket & Wire	.25	126-797		Pilot Light Shield	.05
78-1142		9 Contact Wafer Tube	.25	126-892		Tuner Arm	.50
		Socket	.25	148-149			

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
149-64		Iron Core & Spring (2 used)	.40	S-44151		Drive Cord & Eyelet Assem. - Pointer	.15
149-211		Iron Core (Pt. of S-46288)	.10	S-44152		Drive Cord & Eyelet Assem. (1) Presence	.15
188-148		Ret. Ring (2 used on S-44153)	.03			(2) Tone Control	.15
188-149		Ret. Ring (1 used on Ea. S-44122)	.03	S-44153		Pulley & Shaft Assem.	.60
188-177		Clamping Ring (1 Pt. of Ea. S-44160)	.03	S-44159		Idler Pulley & Strip Assem.	1.35
188-221		Retaining Ring (used on S-44244)	.04	S-44160		Pulley & Ring Assem. (3 used)	.30
199-213		Paper Sleeve	.03	S-44244		Tuning Shaft & Pulley Assem.	.75
S-15691 L4		FM Oscillator Coil	.50	S-44263		Drive Cord & Eyelet Assem.-Idler	.15
S-15743 LT		FM Detector Coil	.80			Stereo Jack & Brkt.	
S-40695		Bushing, Cam & Pulley Assem.	1.25	S-44775		Assem.	.75
S-40799		Chassis Bottom Plate & Spring Assem.	1.50	S-44975		Drive Cord & Eyelet Assem.-Gang	.15
S-44034		Plate, Brkt. & Bushing Assem.	.90	S-45360		Bandsw. Shield & Terminal Strip	.50
S-44122		Pulley & Shaft Assem.		S-46288 L5		BC Osc. Coil	1.00

CABINET PARTS

SFII2E,R,W CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
14-2566E	Record Player Cabinet- Model SF112E		74-138	Protective Screen	.40
14-2566R	Record Player Cabinet- Model SF112R		83-765	Armitite Strip (3 used)	.03
14-2566W	Record Player Cabinet- Model SF112W		83-2790	Phono Shipping Strip (2 used)	.05
16-1519	Packing Carton		97-519	Stud (Hinge Mtg.) (8 Pt. of 14-2566R & W)	
19-169	Record Changer Mtg. Clip	.10	97-520	Stud (Hinge Mtg.) (8 Pt. of 14-2566E)	
19-346	Mtg. Clip	.30	112-943	6-32x1" Swedge Hd. Mach. Screw (2 Pt. of 14-2566E,R, & W)	.03
22-3085	2.2 Mfd. Ceramic Disc. Capacitor-500V (Pt. of 49-881)	.75	112-1117	8-32x3/4 Swedge Hd. Mach. Screw (4 Pt. of 14-2566E,R, & W)	.05
23-27	Speaker Strip Connector	.03	112-1203	#8x1" Phils. Flat Hd. Self-Tap Screw (10 used on 14-2566 E,R & W)	
40-208	Lid Support Hinge (Pt. of 14-2566R & W)	1.25	112-1214	6X3/4 Phils. Flat Hd. Self-Tap Screw (2 Pt. of 14-2566 E,R & W)	.05
40-209	Lid Support Hinge (Pt. of 14-2566E)	1.25	112-1226	Record Changer Mtg. Screw (2 used)	.20
46-2113	Volume Control Knob (Stereo)	.25	114-251	Chassis Mtg. Screw (4 used)	.03
46-2114	Control Knob (2 used)	.50	114-669	6X1/2x1/4 AF Hex. Hd. Self-Tap Screw (2 Mt. 19-346)	.03
49-877	7 1/2" PM Speaker	6.50	142-92	Dual Pickup Cartridge-Sapphire-Sapphire	15.50
49-881	3 1/2" PM Speaker	5.50	166-86	Polyethelene Bumper (4 Pt. of 14-2566E,R & W)	.05
54-10	32x1/4 Hex. Nut (4 Pt. of 14-2566E,R & W)	.03	169-106	4 Speed Record Changer	.03
54-30	32x5/16 Hex. Nut (4 Mt. 4-9-877)	.03	188-54	Knob Retaining Ring (Pt. of S-46163)	.03
54-34	32x1/4 Hex. Nut (2 Pt. of 14-2566E,R, & W & 2 Mt. 4-9-881)	.03	202-1477	Instruction Book	.40
54-312	Speed Nut Tinnerman (2 Pt. off 14-2566E,R, & W)	.03	S-46112	45 RPM Record Adapter	5.00
57-2498	Emblem Plate (Pt. of 14-2566E, R & W)	.35	S-46163	Knob & Ring Assem. (Volume Control)	.25
57-2561	Name Plate (Stereophonic) (Pt. of 14-2566E,R, & W)	1.00			

SFII4E,R,W CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
14-2565W	Record Player Cabinet-SF114W		57-2498	Emblem Plate (Pt. of Cabinet)	.35
14-2565E	Record Player Cabinet-SF114E		57-2561	Name Plate (Pt. of Cabinet)	1.00
14-2565R	Record Player Cabinet-SF114R		57-2750	Shield Plate	.25
16-1518	Packing Carton		83-765	Armit Strip (3 used)	.03
19-169	Record Changer Mtg. Clip (2 used)	.10	83-2535	Phono Shipping Strip (2 used)	.03
19-346	Mtg. Clip (mts. S-46112)	.30	112-788	8-32x1 1/8 Swedge Hd. Mach.	
22-2945	Electrolytic 3 MFD/30V (Pt. of 49-846)	1.25		Screw (4 Pt. of Cabinet)	.03
23-27	Speaker Strip Connector	.03	112-943	6-32x1 Swedge Hd. Mach. Screw (2 Pt. of Cabinet)	.03
40-202	Lid Support Hinge (Pt. of 14-2565R & W)	.60	112-1226	Record Changer Mtg. Screw (2 Pt. of 169-106)	.20
40-203	Lid Support Hinge (Pt. of 14-2565E)	.60	114-386	Chassis Mtg. Screw (4 used)	.10
46-2113	Vol. Control Knob (Stereo)	.25	114-669	6x1/2x1/4 Hex. Hd. Self-Tap Screw (2 used)	.03
46-2114	Tone Control Knob	.50	126-780	Heat Shield	.25
49-846	3 1/2" PM Tweeter Speaker	7.00	142-92	Dual Pickup Cartridge-Sapphire-Sapphire	15.00
49-855	10" PM Speaker	15.00	188-54	Knob Clamping Ring (Pt. of S-46163)	.03
54-10	8-32x1/4 Hex. Nut (4 Pt. of cabinet)	.03	202-1478	Instruction Book	.40
54-34	6-32x1/4 Hex. Nut (2 Pt. of cabinet & 2 Mt. 49-846)	.03	169-106	4 Speed Record Changer (See changer parts list for components)	
54-312	Speed Nut (2 Pt. of Cabinet)	.03	S-46112	45 RPM Record Adapter	5.00
54-424	8-32x11/32 Hex. Palnut (4 Mt. 49-855)	.03	S-46163	Knob & Ring Assem. (Vol. Control)	.25

SFDI22E,R,W CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
14-2824E	Console Cabinet - Model SFD122E		57-2750	Shield Plate	
14-2824R	Console Cabinet - Model SFD122R		83-765	Armit Strip (3 used)	.03
14-2824W	Console Cabinet - Model SFD122W		83-2535	Phono Shipping Strip	.03
16-1629	Packing Carton		86-237	Connector Terminal (4 Pt. of S-23471)	.03
19-169	Retaining Clip (2 used)	.10	86-254	Connector Terminal (2 Pt. of S-23471)	.05
19-346	Mounting Clip (for S-46112)	.30	112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (4 Pt. of cabinet)	.03
22-2945	3 Mfd. Electrolytic-30V (Pt. of 49-856)	1.25	112-943	6-32x1 Swedge Hd. Mach. Screw (4 Pt. of cabinet)	
40-202	Lid Support Hinge (Pt. of 14-2824R & W)	.60	112-1226	Record Changer Mtg. Screw (2 used)	.20
40-203	Lid Support Hinge (Pt. of 14-2824E)	.60	114-329	6-18x3/8x1/4 Hex. Hd. Self-Tap Screw (2 used on 5B23)	.03
40-233	Lid Hinge (2 Pt. of 14-2824R & W)	.60	114-386	Chassis Mtg. Screw (4 used)	.10
40-234	Lid Hinge (2 Pt. of 14-2824E)	.60	114-669	6-18x1/2x1/4 Hex. Hd. Self-Tap Screw (2 fasten 19-346)	.03
46-2263	Control Knob (4 used)		126-780	Heat Shield	.25
46-2287	Vol. Control Knob (Stereo)		142-92	Pickup Cartridge (Sapphire-Sapphire-Pt. of 169-106)	21.50
48-870	12" PM Speaker	16.00	169-106	4 Speed Record Changer (see changer parts list for components)	
49-856	5" PM Speaker	7.00			
50-141	Trim Moulding (Pt. of cabinet)				
54-10	8-32x1/4 Hex. Nut (4 Pt. of cabinet)	.03			
54-34	6-32x1/4 Hex. Nut (4 Pt. of cabinet & 4 Mt. 49-856)	.03	188-54	Knob Clamping Ring	.03
54-312	Speed Nut (2 Pt. of cabinet)	.03	202-1519	Instruction Book	
54-424	8-32x11/32 Hex. Palnut - Washer Type (4 Mt. 49-870)	.03	S-23471	Speaker Lead & Terminal Assem.	.40
57-2498	Emblem Plate (Pt. of cabinet)	.35	S-26657	Terminal Strip (1 Pt. of Ea. 49-856 & 870)	.20
57-2561	Name Plate-Stereophonic- (Pt. of cabinet)	1.00	S-46112	45 R.P.M. Record Adapter	5.00
			S-47323	Knob & Ring Assem. (Volume)	

SF174R,W CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
12-2608	Indicator Light Mtg. Brkt.	.15	86-237	Connector Terminal (8 used)	.03
12-2664	Dial Scale Clamp Brkt.	.20	86-254	Connector Terminal (4 used)	.05
14-2426R	Console Cabinet-Model SF174R		86-255	Spade Terminal	.03
14-2426W	Console Cabinet-Model SF174W		86-312	Terminal Shakeproof	.03
16-1469	Packing Carton		90-367	Indicator Light Tube	.05
19-169	Record Changer Mtg. Clip (2 used)	.10	93-1358	Felt Washer	.05
19-346	Mounting Clip (Mts. S-46112)	.30	93-1359	Felt Washer (2 used)	.03
22-2945	3 Mfd. Electrolytic-30V (1 Pt. of Ea. 49-846 & 49-856)	1.25	93-1360	Felt Washer	.05
26-609	Dial Scale	2.25	100-221	Indicator Light Bulb-Type #45	.15
26-622	Presence & Tone Indicator Dial	1.25	112-789	8-32x1 3/8 Wedge Hd. Mach.	
40-225	Lid Support Hinge (Pt. of 14-2426R & W)	2.50	112-943	Screw (8 Pt. of 14-2426R & W)	.03
46-1997	Volume Control Knob (Remote)	.50	112-1226	6-32x1 Swedge Hd. Mach. Screw (6 Pt. of 14-2426 R & W)	.03
46-2080	Knob (Radio Phono-Record Compensator)	.75	114-78	Record Changer Mtg. Screw (2 used)	.20
46-2097	Volume Control Knob	.75	114-80	6-18x5/16x1/4 Hex. Hd. Self- Tap Screw (4 used)	.03
49-846	3 1/2" PM Tweeter Speaker	7.00	114-329	Chassis Mtg. Screw (3 Mt. 3B30)	.05
49-852	1 1/2" PM Speaker	16.00	114-386	6-18x3/8x1/4 AF Hex. Hd. Self- Tap Screw (1 used on 4B22Z & 2 on 12-2608)	.03
49-853	1 1/2" PM Speaker	16.00	114-423	Chassis Mtg. Screw (4 used)	.10
49-856	5" PM Speaker	7.00	114-428	8-18x5/16 Hex. Hd. Self-Tap Screw (1 used on Ea. 80-1233)	.03
54-10	8-32x1/4 Hex. Nut (8 Pt. of 14-2426R & W)	.03	114-453	6-18x5/8 Slotted Hex. Washer Hd. Self-Tap Screw (10 used)	.10
54-34	6-32x1/4 Hex. Nut (6 Pt. of 14-2426R & W & 2 Mt. 49-846 & 4 Mt. 49-856)	.03	114-636	8-18x3/8 Special Hex. Hd. Self-Tap Screw (Flat Washer Att.) (6 used)	.05
54-312	Speed Nut (2 Pt. of 14-2426R & W)	.03	114-669	6x1/2x1/4 AF Hex. Hd. Self- Tap Screw (2 used)	.03
54-424	8-32x11/32 Hex. Palnut (4 Mt. Ea. 49-852 & 853)	.03	126-900	Pilot Light Shield (2 used)	.25
57-2498	Emblem Plate (Pt. of 14-2426R & W)	.35	138-183	Metal Grille (Pt. of 14-2426R & W)	1.50
57-2561	Name Plate (Pt. of 14-2426R & W)	1.00	142-92	Dual Pickup Cartridge Sapphire- Sapphire	15.50
57-2672	Radio Dial Escutcheon	8.00	159-91	Plug Button (2 used)	.10
57-2750	Shield Plate	.10	159-105	Snap Fastener (8 used)	.05
78-1121	Indicator Light Socket & Wire	.60	169-107	4 Speed Record Changer	
80-1003	Knob Retaining Spring (1 Pt. of Ea. S-46162)	.10	171-19	Indicator Light Lens	.40
80-1233	Crystal Retaining Spring (4 used)	.10	188-54	Knob Clamping Ring(Pt. of S-44166)	.03
83-765	Armitite Strip (4 used)	.03	192-254	Dial Crystal	1.75
83-1475	Armitite Strip (2 used)	.03	202-1481	Instruction Book	.40
83-2535	Phono Shipping Strip	.03	S-26657	Terminal Strip Assem. (Pt. of 49-856)	.20
83-2811	Rubber Strip	.10	S-40420	Antenna Assem.	1.10
83-2858	Felt Strip	.03	S-44166	Tuning Knob & Ring Assem.	.75
83-2931	Rubber Channel Strip (2 used)	.10	S-46112	45 RPM Record Adaptor	5.00
83-2932	Rubber Channel Strip (2 used)	.20	S-46162	Knob & Retaining Ring	.75
83-2974	Dial Background Strip	.50			

SFD220R,M CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-798	Cabinet Back - Model SFD220R		40-233	Lid Hinge (2 pt. of cabinet)	.60
2-799	Cabinet Back - Model SFD220M		43-332	Socket Contact Housing	.15
14-2850M	Console Cabinet - Model SFD220M		46-2263	Control Knob (5 used)	
14-2850R	Console Cabinet - Model SFD220R		46-2284	Balance Control Knob	
16-1660	Packing Carton		49-781	12" PM Speaker	16.00
19-169	Retaining Clip (2 used on 169-108)	.10	49-872	3 1/2" PM Speaker	
19-346	Mounting Clip (for S-46112)	.30	49-896	5 1/4" PM Speaker	
22-2945	3 Mfd. Electrolytic- 30V	1.25	49-906	12" PM Speaker	
40-225	Lid Support Hinge (pt. off cabinet)	2.50	52-881	Speaker Cable	
			54-10	8-32x1/4 Hex. Nut (8 pt. of 14-2850M & R)	.03
			54-12	6-32x5/16 Hex. Nut (1 used on S-26657, 2 on 49-782, & 4 on 49-896)	.03

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
54-34	6-32x1/4 Hex. Nut (6 pt. of 14-2850M & R)	.03	86-303	Socket Terminal (2 used on 43-332)	
54-312	Speed Nut (2 pt. of 14-2850M & R)	.03	112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (8 pt. of 14-2850M & R)	.04
54-424	8-32x11/32 Hex. Palnut Washer Type (4 used on Ea. 49-871 & 906)	.03	112-943	6-32x1 Swedge Hd. Mach. Screw (6 pt. of 14-2850 M & R)	.03
57-2498	Emblem Plate (pt. of 14-2850M & R)	.35	112-1226	Record Changer Mtg. Screw (2 used)	
57-2813	Shield Plate		114-40	Chassis Mtg. Screw (4 used)	.20
57-2814	Control Panel		114-329	6-18x3/8x1/4 Hex. Hd. Self-Tap Screw (2 Mt. S-47257)	.03
57-2815	Name Plate (Extended Stereo - pt. of 14-2850M & R)		114-386	Chassis Mtg. Screw (4 Mt. Power supply)	.03
58-226	5 Prong Plug	.15	114-453	6-18x5/8 Slot Hex. Hd. Self-Tap Screw (8 Mt. & 2-798 & 2-799)	.10
72-136	4-40x3/8 Phils. Flat Hd. Mach. Screw (3 used on 57-2814)	.04	114-669	6-18x1/2x1/4 Hex. Hd. Self-Tap Screw (2 Mt. 19-346)	.10
78-1036	5 Contact Socket (2 used)	.25	142-93	Dual Pickup Cartridge (pt. of 169-108)	.03
83-765	Armit Strip (5 used)	.03	169-108	4 Speed Record Changer (see changer parts list for components)	37 .50
83-1475	Armit Strip (2 used)	.03	202-1530	Instruction Book	
83-2535	Phono Shipping Strip (2 used)	.03	S-26657	Terminal Strip	.40
83-3226	Locking Strip		S-46112	45 R.P.M. Record Adapter	.20
83-3233	Control Panel Trim Strip		S-47257	Brkt. & Socket Assem.	5 .00
86-237	Connector Terminal (10 used)	.03			
86-254	Connector Terminal (3 used)	.05			
86-270	Terminal (2 Pt. of S-26657)	.03			

SF280R,M CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-784	Cabinet Back-Model SFD280M	5.00	54-12	6-32x5/16 Hex. Nut (2 on Ea. 49-782 & 896)	-.03
2-785	Cabinet Back-Model SFD280R	5.00	54-34	6-32x1/4 Hex. Nut (4 Pt. of 14-2825M & R)	-.03
12-2608	Indicator Light Mtg. Brkt.	.05	54-312	Speed Nut (2 Pt. of 14-2825M & R)	-.03
12-2664	Dial Scale Clamp Brkt. (2 used)	.20	54-424	8-32x11/32 Hex. Palnut Washer Type (4 used on 49-852)	-.03
14-2825M	Console Cabinet- Model SFD280M		57-2498	Emblem Plate (Pt. of 14-1815M & R)	-.35
14-2825R	Console Cabinet-Model SFD280R		57-2561	Name Plate-Stereophonic (Pt. of 14-2825M & R)	1-00
16-1633	Packing Carton		57-2789	Radio Dial Escutcheon	
19-9	Cable Clip (used on S-17060)	.05	58-226	5 Prong Plug (2 used)	-.15
19-169	Retaining Clip (2 used on 169-106)	.10	78-1036	5 Contact Socket (2 Pt. of S-47257)	-.25
19-346	Mounting Clip (Mts. S-46112)	.30	78-1121	Indicator Light Socket & Wire	-.60
22-2774	.22 Mfd. - 200V 20%		80-1003	Knob & Ret. Spring (1 Pt. of Ea. S-46162)	-.10
22-2945	3 Mfd. Electrolytic - 30V	1.25	80-1333	Crystal Retaining Spring (3 used)	-.10
26-613	Dial Scale	2.25	83-765	Armit Strip (5 used)	-.03
26-622	Presence & Tone Indicator Dial (3 used)	1.25	83-1475	Armit Strip (2 used)	-.03
40-225	Lid Support Hinge (Pt. of 14-2825M & R)	2.50	83-2123	Antenna Terminal Strip	-.25
40-233	Lid Hinge (2 Pt. of 14-2825M & R)	.60	83-2535	Phono Shipping Strip (2 used)	-.03
43-332	Socket Contact Housing	.15	83-2811	Rubber Strip	-.10
43-333	Socket Contact Housing	.20	83-2858	Felt Strip	-.03
46-1997	Vol. Control Knob (remote)	.50	83-2931	Rubber Channel Strip (2 used)	-.10
46-2080	Knob (Bandsw. & Phono-Tape Sw.)	.75	83-2932	Rubber Channel Strip (2 used)	-.20
46-2097	Volume Control Knob	.75	83-2974	Dial Background Strip	-.50
49-782	3 1/2" PM Tweeter Speaker	4.50	86-30	Terminal (Pt. of S-17060)	-.03
49-852	12" PM Speaker	16.00	86-237	Connector Terminal (8 used)	-.03
49-896	5 1/4" PM Speaker	.25	86-254	Connector Terminal (5 used)	-.05
52-825	Ant. Lead Cable		86-255	Spade Terminal (1 Pt. of S-17060, & 2 used on 52-825)	-.03
52-880	Speaker Cable				
54-10	8-32x1/4 Hex. Nut (4 Pt. of 14-2825M & R)	.03			

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
86-270	Terminal (2 Pt. of Ea. S-26657)	.03	159-91	Plug Button (2 used on 14-2825M & R)	.10
86-303	Socket Terminal (1 used on 43-332, & 4 on 43-333)	.04	159-112	Snap Fastener (8 used on 83-2974)	.03
90-367	Indicator Light Tube	.05	169-106	4 Speed Record Changer	
93-1358	Felt Washer	.05	171-19	Indicator Light Lens	.40
93-1359	Felt Washer (2 used)	.03	188-54	Knob Clamping Ring	.03
93-1360	Felt Washer	.05	192-254	Dial Crystal	1.75
100-221	Indicator Light Bulb-Type 45	.15	202-697	FM Instruction Book	.10
112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (4 Pt. of 14-2825M & R)	.03	202-1521	Instruction Book	.50
112-943	6-32 x 1 Swedge Hd. Mach. Screw (4 Pt. of 14-2825M & R)	.03	S-17060	Wire & Terminal Assem. (FM Ant.)	.15
112-1226	Record Changer Mtg. Screw (2 used)	.20	S-26657	Terminal Strip (2 used)	.20
114-78	8-18x5/16x1/4 Hex. Hd. Self-Tap Screw (2 used on Ea. 12-2664)	.03	S-44166	Tuning Knob & Ring Assem.	.75
114-80	Chassis Mtg. Screw (3 Mt. Power Supply)	.05	S-44649	Antenna	1.50
114-329	6-18x3/8x1/4 Hex. Hd. Self-Tap Screw (1 used on Ea. 12-2608 & 19-9 & 2 on Ea. 52-825, 9D26 & S-47257)	.03	S-46162	Knob & Ret. Spring Assem. (Presence-Bass ON-OFF-Treble)	.75
114-386	Chassis Mounting Screw (4 used)	.10	S-47257	Brkt. & Socket Assem.	
114-423	8-18x5/16 Hex. Hd. Self-Tap Screw (1 used on Ea. 80-1233)	.03	114-636	8-18x3/8 Hex. Hd. Self-Tap Screw Flat Washer Att. (6 used on 57-2789)	.05
114-453	6-18x5/8 Slot Hex. Washer Hd. Self-Tap Screw (2 Mt. S-44649) & 6 Mt. 2-784 & 2-785	.10	114-669	6-18x1/2x1/4 Hex. Hd. Self-Tap Screw (2 used on 19-346)	.03
			126-900	Pilot Light Shield (2 used)	.25
			142-92	Dual Pickup Cartridge-Sapphire-Sapphire (Pt. of 169-106)	21.50

SFD283W,R,H CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-784	Cabinet Back	5.00	54-312	Speed Nut-Tinnerman (2 Pt. of 14-2845H, R & W)	.03
12-2608	Indicator Light Mtg. Brkt.	.05	54-424	8-32x11/32 Hex. Palnut (4 used on Ea. 49-904 & 49-905)	.03
12-2664	Dial Scale Clamp Brkt. (2 used)	.20	57-2498	Emblem Plate (Pt. of 14-2845H, R & W)	.35
14-2845H	Console Cabinet-Model SFD283H		57-2813	Radio Dial Escutcheon	8.00
14-2845R	Console Cabinet-Model SFD283R		57-2750	Shield Plate	.25
14-2845W	Console Cabinet-Model SFD283W		58-226	5 Prong Plug (Pt. of S-47260)	.15
16-1653	Packing Carton		78-1036	5 Contact Socket	.25
19-9	Cable Clip	.05	80-1003	Knob Retaining Spring (3 Pt. of S-46162)	.10
19-169	Retaining Clip (2 used on 169-107)	.10	80-1233	Crystal Retaining Spring (4 used)	.10
19-346	Mounting Clip (Mts. S-46112)	.30	83-765	Armite Strip (5 used)	.03
22-2945	3 Mfd. Electrolytic-30V	1.25	83-1475	Armite Strip (12 used)	.03
26-622	Presence & Tone Indicator Dial (3 used)	1.25	83-1884	Antenna Terminal Strip	.30
26-653	Dial Scale		83-2535	Phono Shipping Strip	.03
40-225	Lid Support Hinge (Pt. of 14-2845R & W)	2.50	83-2603	Rubber Strip	.05
40-226	Lid Support Hinge (Pt. of 14-2845H)	2.50	83-2858	Felt Strip	.03
40-233	Lid Hinge (2 Pt. of 14-2845R & W)	.60	83-2931	Rubber Channel Strip (2 used)	.10
40-234	Lid Hinge (2 Pt. of 14-2845H)	.60	83-2932	Rubber Channel Strip (2 used)	.20
43-332	Socket Contact Housing	.15	83-3230	Dial Background Strip	
46-2080	Knob (Bandsw.-Loudness)	.75	86-237	Connector Terminal (10 used)	.03
46-2097	Stereo Control Knob	.75	86-254	Connector Terminal (5 used)	.05
46-2284	Balance Control Knob		86-255	Spade Terminal (4 used)	.03
49-782	3 1/2" PM Tweeter Speaker	4.50	86-270	Terminal (2 Pt. of S-26657)	.03
49-896	5 1/4" PM Speaker		86-303	Socket Terminal (2 used)	.04
49-904	12" PM Speaker		90-367	Indicator Light Tube	.05
49-905	12" PM Speaker		93-1358	Felt Washer	.05
52-825	Antenna Lead Cable	.25	93-1359	Felt Washer (2 used)	.03
54-10	8-32x1/4 Hex. Nut (8 Pt. of 14-2845H, R & W)	.03	93-1360	Felt Washer	.05
54-12	6-32x5/16 Hex. Nut (1 used on S-26657, 2 used on 49-782 & 4 used on 49-896)	.03	100-221	Indicator Light Bulb-Type#45	.15
54-34	6-32x1/4 Hex. Nut (6 Pt. of 14-2845H, R & W)	.03	112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (8 Pt. of 14-2845H, R & W)	.03
			112-943	6-32x1 Swedge Hd. Mach. Screw (6 Pt. of 14-2845H, R & W)	.03
			112-1226	Record Changer Mtg. Screw	.20

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
114-78	8-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used on Ea. 12-2664)	.03	159-91	Plug Button (2 used on 14-2845 H, R & W)	.10
114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (8 used)	.03	159-112	Snap Fastener (8 used on 83-3230)	.03
114-386	Chassis Mtg. Screw (8 used)	.10	169-107	4 Speed Record Changer Knob Clamping Ring	.03
114-423	8-18x5/16 Hex. Hd. Self-Tap Screw (1 used on Ea. 80-1233)	.03	188-54	Dial Crystal	.75
114-453	6-18x5/8 Slotted Hex. Washer Hd. (8 used on 2-784)	.10	192-254	FM Instruction Book	.10
114-636	8-18x3/8 Special Hex. Hd. Self-Tap Screw (Flat Washer Att.) (6 used on 57-2813)	.05	202-697	Instruction Book	
114-669	6-18x1/2x1/4 Hex. Hd. Self-Tap Screw (2 used on 19-346)	.03	202-1525	Low Impedance Loop Assembly	.40
126-900	Pilot Light Shield	.25	S-17325	Low Impedance Loop, Clip & Strip Assembly	.90
138-297	Metal Grille (Pt. of 14-2845R & W)		S-17917	S-26657	Terminal Strip Assem.
-138-298	Metal Grille (Pt. of 14-2845H)		S-44166	Tuning Knob & Ring Assem.	.75
142-92	Dual Pick up Cartridge (Sapphire Sapphire) (Pt. of 169-107)	15.50	S-44169	Indicator Light Socket, Wire & Terminal Assembly	.75
			S-46112	45 RPM Record Adaptor Assem.	5.00
			S-46162	Knob & Retaining Spring Assem. (3 used)	.75
			S-47257	Brkt. & Socket Assem.-Riveting	
			S-47260	Plug & Wire Assem. (Jumper) (2 used)	

SFD285R&M CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-791	Cabinet Back-Model SFD285R	5.00	58-226	5 Prong Plug (1 Pt. of Ea. S-47260)	.15
2-792	Cabinet Back-Model SFD285M	5.00	78-1036	5 Contact Socket (2 Pt. of S-47257)	.25
14-2826M	Console Cabinet-Model SFD285M		80-1003	Knob Retaining Spring (1 Pt. of Ea. S-46162)	.10
14-2826R	Console Cabinet-Model SFD285R		80-1233	Crystal Retaining Spring (4 used)	.10
16-1655	Packing Carton		83-765	Armitite Strip (5 used)	.03
19-9	Cable Clip	.05	83-1475	Armitite Strip (12 used)	.03
19-169	Retaining Clip (2 used on 169-107)	.10	83-1884	Antenna Terminal Strip	.30
19-346	Mounting Clip (Mts. S-46112)	.30	83-2535	Phono Shipping Strip	.03
22-2945	3 Mfd. Electrolytic-30V	1.25	83-2603	Rubber Strip	.05
26-622	Presence & Tone Indicator Dial (3 used)	1.25	83-2858	Felt Strip	.03
26-653	Dial Scale	3.00	83-2931	Rubber Channel Strip (2 used)	.10
40-225	Lid Support Hinge (Pt. of 14-2826M & R)	2.50	83-2932	Rubber Channel Strip (2 used)	.20
40-233	Lid Hinge (2 Pt. of 14-2826M & R)	.60	83-3230	Dial Background Strip	.50
43-332	Socket Contact Housing	.15	83-3288	Reinforcing Strip	
46-2080	Knob (Bandswitch Loudness)	.75	86-237	Connector Terminal (10 used)	.03
46-2097	Stereo Control Knob	.75	86-254	Connector Terminal (5 used)	.05
46-2284	Balance Control Knob		86-255	Spade Terminal (4 used)	.03
49-782	3 1/2" PM Tweeter Speaker	4.50	86-270	Terminal (2 Pt. of S-26657)	.03
49-896	5 1/4" PM Speaker		86-303	Socket Terminal (2 used)	.04
49-904	12" PM Speaker		90-367	Indicator Light Tube	.05
49-905	12" PM Speaker		93-1358	Felt Washer	.05
52-825	Antenna Lead Cable	.25	93-1359	Felt Washer	.03
54-10	8-32x1/4 Hex. Nut (8 Pt. of 14-2826M & R)	.03	93-1360	Felt Washer	.05
54-12	6-32x5/16 Hex. Nut (1 used on S-26657, 2 used on 49-782 & 4 used on 49-896)	.03	100-221	Indicator Light Bulb-Type #45	.15
54-34	6-32x1/4 Hex. Nut (6 Pt. of 14-2826M & R)	.03	112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (8 Pt. of 14-2826M & R)	.03
54-312	Speed Nut-Tinnerman (2 Pt. of 14-2826M & R)	.03	112-943	6-32x1 Swedge Hd. Mach. Screw (6 Pt. of 14-2826M & R)	.03
54-424	8-32x11/32 Hex. Palnut (4 used on Ea. 49-904 & 49-905)	.03	112-1226	Record Changer Mtg. Screw (2 used)	.20
57-2498	Emblem Plate (Pt. of 14-2826M & R)	.35	114-78	8-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used on Ea. 12-2664)	
57-2750	Shield Plate	.25	114-78	8-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used on Ea. 12-2664)	.03
57-2813	Radio Dial Escutcheon	8.00	114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (6 used)	.03
57-2815	Name Plate (Extended Stereo) (Pt. of 14-2826M & R)	1.25	114-386	Chassis Mtg. Screw (8 used)	.10
			114-423	8-18x5/16 Hex. Hd. Self-Tap Screw (1 used on Ea. 80-1233)	.03

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
114-453	6-18x5/8 Slotted Hex. Washer Hd. (8 used on 2-784)	.10	192-254	Dial Crystal	1.75
114-636	8-18x3/8 Special Hex. Hd. Self-Tap Screw (Flat Washer Att.) (6 used on 57-2813)	.05	202-697	FM Instruction Book	.10
114-669	6-18x1/2x1/4 Hex. Hd. Self-Tap Screw (2 used on 19-346)	.03	202-1525	Instruction Book	.40
126-900	Pilot Light Shield	.25	S-17325	Low Impedance Loop Assem.	.40
142-92	Dual Pickup Cartridge (Sapphire-Sapphire)		S-17917	Low Impedance Loop, Clip & Strip Assem.	.90
159-91	Plug Button (2 used on 14-2826M & R)	.10	S-26657	Terminal Strip Assem.	.20
159-112	Snap Fastner (3 used on 83-3230)	.03	S-44166	Tuning Knob & Ring Assem.	.75
165-21	Cabinet Caster (4 Pt. of 14-2826M & R)		S-44169	Indicator Light Socket, Wire & Terminal Assem.	.75
169-107	4 Speed Record Changer		S-46112	45 RPM Record Adapter Assem.	5.00
188-54	Knob Clamping Ring (Pt. of S-44166)	.03	S-46162	Knob & Retaining Spring Assem. (3 used)	.75
			S-47257	Bracket & Socket Assem. (Riveting)	
			S-47260	Plug & Wire Assem. (Jumper) (2 used)	

SFD288W,R&E CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-787	Cabinet Back-SFD288R	5.00	54-424	8-32x11-32 Hex. Palnut Washer Type (4 used on Ea. 49-904 & 49-905)	.03
2-788	Cabinet Back-SFD288E	5.00	57-2498	Emblem Plate (Pt. of 14-2846E R & V)	.35
2-789	Cabinet Back-SFD288W	5.00	57-2750	Shield Plate	.25
12-2608	Indicator Light Mtg. Brkt.	.05	57-2812	Radio Dial Escutcheon	8.00
12-2664	Dial Scale Clamp Brkt. (2 used)	.20	57-2815	Name Plate (Extended Stereo) (Pt. of 14-2846E,R & W)	1.25
12-2696	Hold Down Brkt. (2 used)	.15	58-226	Five Prong Plug (1 Pt. of Ea. S-47260)	.15
14-2478E	Cabinet Base Frame-Model S FD288E		72-84	#8x1 1/2 Phils. Flat Hd. Wood Screw (2 used on 152-268)	.03
14-2478R	Cabinet Base Frame-Model S FD288R		78-1036	5 Contact Socket (2 Pt. of S-47257)	.25
14-2478W	Cabinet Base Frame-Model S FD288W		78-1124	Indicator Light Socket & Wire	.75
14-2846E	Cabinet Top Section-Model S FD288E		80-1003	Knob Retaining Spring (1 Pt. of Ea. S-46162)	.10
14-2846R	Cabinet Top Section-Model S FD288R		80-1233	Crystal Retaining Spring (4 used)	.10
14-2846W	Cabinet Top Section-Model S FD288W		83-765	Armitite Strip (5 used)	.03
16-1654	Packing Carton		83-1475	Armitite Strip (12 used)	.03
19-9	Cable Clip	.05	83-1884	Antenna Terminal Strip	.30
19-210	Loop Connector Clip (Pt. of S-17917)	.05	83-2535	Phono Shipping Strip	.03
19-346	Mtg. Clip (Mts. S-46112)	.30	83-2603	Rubber Strip	.05
22-2945	3 Mfd. Electrolytic-30V	1.25	83-2858	Felt Strip	.03
26-622	Presence & Tone Indicator Dial	1.25	83-2931	Rubber Channel Strip (2 used)	.10
26-652	Dial Scale	3.00	83-2932	Rubber Channel Strip (2 used)	.20
33-185	Record Changer Mtg. Frame	8.00	83-3038	Friction Strip (2 used)	.15
36-220	Record Changer Handle	1.00	83-3039	Corrugated Strip (2 used)	.10
36-221	Cabinet Handle (Pt. of 14-2846 E, R & W)	1.00	83-3230	Dial Background Strip	.50
43-332	Socket Contact Housing (Female)	.15	83-3288	Reinforcing Strip	
46-2080	Knob (Bandswitch-Loudness)	.75	86-30	Terminal-Shakeproof	.03
46-2095	Stereo Control Knob	.75	86-237	Connector Terminal (10 used)	.03
46-2284	Balance Control Knob		86-254	Connector Terminal (6 used)	.05
49-782	3 1/2" PM Tweeter Speaker	4.50	86-255	Spade Terminal (5 used)	.03
49-896	5 1/4" PM Speaker		86-270	Terminal (2 used on S-26657)	.03
49-904	12 " PM Speaker		86-303	Socket Terminal (2 used)	.04
49-905	12 " PM Speaker		86-312	Terminal-Shakeproof (2 used)	.03
52-825	Antenna Lead Cable	.25	90-367	Indicator Light Tube	.05
54-10	8-32x1/4 Hex. Nut (8 Pt. of 14-2846E,R & W)	.03	93-1336	Spacer Washer (Shipping)	.20
54-12	6-32x5/16 Hex. Nut (1 used on S-26657, 2 used on 49-782 & 4 used on 49-896)	.03	93-1358	Felt Washer	.05
54-34	6-32x1/4 Hex. Nut (6 Pt. of 14-2846E,R & W)	.03	93-1359	Felt Washer (2 used)	.03
54-312	Screw Nut Tinnerman (2 Pt. of 14-2846E, R & W)	.03	93-1360	Felt Washer	.05
			96-183	Cabinet Leg (4 used on 14-2478R)	
			96-184	Cabinet Leg (4 used on 14-2478E)	
			96-185	Cabinet Leg (4 used on 14-2478W)	
			100-221	Indicator Light Bulb-Type #45	.15
			112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (8 Pt. of 14-2846R)	.03

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
112-852	8-18x1/2 Phils. Rd. Hd. Self-Tap Screw (4 Mt. 33-185)	.03	126-900	Pilot Light Shield	.25
112-943	6-32x1 Swedge Hd. Mach. Screw (6 Pt. of 14-2846E, R & W)	.03	142-92	Dual Pickup Cartridge	1 5.50
112-1131	6-18x5/8 Phils. Flat Hd. Self-Tap Screw (3 used on Ea. S-18560)	.03	152-268	Sapphire-Sapphire Wood Block (Record Changer Stop)	.50
112-1194	Record Changer Mtg. Screw (2 used)	.20	159-96	Plug Button (Pt. of 14-2846E)	.03
113-65	8-32x1/4x1/4 AF Hex. Hd. Mach. Screw (2 Mt. 36-220)	.03	159-106	Plug Button (Pt. of 14-2846R & W)	.20
114-78	8-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used on Ea. 12-2664)	.03	159-112	Snap Fastner	.03
114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (2 used on Ea. 83-1884, S-47257 & 9D24 - 1 used on Ea. 12-2608 & 19-9)	.03	169-107	4 Speed Record Changer Indicator Light Lens (Pt. of 14-2846E, R & W)	.40
114-386	Chassis Mtg. Screw (8 used)	.10	171-19	Knob Clamping Ring (Pt. of S-44166)	.03
114-423	8-18x5/16 Hex. Hd. Self-Tap Screw (1 used on Ea. 80-1233)	.03	188-54	Retaining Ring (2 used on 169-107)	.03
114-453	6-18x5/8 Slotted Hex. Washer Hd. Self-Tap Screw (9 used on 2-787 or 788 or 789)	.10	188-195	Dial Crystal	1.75
114-636	8-18x3/8 Special Hex. Hd. Self-Tap Screw (Flat Washer Att.) (6 used on 57-2812)	.05	192-286	Brass Sleeve (4 used on 14-2478 E, R & W)	1.25
114-644	Red Hex. Hd. Self-Tap Screw (Flat Washer Att.) (used on 33-185)	.10	199-250	FM Instruction Book	.10
114-669	6-18x1/2x1/4 AF Hex. Hd. Self-Tap Screw (2 used on 19-346)	.03	202-697	Instruction Book	.40
			202-1523	Low Impedance Loop, Clip & Strip Assem.	.40
			S-17325	Record Changer Slide Assem. (2 used)	2.75
			S-18560	Terminal Strip Assem.	.20
			S-26657	Tuning Knob & Ring Assem.	.75
			S-44166	45 RPM Record Adaptor Assem.	5.00
			S-46112	Knob & Retaining Spring Assem. (Presence-Treble & Bass On-Off)	.75
			S-46162	Bracket & Socket Assem. - Riveting	
			S-47257	Plug & Wire Assem. (Jumper) (2 used)	
			S-47260		

SFD290R&H CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-766	Cabinet Back-SFD290R		57-2498	Emblem Plate (Pt. of 14-2841 H & R)	.35
2-767	Cabinet Back-SFD290H		57-2750	Shield Plate	.25
12-2608	Indicator Light Mtg. Brkt.	.05	57-2812	Radio Dial Escutcheon	8.00
12-2664	Dial Scale Clamp Brkt. (2 used)	.20	57-2815	Name Plate (Extended Stereo) (Pt. of 14-2841H & R)	1.25
12-2696	Hold Down Brkt. (2 used)	.15	58-176	5 Prong Plug (1 Pt. of Ea. S-47602)	
14-2841H	Console Cabinet-Model SFD290H		72-84	#8x1 1/2 Phils. Flat Hd. Wood Screw (2 used on 152-268)	.03
14-2841R	Console Cabinet-Model SFD290R		78-346	5 Contact Socket (2 Pt. of S-47599)	
16-1647	Packing Carton		78-1124	Indicator Light Socket & Wire Knob Retaining Spring (1 Pt. of Ea. S-46162)	.75
19-9	Cable Clip	.05	80-1003	Crystal Retaining Spring (4 used)	.10
19-210	Loop Connector Clip (2 used)	.05	80-1233	Armite Strip	.10
19-346	Mounting Clip (Mt. 46112)	.30	83-765	Armite Strip (12 used)	.03
20-751	Speaker Inductance	1.25	83-1475	Antenna Terminal Strip	.30
22-2945	3 Mfd. Electrolytic-3V	1.25	83-1884	Phono Shipping Strip (2 used)	.03
26-622	Presence & Tone Indicator Dial	1.25	83-2535	Rubber Strip	.05
26-652	Dial Scale	3.00	83-2603	Felt Strip	.03
33-185	Record Changer Mtg. Frame	8.00	83-2858	Rubber Channel Strip (2 used)	.10
36-220	Record Changer Handle	1.00	83-2931	Rubber Channel Strip (2 used)	.20
43-332	Socket Contact Housing (Female)	.15	83-2932	Friction Strip (2 used)	.15
46-2080	Knob (Bandsw.-Loudness)	.75	83-3038	Corrugated Strip	.10
46-2095	Stereo Control Knob	.75	83-3039	Dial Background Strip	
46-2284	Balance Control Knob		83-3230	Reinforcing Strip	
49-867	Horn Tweeter Speaker	30.00	83-3288	Terminal-Shakeproof	.03
49-901	15" PM Speaker	37.50	86-30	Connector Terminal (8 used)	.03
52-825	Antenna Lead Cable	.25	86-237	Connector Terminal (8 used)	.05
54-12	6-32x5/16 Hex. Nut (1 used on S-26657 & 4 used on 49-867)	.03	86-254	Spade Terminal (5 used)	.03
54-34	6-32x1/4 Hex. Nut (4 Pt. of 14-2841H & R)	.03	86-255	Terminal (2 Pt. of S-26657)	.03
54-66	10-32x5/16 Hex. Nut (4 Pt. of 14-2841H & R)		86-270		
54-312	Speed Nut-Tinnerman (2 Pt. of 14-2841H & R)	.03			
54-479	10-32x3/8 Hex. Walnut Washer Type (4 used on 49-901)	.03			

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
86-303	Socket Terminal (3 used)	.04	114-644	Red Hex. Hd. Self-Tap Screw (Flat Washer Att.) (used on 33-185)	.10
86-312	Terminal-Shakeproof	.03	114-669	6-18x1/2x1/4 AF Hex. Hd. Self-Tap Screw (2 used on 19-346)	.03
93-1336	Spacer Washer (Shipping)	.20	126-845	Indicator Light Shield	.10
93-1358	Felt Washer	.05	126-900	Pilot Light Shield (2 used)	.25
93-1359	Felt Washer (2 used)	.03	142-93	Dual Pickup Cartridge - Diamond Sapphire	26.50
93-1360	Felt Washer	.05	152-268	Wood Block (Record Changer Stop)	.50
100-221	Indicator Light Bulb-Type #45	.15	159-112	Snap Fastner (8 used on 83-3230 & 1 used on 86-312)	.03
112-852	S-18x1/2 Phils. Flat Hd. Self-Tap Screw (4 used on 33-185)	.03	169-108	4 Speed Record Changer	
112-1131	S-18x5/8 Phils. Flat Hd. Self-Tap Screw (3 used on Ea. S-18560)	.03	171-19	Indicator Light Lens (Pt. of 14-2841H & R)	.40
112-1183	S-32x1 3/4 Swedge Hd. Mach. Screw (4 Pt. of 14-2841H & R)	.05	188-54	Knob Clamping Ring (Pt. of S-44166)	.03
112-1194	Record Changer Mtg. Screw (2 used)	.20	188-195	Retaining Ring (2 used on 169-108)	.03
112-1254	L 0-32x1 3/4 Swedge Hd. Mach. Screw (4 Pt. of 14-2841H & R)		192-286	Dial Crystal	1.75
113-65	S-32x1/4x1/4 AF Hex. Hd. Mach. Screw (2 used on 36-220)	.03	202-697	FM Instruction Book	.10
114-78	S-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used on Ea. 1 2-2664)	.03	202-1523	Instruction Book	.40
114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (6 used)	.03	S-17917	Low Impedance Loop, Clip & Strip Assem.	.90
114-386	Chassis Mtg. Screw (8 used)	.10	S-18560	Record Changer Slide Assem.	2.75
114-423	S-18x5/16 Hex. Hd. Self-Tap Screw (4 used)	.03	S-26657	Terminal Strip Assem.	.20
114-453	6-18x5/8 Slotted Hex. Washer Hd. Self-Tap Screw (8 used on 2-766 or 2-767)	.10	S-44166	Tuning Knob & Ring Assem.	.75
114-636	8-18x3/8 Special Hex. Hd. Self-Tap Screw (Flat Washer A tt.) (6 used on 57-2812)	.05	S-46112	45 RPM Record Adaptor Assem.	5.00
			S-46162	Knob & Retaining Spring Assem. (Presence-Treble & Bass On-Off)	
			S-47599	Brkt. & Socket Assem.-Riveting	.75
			S-47602	Plug & Wire Assem. (Jumper)	

SFD2505W,R&E CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-719	Cabinet Back Model-SFD2505R	6.00	57-2498	Emblem Plate (Pt. of 14-2809E, R & W)	.35
2-720	Cabinet Back Model-SFD2505E	6.00	57-2561	Name Plate (Pt. of 14-2809E, R & W)	1.00
2-721	Cabinet Back Model-SFD2505W	6.00	57-2750	Shield Plate	.25
14-2809E	Console Cabinet-Model SFD2505E		57-2792	Control Panel	
14-2809R	Console Cabinet-Model SFD2505R		58-226	5 Prong Plug (2 used)	.15
14-2809W	Console Cabinet-Model SFD2505W		72-136	#4x3/8 Phils. Flat Hd. Wood Screw (3 Mt. 57-2792)	.04
16-1617	Packing Carton		78-1036	5 Contact Socket (2 used)	.25
19-169	Retaining Clip (2 Mt. 169-106)	.10	83-765	Armitie Strip (5 used)	.03
19-346	Mounting Clip (Mts. S-46112)	.30	83-2535	Phono Shipping Strip (2 used)	.03
22-2945	3 Mfd. Electrolytic-30V (1 Pt. of Ea. 49-586)	1.25	83-3225	Control Panel Trim Strip	
40-225	Lid Support Hinge (Pt. of 14-2809R & W)	2.50	83-3226	Locking Strip	
40-226	Lid Support Hinge (Pt. of 14-2809E)	2.50	86-237	Connector Terminal (4 used on Ea. 52-874)	.03
40-233	Lid Hinge (2 Pt. of 14-2809R & W)	.60	86-255	Spade Terminal (3 used)	.03
40-234	Lid Hinge (2 Pt. of 14-2809E)	.60	96-215	Cabinet Leg (4 Pt. of 14-2809R)	
46-2263	Tone Control Knob		96-216	Cabinet Leg (4 Pt. of 14-2809E)	
46-2287	Volume Control Knob (Stereo)		96-217	Cabinet Leg (4 Pt. of 14-2809W)	
49-852	12" PM Speaker (2 used)	16.00	112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (8 Pt. of 14-2809E, R & W)	.03
49-856	5" PM Speaker (2 used)	7.00	112-943	6-32x1" Swedge Hd. Mach. Screw (8 Pt. of 14-2809E, R & W)	.03
52-874	Speaker Cable (2 used)		112-1226	Record Changer Mtg. Screw (2 used)	.20
54-10	8-32x1/4 Hex. Nut (8 Pt. of 14-2809E, R & W)	.03	114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (2 Mt. S-47257)	.03
54-34	6-32x1/4 Hex. Nut (8 Pt. of 14-2809E, R & W & 4 Mt. Ea. 49-856)	.03	114-386	Chassis Mtg. Screw (4 used)	.10
54-312	Speed Nut (2 Pt. of 14-2809E, R & W)	.03	114-453	6-18x5/8 Slotted Hex. Hd. Self-Tap Screw (9 Mt. 2-719, 720 & 721)	.10
54-424	8-32x11/32 Hex. Palnut (4 Mts. 49-852)	.03	114-669	6-18x1/2x1/4 AF Hex. Hd. Self-Tap Screw (2 Mt. 19-346)	.03
			126-780	Heat Shield	.25

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
142-92	Dual Pickup Cartridge-Sapphire-Sapphire (Pt. of 169-106)	.15	202-1511	Instruction Book	.40
159-90	Plug Button (2 Pt. of 14-2809E)	.15	S-26657	Terminal Strip Assem. (1 Pt. of Ea. 49-856)	.20
159-91	Plug Button (2 Pt. of 14-2809R & W)	.10	S-46112	45 RPM Record Adaptor	5.00
169-106	Four Speed Record Changer		S-47257	Brkt. & Socket Assem.	
188-54	Knob Clamping Ring (Pt. of S-47323)	.03	S-47323	Knob & Ring Assem. (Volume)	

SFD2515W,R&E CABINET PARTS

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
2-794	Cabinet Back-Model SFD2515W	5.50	83-3233	Control Panel Trim Strip	.90
2-795	Cabinet Back-Model SFD2515R	5.50	86-237	Connector Terminal (12 used)	.03
2-796	Cabinet Back-Model SFD2515E	5.50	86-254	Connector Terminal (3 used)	.05
14-2849E	Console Cabinet-Model SFD2515E		86-270	Terminal (2 Pt. of Ea. S-26657)	.03
14-2849R	Console Cabinet-Model SFD2515R		96-257	Cabinet Leg L. H. (2 Pt. of 14-2849W)	
14-2849W	Console Cabinet-Model SFD2515W		96-258	Cabinet Leg R.H. (2 Pt. of 14-2849W)	
16-1659	Packing Carton		96-259	Cabinet Leg L.H. (2 Pt. of 14-2849R)	
19-169	Retaining Clip (2 used on 169-108)	.10	96-260	Cabinet Leg R.H. (2 Pt. of 14-2849R)	
19-346	Mounting Clip (used on S-46112)	.30	96-261	Cabinet Leg L.H. (2 Pt. of 14-2849E)	
22-2945	3 Mfd. Electrolytic-30V (2 used)	1.25	96-262	Cabinet Leg R.H. (2 Pt. of 14-2849E)	
40-225	Lid Support Hinge (Pt. of 14-2849R & W)	2.50	112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (8 Pt. of 14-2849E,R & W)	.03
40-226	Lid Support Hinge (Pt. of 14-2849E)	2.50	112-943	6-32x1" Swedge Hd. Mach. Screw (4 Pt. of 14-2849E,R, & W)	.03
40-233	Lid Hinge (2 Pt. of 14-2849R & W)	.60	112-1226	Record Changer Mtg. Screw (2 used)	.20
40-234	Lid Hinge (2 Pt. of 14-2849E)	.60	114-40	Chassis Mtg. Screw (4 used)	
46-2263	Control Knob (4 used)	.50	114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (2 used on S-47257)	.03
46-2284	Balance Control Knob		114-386	Chassis Mtg. Screw (4 Mt. 2D30)	.10
49-896	5 1/4" PM Speaker (2 used)		114-453	6-18x5/8 Slotted Hex. Hd. Self-Tap Screw (9 used on 2-794, 795 & 796)	.10
49-903	12" PM Speaker (2 used)		114-669	6-18x1/2x1/4 AF Hex. Hd. Self-Tap Screw (2 used on 19-346)	.03
54-10	8-32x1/4 Hex. Nut (8 Pt. of 14-2849E,R & W)	.03	138-294	Cabinet Grille (Pt. of 14-2849E, R & W)	
54-12	6-32x5/16 Hex. Nut (2 used on Ea. S-26657 & 49-896)	.03	142-93	Dual Pickup Cartridge (Diamond-Sapphire)	26.50
54-34	6-32x1/4 Hex. Nut (4 Pt. of 14-2849E,R & W)	.03	159-90	Plug Button (4 used on 14-2849E)	.15
54-312	Speed Nut Tinnerman (2 Pt. of 14-2849E,R & W)	.03	159-91	Plug Button (4 used on 14-2849R & W)	.10
54-424	8-32x11/32 Hex. Palnut-Washer Type (4 used on Ea. 49-903)	.03	169-108	4 Speed Record Changer	
57-2498	Emblem Plate (Pt. of 14-2849E, R & W)	.35	188-155	Knob Clamping Ring (Pt. of S-47939)	.05
57-2694	Leg Mtg. Plate (4 Pt. of 14-2849 E,R & W)	.40	202-1529	Instruction Book	.40
57-2814	Control Panel		S-26657	Terminal Strip Assem. (2 used)	.20
57-2815	Name Plate (Extended Stereo) (Pt. of 14-2849E,R & W)	1.25	S-46112	45 RPM Record Adaptor	5.00
57-2831	Shield Plate		S-47257	Bracket & Socket Assem.	
58-226	5 Prong Plug (2 used - 1 Pt. of Ea. S-47260)	.15		Riveting	
72-136	4-40x3/8 Phils. Flat Hd. Mach. Screw (3 used on 57-2814)	.04	S-47260	Plug & Wire Assem. (2 used) (Jumper)	
78-1036	5 Contact Socket (2 Pt. of S-47257)	.25	S-47939	Knob & Ring Assem. 72" 91-1757 3 Conductor Wire	
83-765	Armitite Strip (5 used)	.03			
83-1475	Armitite Strip (2 used)	.03			
83-2535	Phono Shipping Strip	.03			
83-3226	Locking Strip				

SFD2530E,R,W&Y CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-718	Cabinet Back Model SFD2530R	6.00	86-30	Terminal (Pt. of S-17060)	.03
2-722	Cabinet Back Model SFD2530W	6.00	86-237	Connector Terminal (4 used on Ea. 52-874)	.03
2-723	Cabinet Back Model SFD2530E	6.00	86-254	Connector Terminal (5 used)	.05
2-724	Cabinet Back Model SFD2530Y	6.00	86-255	Spade Terminal (1 Pt. of S-17060 & 2 used on 52-825)	.03
12-2608	Indicator Light Mtg. Brkt.	.05	90-367	Indicator Light Tube	.05
12-2664	Dial Scale Clamp Brkt. (2 used)	.20	93-1358	Felt Washer	.05
14-2641E	Console Cabinet Model SFD2530E		93-1359	Felt Washer (2 used)	.03
14-2641R	Console Cabinet Model SFD2530R		93-1360	Felt Washer	.05
14-2641W	Console Cabinet Model SFD2530W		96-215	Cabinet Leg (4 Pt. of 14-2641R)	
14-2641Y	Console Cabinet Model SFD2530Y		96-216	Cabinet Leg (4 Pt. of 14-2641E)	
16-1611	Packing Carton		96-217	Cabinet Leg (4 Pt. of 14-2641W)	
19-9	Cable Clip (used on S-17060)	.05	96-218	Cabinet Leg (4 Pt. of 14-2641Y)	
19-169	Retaining Clip (2 mt. 169-106)	.10	100-221	Indicator Light Bulb-Type #45	.15
19-346	Mounting Clip (mts. S-46112)	.30	112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (8 Pt. of 14-2641E,R,W, & Y)	.03
22-2945	3 Mfd. Electrolytic 30V (1 Pt. of Ea. 49-856)	1.25	112-943	6-32x1" Swedge Hd. Mach. Screw (8 Pt. of 14-2641E,R,W, & Y)	.03
26-613	Dial Scale	2.25	112-1226	Record Changer Mtg. Screw (2 used)	.20
26-622	Presence & Tone Indicator Dial (3 used)	1.25	114-78	8-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used on 12-2664)	.03
40-225	Lid Support Hinge (Pt. of 14-2641R & W)	2.50	114-80	Chassis Mtg. Screw (3 used)	.05
40-226	Lid Support Hinge (Pt. of 14-2641E & Y)	2.50	114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (2 used on Ea. 83-2123-9D26, S-47257 & 1 used on Ea. 12-2608,19-9)	.03
40-233	Lid Hinge (2 Pt. of 14-2641R & W)	.60	114-386	Chassis Mtg. Screw	.10
40-234	Lid Hinge (2 Pt. of 14-2641E & Y)	.60	114-423	8-18x5/16 Hex. Hd. Self-Tap Screw (1 used on Ea. 80-1233)	.03
46-1997	Volume Control Knob (Remote)	.50	114-453	6-18x5/8 Slotted Hex. Washer Hd. Self-Tap Screw (2 used on S-44649 & 9 used on 2-718,722, 723 & 724)	.10
46-2080	Knob (Bandsw. & Phono-Tape Switch)	.75	114-636	8-18x3/8 Special Hex. Hd. Self-Tap Screw (Flat Washer Att. 6 Mt. 57-2789)	.05
46-2097	Volume Control Knob	.75	114-669	6-18x1/2x1/4 AF Hex. Hd. Self-Tap Screw (2 Mt. 19-346)	.03
49-852	1 1/2" PM Speaker (2 used)	16.00	126-900	Pilot Light Shield	.25
49-856	5" PM Speaker (2 used)	7.00	142-92	Dual Pickup Cartridge Sapphire-Sapphire (Pt. of 169-106)	15.50
52-825	Antenna Lead Cable	.25	159-90	Plug Button (2 used on 14-2641 R & W)	.15
52-874	Speaker Cable (2 used)		159-91	Plug Button (2 used on 14-2641E)	.10
54-10	8-32x1/4 Hex. Nut (8 Pt. of 1 4-2641E,R,W, & Y)	.03	159-112	Snap Fastener (8 used on 83-2974)	.03
54-34	6-32x1/4 Hex. Nut (8 Pt. of 1 4-2641E,R,W, & Y) & 4 Mt. Ea. 49-856)	.03	159-113	Plug Button (2 used on 14-2641Y)	.10
54-312	Speed Nut Tinnerman (2 Pt. off 14-2641E,R,W, & Y)	.03	169-106	4 Speed Record Changer	
54-424	8-32x11/32 Hex. Palnut (4 Mt. Ea. 49-852)	.03	171-19	Indicator Light Lens (Pt. of 14-2641E,R,W & Y)	.40
57-2498	Emblem Plate (Pt. of 14-2641E, R, W, & Y)	.35	188-54	Knob Clamping Ring (Pt. of S-44166)	.03
57-2561	Name Plate (Stereophonic) (Pt. of 14-2641E,R,W, & Y)	1.00	192-252	Dial Crystal	.75
57-2789	Radio Dial Escutcheon		202-697	FM Instruction Book	.10
58-226	5 Prong Plug (2 used)	.15	202-1508	Instruction Book	.40
78-1036	5 Contact Socket (2 Pt. of S-47257)	.25	S-17060	Wire & Terminal Assem. (FM Antenna)	.15
78-1121	Indicator Light Socket & Wire	.60	S-26657	Terminal Strip Assem. (Pt. of 49-856)	.20
80-1003	Knob Retaining Spring (1 Pt. of Ea. S-46162)	.10	S-44166	Tuning Knob & Ring Assem.	.75
80-1233	Crystal Retaining Spring (4 used)	.10	S-44649	Antenna Assem.	1.50
83-765	Ar-mite Strip (5 used)	.03	S-46112	45 R.P.M. Record Adapter	5.00
83-1475	Ar-mite Strip (2 used)	.03	S-46162	Knob & Retaining Spring Assem. (Presence-Bass on & off-Treble)	.75
83-2123	Antenna Terminal Strip	.25	S-47257	Bracket & Socket Assem.	
83-2535	Phono Shipping Strip	.03			
83-2811	Rubber Strip	.10			
83-2858	Felt Strip	.03			
83-2931	Rubber Channel Strip	.10			
83-2932	Rubber Channel Strip	.20			
83-2974	Dial Background Strip	.50			

SFD2535R&M CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-733	Cabinet Back Model SFD2535R		86-30	Terminal (Pt. of S-17060)	.03
2-734	Cabinet Back Model SFD2535		86-237	Connector Terminal (4 used on Ea. 52-874)	.03
12-2608	Indicator Light Mtg. Brkt.	.05	86-254	Connector Terminal (5 used)	.05
12-2664	Dial Scale Clamp Brkt. (2 used)	.20	86-255	Spade Terminal (1 Pt. of S-17060 & 2 used on 52-825)	.03
14-2827M	Console Cabinet-Model SFD2535M		90-367	Indicator Light Tube	.05
14-2827R	Console Cabinet-Model SFD2535R		93-1358	Felt Washer	.05
16-1626	Packing Carton		93-1359	Indicator Light Bulb-Type #45	.15
19-9	Cable Clip (used on S-17060)	.05	100-221	8-32x1 3/8 Swedge Hd. Mach.	
19-169	Retaining Clip (2 Mt. 169-106)	.10	112-789	Screw (8 Pt. of 14-2827R & M)	.03
19-346	Mtg. Clip (Mts. S-46112)	.30	112-943	6-32x1" Swedge Hd. Mach. Screw (8 Pt. of 14-2827R & M)	.03
22-2945	3 Mfd. Electrolytic 30V (1 Pt. of Ea. 49-896)	1.25	112-1226	Record Changer Mtg. Screw (2 used)	.20
26-613	Dial Scale	2.25	114-78	8-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used on 12-2664)	.03
26-622	Presence & Tone Indicator Dial (3 used)	1.25	114-80	Chassis Mtg. Screw (3 used)	.05
40-225	Lid Support Hinge (Pt. of 14-2827R & M)	2.50	114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap screw (2 used on Ea. 83-2123, 9D26, S-47257 and 1 used on Ea. 12-2608, 19-9)	
40-233	Lid Hinge (2 Pt. of 14-2827R & M)	.60	114-423	8-18x5/8 Slotted Hex. Washer Hd. Self-Tap Screw (2 used on S-44649 & 9 used on 2-733 & 734)	.10
46-1997	Volume Control Knob (Remote)	.50	114-636	8-18x3/8 Special Hex. Hd. Self-Tap Screw (Flat Washer Att.) (6 Mt. 57-2789)	.05
46-2080	Knob (Bandsw. & Phono-Tape Switch)	.75	114-669	6-18x1/2x1/4 AF Hex. Hd. Self-Tap Screw (2 Mt. 19-346)	.03
46-2097	Volume Control Knob	.75	126-900	Pilot Light Shield	.25
49-852	12" PM Speaker (2 used)	16.00	142-92	Dual Pickup Cartridge-Sapphire-Sapphire (Pt. of 169-106)	1 5.50
49-896	5 1/4 PM Speaker (2 used)		159-90	Plug Button (2 used on 14-2827R & M)	.15
52-825	Antenna Lead Cable	.25	159-112	Snap Fastner (8 used on 83-2974)	.03
52-874	Speaker Cable (2 used)		165-39	Cabinet Casters (4 Pt. of 14-2827R & M)	
54-10	8-32x1/4 Hex. Nut (8 Pt. of 14-2827R & M)	.03	169-106	4 Speed Record Changer	
54-34	6-32x1/4 Hex. Nut (8 Pt. of 14-2827R & M & 4 Mt. Ea. 49-856)	.03	171-19	Indicator Light Lens (Pt. of 14-2827R & M)	.40
54-312	Speed Nut Tinnerman (2 Pt. of 14-2827R & M)	.03	188-54	Knob Clamping Ring (Pt. of S-44166)	.03
54-424	8-32x11/32 Hex. Palnut (4 Mt. Ea. 49-852)	.03	192-252	Dial Crystal	.75
57-2498	Emblem Plate (Pt. of 14-2827R & M)	.35	202-697	FM Instruction Book	.10
57-2561	Name Plate (Stereophonic) (Pt. of 14-2827R & M)	1.00	202-1508	Instruction Book	.40
57-2789	Radio Dial Escutcheon		S-17060	Wire & Terminal Assem. (FM Antenna)	.15
58-226	5 Prong Plug (2 used)	.15	S-26657	Terminal Strip Assem. (Pt. of 49-896)	.20
78-1036	5 Contact Socket (2 Pt. of S-47257)	.25	S-44166	Tuning Knob & Ring Assem.	.75
78-1121	Indicator Light Socket & Wire	.60	S-44649	Antenna Assem.	1.50
80-1003	Knob Retaining Spring (1 Pt. of Ea. S-46162)	.10	S-46112	45 RPM Record Adapter	5.00
80-1233	Crystal Retaining Spring (4 used)	.10	S-46162	Knob & Retaining Spring Assem. (Presence-Bass on & off Treble)	.75
83-765	Armit Strip (5 used)	.03	S-47257	Brkt. & Socket Assem.	
83-1475	Armit Strip (2 used)	.03			
83-2123	Antenna Terminal Strip	.25			
83-2535	Phono Shipping Strip	.03			
83-2811	Rubber Strip	.10			
83-2858	Felt Strip	.03			
83-2931	Rubber Channel Strip	.10			
83-2932	Rubber Channel Strip	.20			
83-2974	Dial Background Strip	.50			

SFD2560W,R&E ONLY - CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-769	Cabinet Back-Model SFD2560W	6.00	14-2829W	Console Cabinet-Model SFD2560W	
2-770	Cabinet Back-Model SFD2560R	6.00	16-1648	Packing Carton	
2-771	Cabinet Back-Model SFD2560E	6.00	96-193	Cabinet Leg (4 Pt. of 14-2829R)	
14-2829E	Console Cabinet-Model SFD2560E		96-194	Cabinet Leg (4 Pt. of 14-2829W)	
14-2829R	Console Cabinet-Model SFD2560R		96-195	Cabinet Leg (4 Pt. of 14-2829E)	

SFD2565M&R ONLY-CABINET PARTS

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
2-773	Cabinet Back-Model SFD2565M	7.00	14-2830R	Console Cabinet-Model SFD2565R	
2-774	Cabinet Back-Model SFD2565R	7.00	16-1649	Packing Carton	
14-2830M	Console Cabinet-Model SFD2565M		165-39	Cabinet Caster (4 Pt. of 14-2830M & R)	.75

SFD2570W,Y&E ONLY-CABINET PARTS

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
2-776	Cabinet Back-Model SFD2570W	6.00	49-867	Horn Tweeter Speaker (2 used)	30.00
2-777	Cabinet Back-Model SFD2570Y	6.00	78-346	5 Contact Socket (2 Pt. of S-47599)	.20
2-778	Cabinet Back-Model SFD2570E	6.00	90-367	Indicator Light Tube	.05
14-2843E	Console Cabinet-Model SFD2570E		112-954	8-32x1 3/4 Swedge Hd. Mach. Screw (8 Pt. of 14-2843E, W & Y)	.05
14-2843W	Console Cabinet-Model SFD2570W		112-1183	6-32x1 3/4 Swedge Hd. Mach. Screw (8 Pt. of 14-2843E, W & Y)	.05
14-2843Y	Console Cabinet-Model SFD2570Y		169-109	4 Speed Record Changer	
16-1650	Packing Carton		S-47599	Brkt. & Socket Assem.-Riveting	
20-751	Speaker Inductor Coil (2 used)	1.25			

SFD2575L ONLY-CABINET PARTS

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
2-779	Cabinet Back	6.00	90-367	Indicator Light Tube	.05
14-2844L	Console Cabinet-Model SFD2575L		112-954	8-32x1 3/4 Swedge Hd. Mach. Screw (8 Pt. of 14-2844L)	.05
16-1651	Packing Carton		112-1183	6-32x1 3/4 Swedge Hd. Mach. Screw (8 Pt. of 14-2844L)	.05
20-751	Speaker Inductor Coil (2 used)	1.25	138-292	Metal Grille (Pt. of 14-2844L)	
49-867	Horn Tweeter Speaker (2 used)	30.00	169-109	4 Speed Record Changer	
78-346	5 Contact Socket (2 Pt. of S-47599)	.20	S-47599	Brkt & Socket Assem.-Riveting	

SFD2580R&H ONLY-CABINET PARTS

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
2-781	Cabinet Back-Model SFD2580R	7.00	90-367	Indicator Light Tube	.05
2-782	Cabinet Back-Model SFD2580H	7.00	112-954	8-32x1 3/4 Swedge Hd. Mach. Screw (8 Pt. of 14-2831H & R)	.05
14-2831H	Console Cabinet-Model SFD2580H		112-1183	6-32x1 3/4 Swedge Hd. Mach. Screw (8 Pt. of 14-2831H & R)	.05
14-2831R	Console Cabinet-Model SFD2580R		138-224	Metal Grille (Pt. of 14-2831H & R)	
16-1652	Packing Carton		165-39	Cabinet Caster (4 Pt. of 14-2831H & R)	.75
20-751	Speaker Inductor Coil (2 used)	1.25	169-109	4 Speed Record Changer	
49-867	Horn Tweeter Speaker (2 used)	30.00	S-47599	Brkt. & Socket Assem.-Riveting	
78-346	5 Contact Socket (2 Pt. of S-47599)	.20			

SFD2560W,R&E, SFD2565M&R, SFD2570W,Y&E, SFD2575L AND SFD2580R&H-CABINET PARTS

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
12-2608	Indicator Light Mtg. Brkt.	.05	26-622	Presence & Tone Indicator	
12-2664	Dial Scale Clamp Brkt. (2 used)	.20	26-652	Dial (3 used)	1.25
12-2696	Hold Down Brkt. (2 used)	.15	33-185	Dial Scale	3.00
19-9	Cable Clip	.05	36-220	Record Changer Mtg. Frame	8.00
19-210	Loop Connector Clip (2 Pt. of S-17917)	.05	46-2080	Record Changer Handle	1.00
19-346	Mounting Clip (Mts. S-46112)	.30	46-2095	Knob (Radio Phono-Loudness)	.75
22-2774	.2.2 Mfd. Paper Capacitor-200V (2 used)	.35	46-2284	Stereo Control Knob	.75
22-2945	3 Mfd. Electrolytic-30V	1.25	49-782	Balance Control Knob	.50
				3 1/2" PM Tweeter Speaker (2 used)	4.50

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
49-896	5 1/4" PM Speaker (2 used)		112-1131	6-18x5/8 Phils. Flat Hd. Self-Tap Screw (3 used on Ea. S-18560)	.03
49-903	12" PM Speaker (2 used)		112-1194	Record Changer Mtg. Screw (2 used)	.20
52-825	Antenna Lead Cable	.25	113-65	8-32x1/4 AF Hex. Hd. Mach. Screw (Lockwasher Att.) (2 Joins 33-185 & 36-220)	.03
54-10	8-32x1/4 Hex. Nut (8 Pt. of 14-2830M & R)	.03	114-78	8-18x5/16x1/4 AF Hex. Hd. Self-Tap Screw (2 used on Ea. 12-2664)	.03
54-12	6-32x5/16 Hex. Nut (2 used on Ea. 49-782, 49-896 & 1 used on Ea. S-26657)	.03	114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (2 used on Ea. 83-1884, S-47257 & 9D24 & 1 used on Ea. 12-2608 & 19-9)	.03
54-34	6-32x1/4 Hex. Nut (8 Pt. of 14-2830M & R)	.03	114-386	Chassis Mtg. Screw (8 used)	.10
54-312	Speed Nut Tinnerman (2 Pt. of 14-2830M & R)	.03	114-423	8-18x5/16 Hex. Hd. Self-Tap Screw (3 used)	.03
54-424	8-32x11/32 Hex. Palnut (4 used on Ea. 49-903)	.03	114-453	6-18x5/8 Slotted Hex. Washer Hd. Self-Tap Screw (9 used on 2-773 & 774)	.10
57-2498	Emblem Plate (Pt. of 14-2830 M & R)	.35	114-636	8-18x3/8 Special Hex. Hd. Self-Tap Screw (Flat Washer Att.) (6 used on 57-2812)	.05
57-2750	Shield Plate	.25	114-644	Special Hex. Hd. Screw-Red (Flat Washer Att.) (used on 33-185)	.10
57-2812	Radio Dial Escutcheon	8.00	114-669	6-18x1/2x1/4 AF Hex. Hd. Self-Tap Screw (2 used on 19-346)	.03
57-2815	Name Plate (Extended Stereo) (Pt. of 14-2830M & R)	1.25	126-845	Indicator Light Shield	.10
58-226	5 Prong Plug (1 Pt. of Ea. S-47260)	.15	126-900	Pilot Light Shield (2 used)	.25
72-84	#8x1 1/2 Phils. Flat Hd. Wood Screw (2 used on 152-268)	.03	142-93	Dual Pickup Cartridge (Diamond-Sapphire)	26.50
78-1036	5 Contact Socket (2 Pt. of S-47257)	.25	152-268	Wood Block (Record Changer Stop)	.50
78-1124	Indicator Light Socket & Wire	.75	159-112	Snap Fastner (8 used on 83-3230 & 1 used on 86-312)	.03
80-1003	Knob Retaining Spring (1 Pt. of Ea. S-46162)	.15	169-108	4 Speed Record Changer	
80-1233	Crystal Retaining Spring (4 used)	.10	171-19	Indicator Light Lens (Pt. of 14-2830M & R)	.40
83-765	Armitite Strip (5 used)	.03	188-54	Knob Clamping Ring (Pt. of S-44166)	.03
83-1475	Armitite Strip (12 used)	.03	188-195	Retaining Ring (2 used on 169-108)	.03
83-1884	Antenna Terminal Strip	.30	192-286	Dial Crystal	1.75
83-2535	Phono Shipping Strip (2 used)	.03	202-697	FM Instruction Book	.10
83-2603	Rubber Strip	.05	202-1524	Instruction Book	
83-2858	Felt Strip	.03	S-17917	Low Impedance Loop, Clip & Strip Assem.	.90
83-2931	Rubber Channel Strip (2 used)	.10	S-18560	Record Changer Slide Assem. (2 used)	2.75
83-2932	Rubber Channel Strip (2 used)	.20	S-26657	Terminal Strip Assem. (4 used)	.20
83-3038	Friction Strip (2 used)	.15	S-44166	Tuning Knob & Ring Assem.	.75
83-3039	Corrugated Strip (2 used)	.10	S-46112	45 RPM Record Adaptor	5.00
83-3230	Dial Background Strip	.50	S-46162	Knob & Retaining Spring Assem. (Presence-Bass On-Off -Treble)	.75
83-3288	Reinforcing Strip		S-47257	Brkt. & Socket Assem.-Riveting	
86-30	Terminal-Shakeproof	.03	S-47260	Plug & Wire Assem. (Jumper) (2 used)	
86-237	Connector Terminal (20 used)	.03			
86-254	Connector Terminal (6 used)	.05			
86-255	Spade Terminal (5 used)	.03			
86-270	Terminal (2 used on Ea. S-26657)	.03			
86-312	Terminal-Shakeproof	.03			
93-1336	Spacer Washer (Shipping)	.20			
93-1358	Felt Washer	.05			
93-1359	Felt Washer (2 used)	.03			
93-1360	Felt Washer	.05			
100-221	Indicator Light Bulb-Type #45	.15			
112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (8 Pt. of 14-2830M & R)	.03			
112-852	8-18x1/2 Phils. Rd. Hd. Self-Tap Screw (4 Joins 33-185 & S-18560)	.03			
112-943	6-32x1" Swedge Hd. Mach. Screw (8 Pt. of 14-2830M & R)	.03			

SRS2W,R&E CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-629	Cabinet Back		54-10	8-32x1/4 Hex. Nut (4 Pt. of Cabinet)	.03
14-2568E	Table Cabinet-Model SRS2E		54-34	6-32x1/4 Hex. Nut (2 Mt. 49-881 & 2 Pt. of Cabinet)	.03
14-2568R	Table Cabinet-Model SRS2R		54-30	8-32x5/16 Hex. Nut (4 Mt. 49-877)	.03
16-1521	Packing Carton		54-254	Speed Nut (2 Pt. of Cabinet)	.03
19-9	Cable Clip	.05	57-2280	Name Plate-Zenith-(Pt. of Cabinet)	.15
22-3085	2.2 Mfd. Ceramic Disc. (Pt. of 49-881)				
49-877	7 1/2" PM Speaker	6.50			
49-881	3 1/2" Tweeter Speaker				

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
86-237	Connector Terminal (4 used)	.03	114-329	6-18x3/8x1/4 Hex. Hd. Self-Tap Screw (Mts. 19-9)	.03
86-255	Spade Terminal (2 used)	.03	114-453	6-18x3/8 Hex. Washer Hd. Self-Tap Screw (6 Mt. 2-629)	.10
112-788 or	8-32x1 1/8 Swedge Hd. Mach. Screw	.03	166-86 or	Polyethylene Bumper	.05
112-1117	8-32x3/4 Swedge Hd. Mach. Screw (4 Pt. of Cabinet)		166-90	Polyethylene Bumper (4 Pt. of Cabinet)	.05
112-943	6-32x1 Swedge Hd. Mach. Screw (2 Pt. of Cabinet)				

SRS4W,R&E CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
14-2567	Consolette Cabinet-SRS4W		54-424	8-32x11/32 Hex. Palnut (4 Mt. 49-855)	.03
14-2567E	Consolette Cabinet-SRS4E		57-2498	Emblem Plate (Pt. of Cabinet)	.35
14-2567R	Consolette Cabinet-SRS4R		57-2561	Name Plate-Stereophonic-(Pt. of Cabinet)	1.00
16-1520	Packing Carton		86-237	Connector Terminal (4 used)	.03
19-9	Cable Clip	.05	86-255	Spade Terminal (2 used)	.03
22-2945	3 Mfd. Electrolytic-30V (Pt. of 49-846)	1.25	112-788	8-32x1 1/8 Swedge Hd. Mach. Screw (4 Pt. of Cabinet)	.03
49-846	3 1/2" PM Tweeter Speaker	7.00	112-943	6-32x1 Swedge Hd. Mach. Screw (2 Pt. of Cabinet)	.03
49-855	10" PM Speaker	15.00	114-329	6-18x3/8x1/4 Hex. Hd. Self-Tap Screw (Mts. 19-9)	.03
54-10	8-32x1/4 Hex. Nut (4 Pt. of Cabinet)	.03			
54-34	6-32x1/4 Hex. Nut (2 Mt. 49-846 & 2 Pt. of Cabinet)	.03			
54-312	Speed Nut (2 Pt. of Cabinet)	.03			

SRS12H,M&R CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-624	Cabinet Back		57-2561	Name Plate (Pt. of 14-2563H, M & R)	1.00
14-2563H	Consolette Cabinet-SRS12H		72-127	8x1 1/4 Phils. Flat Hd. Wood Screw (2 used on 14-2563H, M & R)	.05
14-2563M	Consolette Cabinet-SRS12M		83-765	Cable Retaining Strip (2 used)	.03
14-2563R	Consolette Cabinet-SRS12R		83-1475	Arm ite Strip (2 used)	.03
16-1516	Packing Carton		83-2989	Cable Retaining Strip	.05
17-155	Cable Clamp (used on 52-810)	.10	86-237	Connector (4 used)	.03
22-2945	3 Mfd. Electrolytic-30V (Pt. of 49-856)	1.25	86-254	Connector Terminal (2 used)	.05
46-2081	Knob (Bass-Treble-Presence Control)	.75	112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (4 Pt. of 14-2563H, M & R)	.03
49-852	12" PM Speaker	16.00	112-943	6-32x1 Swedge Hd. Mach. Screw (4 Pt. of 14-2563H, M & R)	.03
49-856	5" PM Speaker	7.00	114-51	6-32x1/2x1/4 Hex. Hd. Mach. Screw (2 Mt. 83-2989)	.03
52-810	AC Line Cord. Shielded Lead & Plug	9.50	114-386	Chassis Mtg. Screw (4 used)	.10
54-10	8-32x1/4 Hex. Nut (4 Pt. of 14-2563H, M & R)	.03	114-453	6-18x3/8 Hex. Washer Hd. Self-Tap Screw (Mts. 17-155)	.10
54-34	6-32x1/4 Hex. Nut (4 Pt. of 14-2563H, M & R)	.03	202-1395	Instruction Book	.20
54-312	Speed Nut (2 Pt. of 14-2563H, M & R)	.03	S-23471	Speaker Lead & Terminal Assem.	.40
54-424	8-32x11/32 Hex. Palnut (4 Mt. 49-852)	.03	S-26657	Terminal Strip Assem. (Pt. of 49-856)	.20
54-461	Speed Nut (1 used on Ea. 114-51)	.05			
57-2498	Emblem Plate (Pt. of 14-2563H, M & R)	.35			

SRD20M&R CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-624	Cabinet Back	1.50	43-333	Socket Contact Housing (Pt. of S-47451)	.20
14-2828M	Console Cabinet-Model SRD20M		49-782	3 1/2" PM Speaker	4.50
14-2828R	Console Cabinet-Model SRD20R		49-896	5 1/4" PM Speaker	
16-1632	Packing Carton		49-900	12" PM Speaker	
19-9	Cable Clip	.05	54-10	8-32x1/4 Hex. Nut (4 Pt. of 14-2828M & R)	.03
22-2774	.22 Mfd. Paper-200V				
22-2945	3 Mfd. Electrolytic-30V	1.25			

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
54-12	6-32x5/16 Hex. Nut (1 used on Ea. S-26657 & 2 used on Ea. 49-782 & 896)	.03	86-270	Terminal (2 Pt. of Ea. S-26657)	.03
54-34	6-32x1/4 Hex. Nut (4 Pt. of 14-2828M & R)	.03	86-303	Socket Terminal (2 Pt. of S-47451)	.04
54-312	Speed Nut Tinnerman (2 Pt. of 14-2828M & R)	.03	112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (4 Pt. of 14-2828M & R)	.03
54-424	8-32x11/32 Hex. Palnut (4 used on 49-900)	.03	112-943	6-32x1" Swedge Hd. Mach. Screw (4 Pt. of 14-2828M & R)	.03
57-2498	Emblem Plate (Pt. of 14-2828M & R)	.35	114-329	6-18x3 3/8x1/4 AF Hex. Hd. Self-Tap Screw (Mts. 19-9)	.03
57-2561	Name Plate (Stereophonic) (Pt. of 14-2828R)	1.00	114-453	6-18x5/8 Hex. Washer Hd. Self-Tap Screw (8 used on 2-624)	.10
83-765	Armit Strip	.03	S-26657	Terminal Strip	.20
86-237	Connector Terminal (6 Pt. of S-47451)	.03	S-47451	Speaker Lead & Terminal Assem.	

SRD22W,R&E CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
14-2833E	Consolette Cabinet-Model SFD22E		57-2561	Name Plate (Stereophonic) (Pt. of 14-2833E, R & W)	1.00
14-2833R	Consolette Cabinet-Model SFD22R		83-765	Cable Retaining Strip	.03
14-2833W	Consolette Cabinet-Model SFD22W		83-1475	Armit Strip	.03
16-1635	Packing Carton		83-2989	Cable Retaining Strip	.05
17-155	Cable Clamp	.10	86-237	Connector Terminal (4 Pt. of S-23471)	.03
22-2945	.3 Mfd. Electrolytic-30V (Pt. of 49-856)	1.25	86-254	Connector Terminal (2 Pt. of S-23471)	.05
46-2263	Knob-Bass-Treble-Presence Control		112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (4 Pt. of 14-2833E, R & W)	.03
49-852	12" PM Speaker	16.00	112-943	6-32x1" Swedge Hd. Mach. Screw (4 Pt. of 14-2833E, R & W)	.03
49-856	5" PM Speaker	7.00	114-51	6-32x1/2x1/4 AF Hex. Hd. Mach. Screw (2 used on 83-2989)	.03
52-810	A.C. Line Cord, Shielded Lead & Plug	9.50	114-386	Chassis Mtg. Screw	.10
54-10	8-32x1/4 Hex. Nut (4 Pt. of 14-2833E, R & W)	.03	114-453	6-18x5/8 Hex. Washer Hd. Self-Tap Screw (used on 17-155)	.10
54-34	6-32x1/4 Hex. Nut (4 Pt. of 14-2833E, R & W & 4 used on 49-856)	.03	114-663	8-15x1 1/4x1/4 AF Slotted Hex. Hd. Self-Tap Screw (2 used on 14-2833E, R, & W)	.03
54-312	Speed Nut Tinnerman (2 Pt. of 14-2833E, R & W)	.03	126-739	Heat Shield	.10
54-424	8-32x11/32 Hex. Palnut (4 used on 49-852)	.03	202-1522	Instruction Book	.40
54-461	Speed Nut Tinnerman (1 used on Ea. 114-51)	.05	S-23471	Speaker Lead & Terminal Assem.	.40
57-2498	Emblem Plate (Pt. of 14-2833E, R & W)	.35	S-26657	Terminal Strip Assem. (Pt. of 49-856)	.20

SRD83W,R&H CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-624	Cabinet Back	1.50	54-34	6-32x1/4 Hex. Nut (4 Pt. of 14-2833H, R, & W)	.03
14-2832H	Console Cabinet-Model SRD83H		54-312	Speed Nut Tinnerman (2 Pt. of 14-2833H, R, & W)	.03
14-2832R	Console Cabinet-Model SRD83R		54-424	8-32x11/32 Hex. Palnut (4 used on 49-900)	.03
14-2832W	Console Cabinet-Model SRD83W		57-2498	Emblem Plate (Pt. of 14-2832H, R & W)	.35
16-1634	Packing Carton		57-2561	Name Plate (Stereophonic) Part of 14-2833H, R & W	1.00
19-9	Cable Clip (Pt. of S-47451)	.05	83-765	Armit Strip (Pt. of S-47451)	.03
22-2774	.22 Mfd. Paper-200V	.35	86-237	Connector Terminal (8 used)	.03
22-2945	.3 Mfd. Electrolytic-30V	1.25	86-270	Terminal (2 used on Ea. S-26657)	.03
43-333	Socket Contact Housing (Pt. of S-47451)	.20	86-303	Socket Terminal (2 Pt. of S-47451)	.04
49-782	3 1/2" PM Speaker	4.50			
39-896	5 1/4 PM Speaker				
49-900	12" PM Speaker				
54-10	8-32x1/4 Hex. Nut (4 Pt. of 14-2832H, R & W)	.03			
54-12	6-32x5/16 Hex. Nut (1 used on Ea. S-26657 & 2 used on Ea. 49-782 & 49-896)	.03			

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (4 Pt. of 14-2832H, R & W)	.03	114-453	6-18x5/8 Hex. Washer Hd. Self-Tap Screw (8 used on 2-624)	.10
112-943	6-32x1" Swedge Hd. Mach. Screw (4 Pt. of 14-2833H, R & W)	.03	S-26657	Terminal Strip Assem. (1 used on Ea. 49-782 & 49-896)	.20
114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (used on 19-9)	.03	S-47451	Speaker Lead & Terminal Assem.	

SRD85M&R CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-624	Cabinet Back	1.50	57-2498	Emblem Plate (Pt. of 14-2834 M & R)	.35
14-2834ME	Console Cabinet-Model SRD85M		57-2561	Name Plate (Stereo Phonic) (Pt. of 14-2834M & R)	1.00
14-2834R	Console Cabinet-Model SRD85R		83-765	Armit Strip (Pt. of S-47451)	.03
16-1636	Packing Carton		86-237	Connector terminal (10 used)	.03
19-9	Cable Clip (Pt. of S-47451)	.05	86-270	Terminal (2 used on Ea. S-26657)	.03
22-2774	.22 Mfd. Paper-200V	.35	86-303	Socket Terminal (2 Pt. of S-47451)	.04
22-2945	.3 Mfd. Electrolytic-30V	1.25	112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (4 Pt. of 14-2834M & R)	.03
43-333	Socket Contact Housing (Pt. of S-47451)	.20	112-943	6-32x1" Swedge Hd. Mach. Screw (4 Pt. of 14-2834M & R)	.03
49-782	3 1/2" PM Speaker	4.50	114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (used on 19-9)	.03
49-896	5 1/4" PM Speaker		114-453	6-18x5/8 Hex. Washer Hd. Self-Tap Screw (8 used on 2-624)	.10
49-900	12" PM Speaker		S-26657	Terminal Strip Assem. (used on 49-782 & 49-896)	.20
54-10	8-32x1/4 Hex. Nut (4 Pt. of 14-2834M & R)	.03	S-47451	Speaker Lead & Terminal Assem.	
54-12	6-32x5/16 Hex. Nut (1 used on Ea. S-26657 & 2 used on Ea. 49-782 & 49-896)	.03			
54-34	6-32x1/4 Hex. Nut (4 Pt. of 14-2834M & R)	.03			
54-312	Speed Nut Tinnerman (2 Pt. of 14-2834M & R)	.03			
54-424	8-32x11/32 Hex. Palnut (4 used on 49-900)	.03			
57-2498	Emblem Plate (Pt. of 14-2856 E, R & W)	.35			
57-2561	Name Plate (Stereo Phonic) (Pt. of 14-2856E, R & W)	1.00			
83-765	Armit Strip (used on S-47451)	.03			
86-237	Connector Terminal (10 used)	.03			
86-270	Terminal (2 Pt. of S-26657)	.03			
86-303	Socket Terminal (2 used on S-47451)	.04			
96-253	Cabinet Leg (4 used on 14-2854R)				
96-254	Cabinet Leg (4 used on 14-2854E)				
96-255	Cabinet Leg (4 used on 14-2854W)				
112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (4 Pt. of 14-2856E, R & W)	.03			
112-943	6-32x1 Swedge Hd. Mach. Screw (4 Pt. of 14-2856E, R & W)	.03			
114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (used on 19-9)	.03			
114-453	6-18x5/8 Hex. Washer Hd. Self-Tap Screw (6 used on 2-753)	.10			
199-282	Brass Sleeve (4 used on 14-2854 E, R & W)				
S-26657	Terminal Strip Assem. (2 used)	.20			
S-47451	Speaker Lead & Terminal Assem.				

SRD88E,R&W CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-753	Cabinet Back		54-312	Speed Nut Tinnerman (2 Pt. of 14-2856E, R & W)	.03
14-2854E	Cabinet Base Frame-Model SRD88E		54-424	8-32x11/32 Hex. Palnut (4 used on 49-900)	.03
14-2854R	Cabinet Base Frame-Model SRD88R		57-2498	Emblem Plate (Pt. of 14-2856 E, R & W)	.35
14-2854W	Cabinet Base Frame-Model SRD88W		57-2561	Name Plate (Stereo Phonic) (Pt. of 14-2856E, R & W)	1.00
14-2856E	Cabinet Top Section-Model SRD88E		83-765	Armit Strip (used on S-47451)	.03
14-2856R	Cabinet Top Section-Model SRD88R		86-237	Connector Terminal (10 used)	.03
14-2856W	Cabinet Top Section-Model SRD88W		86-270	Terminal (2 Pt. of S-26657)	.03
16-1640	Packing Carton		86-303	Socket Terminal (2 used on S-47451)	.04
19-9	Cable Clip	.05	96-253	Cabinet Leg (4 used on 14-2854R)	
22-2774	.22 Mfd. Paper-200V	.35	96-254	Cabinet Leg (4 used on 14-2854E)	
22-2945	.3 Mfd. Electrolytic-30V	1.25	96-255	Cabinet Leg (4 used on 14-2854W)	
43-333	Socket Contact Housing (Pt. of S-47451)	.20	112-789	8-32x1 3/8 Swedge Hd. Mach. Screw (4 Pt. of 14-2856E, R & W)	.03
49-782	3 1/2"PM Speaker	4.50	112-943	6-32x1 Swedge Hd. Mach. Screw (4 Pt. of 14-2856E, R & W)	.03
49-896	5 1/4"PM Speaker		114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (used on 19-9)	.03
49-900	12"PM Speaker		114-453	6-18x5/8 Hex. Washer Hd. Self-Tap Screw (6 used on 2-753)	.10
54-10	8-32x1/4 Hex. Nut (4 Pt. of 14-2856E, R & W)	.03	199-282	Brass Sleeve (4 used on 14-2854 E, R & W)	
54-12	6-32x5/16 Hex. Nut (1 used on Ea. S-26657 & 2 used on Ea. 49-782 & 896)	.03	S-26657	Terminal Strip Assem. (2 used)	.20
54-34	6-32x1/4 Hex. Nut (4 Pt. of 14-2856E, R & W)	.03	S-47451	Speaker Lead & Terminal Assem.	

SRD90R&H CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-681	Cabinet Back-Model SRD90R	3.00	54-479	10-32x3/8 Hex. Palnut (4 used on 49-901)	.03
2-682	Cabinet Back-Model SRD90H	3.00	57-2498	Emblem Plate (Pt. of 14-2837H & R)	.35
14-2837H	Console Cabinet-Model SRD90H		57-2561	Name Plate (Stereophonic) (Pt. of 14-2837H & R)	1.00
14-2837R	Console Cabinet-Model SRD90R		83-765	Armit Strip (Pt. of S-47495)	.03
16-1642	Packing Carton		86-237	Connector Terminal (8 used)	.03
19-9	Cable Clip (Pt. of S-47495)	.05	86-270	Terminal (Pt. of S-26657)	.03
20-751	Speaker Indicator Coil	1.25	86-303	Plug Terminal (3 Pt. of S-47495)	.04
22-2945	3 Mfd. Electrolytic 30V	1.25	112-1183	6-32x1 3/4" Swedge Hd. Mach. Screw (4 Pt. of 14-2837H & R)	.05
43-333	Plug Control Housing (Pt. of S-47495)	.20	112-1254	10-32x1 3/4 Swedge Hd. Mach. Screw (4 Pt. of 14-2837H & R)	
49-867	Horn Tweeter Speaker	30.00	114-329	6-18x3/8x1/4 AF Hex. Hd. Self-Tap Screw (used on 19-9)	.03
49-901	15" PM Speaker	37.50	114-453	6-18x5/8 Hex. Washer Hd. Self-Tap Screw (8 used on Ea. 2-681 & 682)	
54-12	6-32x5/16 Hex. Nut (4 used on 49-867 & 1 used on S-26657)	.03	S-26657	Terminal Strip Assem.	
54-34	6-32x1/4 Hex. Nut (4 Pt. of 14-2837H & R)	.03	S-47495	Speaker Lead, Terminal & Housing Assem.	.20
54-66	10-32x5/16 Hex. Nut (4 Pt. of 14-2837H & R)				
54-312	Speed Nut Tinnerman (2 Pt. of 14-2837H & R)	.03			

DR100H&L CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-761	Cabinet Back	.60	78-1036	5 Contact Socket (Pt. of S-47506)	.25
14-2838H	Table Cabinet-Model DR100H		86-30	Terminal (Pt. of S-47506)	.03
14-2838L	Table Cabinet-Model DR100L		86-237	Connector Terminal (4 used)	.03
16-1643	Packing Carton		86-270	Terminal (2 Pt. of S-26657)	.03
22-3196	80 Mfd. Electrolytic 25V (2 used)	2.00	95-1701	Audio Choke (Pt. of S-47506)	
49-902	6" x 9" PM Speaker		112-943	6-32x1" Swedge Hd. Mach. Screw (4 Pt. of 14-2838H & L)	.03
54-12	6-32x5/16 Hex. Nut (1 used on S-26657 & 4 used on 49-902)	.03	114-701	8-15x3/8 Hex. Washer Hd. Self-Tap Screw (3 used on S-47506)	
54-34	6-32x1/4 Hex. Nut (4 Pt. of 14-2838H & L)	.03	125-96	Strain Relief Grommet	.10
54-469	Speed Nut Tinnerman (Pt. of 14-2838H & L)	.10	S-26657	Terminal Strip Assem.	.20
57-2816	Name Plate (Radial Sound) (Pt. of 14-2838)	.35	S-47504	Plug & Wire Assem. (Jumper)	
58-226	5 Prong Plug (1 Pt. of S-47504 and 1 used with 3 conductor wire)	.15	S-47506	Plate, Socket & Choke Assem.	
				25 Feet 91-1757 3 Conductor Wire	

DR102H&L CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-762	Cabinet Back	.70	78-1036	Five Contact Socket (Pt. of S-47506)	.25
14-2830H	Table Cabinet-Model DR102H		86-30	Terminal (Pt. of S-47506)	.03
14-2864	Table Cabinet-Model DR102L		86-237	Connector Terminal (8 used)	.03
16-1644	Packing Carton		86-270	Terminal (2 Pt. of Ea. S-26657)	.03
22-2945	3 Mfd. Electrolytic 30V	1.25	95-1701	Audio Choke (Pt. of S-47506)	
22-3196	80 Mfd. Electrolytic 25V	2.00	112-943	6-32x1 Swedge Hd. Mach. Screw (6 Pt. of 14-2839H & 14-2864)	.03
49-782	3 1/2" PM Speaker	4.50	114-453	6-18x5/8 Hex. Washer Hd. Self-Tap Screw (4 used on 2-762)	.10
49-902	6x9" PM Speaker		114-701	8-15x3/8 Hex. Washer Hd. Self-Tap Screw (3 used on S-47506)	
54-12	6-32x5/16 Hex. Nut (8 used)	.03	125-96	Strain Relief Grommet	.10
54-34	6-32x1/4 Hex. Nut (6 Pt. of 14-2839H & 14-2864)	.03	S-26657	Terminal Strip (2 used)	.20
54-469	Speed Nut-Tinnerman (used on 14-2839H & 12-2864)	.10	S-47504	Plug & Wire Assem. (Jumper)	
57-2816	Name Plate (Radial Sound) (Pt. of 14-2839H & 14-2864)	.35	S-47506	Plate, Socket & Choke Assem.	
58-226	5 Prong Plug (1 Pt. of S-47504 & 1 used with 3 conductor wire)	.15		25 Ft. 91-1757 3 Conductor Wire	

DR105H&L CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
2-762	Cabinet Back-Model DR105H	.70	78-346	5 Contact Socket (Pt. of S-47507)	
2-763	Cabinet Back-Model DR105L		86-30	Terminal (Pt. of S-47507)	.03
14-284OH	Table Cabinet-Model DR105H		86-237	Connector Terminal (8 used)	.03
14-2865	Table Cabinet-Model DR105L		86-270	Terminal (2 Pt. of S-26657)	.03
16-1645	Packing Carton		95-1701	Audio Choke (1 Pt. of S-47507)	
22-2945	3 Mfd. Electrolytic-30V	1.25	112-943	6-32x1 Swedge Hd. Mach. Screw (Pt. of 14-2840 & 14-2865)	.03
22-3196	80 Mfd. Electrolytic-25V (2 used)	2.00	114-453	6-18x5/8 Hex. Washer Hd. Self-Tap Screw (4 used on Ea. 2-762 & 763)	.10
49-867	Horn Tweeter Speaker	30.00	114-701	8-15x3/8 Hex. Washer Hd. Self-Tap Screw (3 used on S-47507)	
49-902	6x9" PM Speaker		125-96	Strain Relief Grommet	.10
54-12	6-32x5/16 Hex. Nut (10 used)	.03	S-26657	Terminal Strip Assem. (2 used)	.20
54-34	6-32x1/4 Hex. Nut (8 Pt. of 14-2840H & 14-2865)	.03	S-47505	Plug & Wire Assem. (Jumper)	
54-469	Speed Nut Tinnerman (Pt. of 14-2840 & 14-2865)	.10	S-47507	Plate, Socket & Choke Assem. 25 Ft. of 91-1757 3 Conductor Wire	
57-2816	Name Plate (Radial Sound) Pt. of 14-2840H & 14-2865)	.35			
58-176	5 Prong Plug (1 Pt. of S-47505 & 1 used with 3 conductor wire)				

DPS80C CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
22-1814		Condenser .0022 Mfd.- 600V				Resistor 27K Ohm 1/2W Ins.-20%	.17
22-1843		Condenser .01 Mfd.- 600V				Resistor 100K Ohm 1/2W Ins.-20%	.17
22-2129		Condenser .022 Mfd.- 600V				Resistor 270K Ohm 1/2W Ins.-20%	.17
WC12961		Electrolytic 4 Mfd. 10V	1.70			Resistor 1 Megohm 1/2W Ins.-20%	.17
WC13235		Electrolytic 30-350Vx 15-350Vx25-25Vx25-25V				Resistor 3.9 Megohm 1/2W Ins.-20%	.17
		Resistor 100 Ohm 1/2W Ins.-20%	.17			Resistor 10 Megohm 1/2W Ins.-20%	.17
		Resistor 330 Ohm 1W Ins.-20%	.25	WC13228		Treble Con. (2 Meg.)	
		Resistor 560 Ohm 1/2W Ins.-20%	.17	WC13229		Bass & Loudness Con. (5 Meg.)	
		Resistor 10K Ohm 1/2W Ins.-20%	.17			Output Trans.	
		Resistor 10K Ohm 1W Ins.-20%	.25	WC13342		Power Trans.	
		Resistor 18K Ohm 1/2W Ins.-20%	.17	WC13485		Balance Con. (1 Meg.)	
				WC13501			

DPS80C CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
WC11384	Adjustment Screw	.05	WC13495 - B Catch			1.00
WC11502	Shipping Protector Strip (Record Changer)	.10	WC13509		Trim Strip	
WC12908	3 1/2" PM Speaker (less trans.)		WC13511	5" x 7" PM Speaker (less trans.)		
WC13065	Tee Nut	.10	WC13554		Recessed Nut	
WC13132 -	KA Knob (Volume, Bass, Treble)	.50	WC13555		Chain Plate Assem. (Male)	
WC13132 -	KB Knob (Balance Con.)	.50	WC13610		Chain Plate Assem. (Female)	
WC13274	External Speaker Cable (25 ft.)	3.00	WC13611		Front Grille & Baffle (with crest, swedge bolts & mounted track)	
WC13289	Shipping Protector Strip (Motorboard)		WC13714		Case with hardware & motorboard (less front grille assem. amplifier panel, chain assem. & speaker covers)	
WC13362	Hinge		19-346		Mtg. Clip (for S-46112)	
WC13445 -	9B Handle Assem. (Includes handle & two plates)		56-399		Needle Assem. (.7 Mil Mfg. Sapphire Tip)	2.50
WC13410	3 1/2" Speaker Cover with Grille Cloth		56-400		Needle Assem. (3 Mil Mfg. Sapphire Tip)	2.50
WC13471	5" x 7" Speaker Cover with Grille Cloth		57-1721		Emblem Plate	
WC13483	Amplifier Panel Only					

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
142-92	Stereo Cartridge & Needles	15.50	202-1536	Instruction Book	
169-112	Record Changer		S-46112	45 RPM Spindle	

DPS89C CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
22-1814		Condenser .0022 Mfd.- 600V				Resistor 27K Ohm 1/2W Ins.-20%	.17
22-1843		Condenser .01 Mfd.- 600V				Resistor 39K Ohm 1/2W Ins.-20%	.17
22-1849		Condenser .0047 Mfd.- 600V				Resistor 150K Ohm 1/2W Ins.-20%	.17
22-2248		Condenser .033 Mfd.- 600V				Resistor 270K Ohm 1/2W Ins.-20%	.17
22-2851		Condenser 470 Mmfld.- 600V				Resistor 470K Ohm 1/2W Ins.-20%	.17
WC12961		Electrolytic 4 Mfd. 10V				Resistor 3.9 Megohm 1/2W Ins.-20%	.17
WC13234		Electrolytic 30-350Vx 20-350Vx20-25V				Resistor 10 Megohm 1/2W Ins.-20%	.17
		Resistor 200 Ohm 1/2W Ins.-20%	.17	WC13222		Output Trans.	2.75
		Resistor 330 Ohm 1W Ins.-10%	.25	WC13224		Treble Con. (2 Meg.)	1.40
		Resistor 560 Ohm 1/2W Ins.-20%	.17	WC13226		Bass Con. & Loudness Con. (5 Meg.)	1.40
		Resistor 4700 Ohm 1/2W Ins.-10%	.17	WC13227		Power Trans.	11.00
				WC13239		Balance Pot (1500 Ohm)	.75

DPS89C CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
WC11384	Adjustment Screw	.05	WC13693	Case with hardware and motor- board (less front grill, baffle & amp. panel)	
WC11792	4" PM Speaker (less trans.) (Sub 49-750)		WC13700	Trim Strip	1.25
WC11836	B Hinge	.20	WC13987	Front Grille & Baffle with crest	2.50
WC11837	B Catch	.20	56-399	Needle Assem. (.7 mil Mfg. Sapphire Tip)	2.50
WC12963	6" PM Speaker (less trans.)	8.00	56-400	Needle Assem. (3 mil Mfg. Sapphire Tip)	2.50
WC13065	Tee Nut	.01	57-1721	Emblem Plate	
WC13132	8EN Knob (with numbered inlay) (3 used)	.50	100-67	Pilot Light	
WC13263	6 Amplifier Panel Only		142-92	Stereo Cartridge & Needles	
WC13423	Pilot Light Socket	.60	169-113	Record Changer	
WC13424	Pilot Light Bracket	.25	202-1535	Instruction Book	
WC13425	Pilot Light Jewel	.25	S-46112	45 RPM Spindle	.25
WC13448	8B Handle Assem. (Includes handle & two plates)	.60			

DRS89C CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
22-1814		Condenser .0022 Mfd.- 600V				Resistor 560 Ohm 1/2W Ins.-20%	.17
22-1843		Condenser .01 Mfd.- 600V				Resistor 4700 Ohm 1/2W Ins.-10%	.17
22-1849		Condenser .0047 Mfd.- 600V				Resistor 27K Ohm 1/2W Ins.-20%	.17
22-2248		Condenser .033 Mfd.- 600V				Resistor 39K Ohm 1/2W Ins.-20%	.17
22-2851		Condenser 470 Mmfld.- 600V				Resistor 150K Ohm 1/2W Ins.-20%	.17
WC12961		Electrolytic 4 Mfd. 10V	1.70			Resistor 270K Ohm 1/2W Ins.-20%	.17
WC13234		Electrolytic 30-350Vx 20-350Vx20-25V	3.00			Resistor 470K Ohm 1/2W Ins.-20%	.17
		Resistor 200 Ohm 1/2W Ins.-20%	.17			Resistor 10 Megohm 1/2W Ins.-20%	.17
		Resistor 330 Ohm 1W Ins.-10%	.25	WC13222		Output Trans.	2.75

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
WC13225		Treble Con. & Sw. (2 Meg.)	.205				
WC13226		Bass Con. & Loudness Con. (5 Meg.)	1.40	WC13227		Power Trans.	11.00
				WC13239		Balance Pot (1500 Ohm)	.75

DRS89C CABINET PARTS

PART NO.	DESCRIPTION	PRICE	PART NO.	DESCRIPTION	PRICE
WC1179 2	4" PM Speaker (less trans.) (Sub 49-750)		WC13448-	8B Handle Assem. (Includes handle & two plates)	.60
WC1296 3	6" PM Speaker (less trans.)	8.00	WC13694	Case with hardware, rear cover & catch (less front grille & baffle assem.)	
WC1258 1- 6	Back Vent only	.30	WC13988	Front Grille & Baffle with crest, swedge bolts & Mounted track	2.50
WC1313 2-	8EN Knob (with numbered inlay) (3 used)	.50	WC13701	Trim Strip	1.25
WC1327 5	Connector Cable	4.75	57-1721	Emblem Plate	
WC1342 3	Pilot Light Socket	.60	100-67	Pilot Light	
WC1342 4	Pilot Light Bracket	.25	202-1535	Instruction Book	.25
WC1342 5	Pilot Light Jewel	.25			


4B24 & 4B25 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
11-103		A.C. Cord & Plug	1.00	63-1845		27K Ohm 1/2W Ins. 10%	.17
15-115		Fuseholder Cap	.25	63-1880		180K Ohm 1/2W Ins.	
22-14	C10, 12	.0047 Mfd. Ceramic Disc. Capacitor - 500V (2 used)	.25	63-1883		10% (2 used)	.17
22-18	C1, 6	.0022 Mfd. Ceramic Disc. Capacitor - 500V (2 used)	.25	63-1891		220K Ohm 1/2W Ins. 10% (4 used on 4B25)	.17
22-1156		40 Mfd. Electrolytic Capacitor-25V (1 used)	.64	63-1894		330K Ohm 1/2W Ins. 20% (2 used)	.17
22-2580		100 Mfd. Electrolytic Capacitor-50V	1.90	63-1922		390K Ohm 1/2W Ins. 10% (2 used)	.17
22-2794	C9, 13	.047 Mfd. Paper Dielectric Capacitor-600V (2 used)	.35	63-1929		1.8 Megohm 1/2W Ins. 10%	.17
22-2812	C15	.01 Mfd. Paper Dielectric Capacitor-600V	.30	63-4451	R2A, B	2.7 Megohm 1/2W Ins. Dual Loudness Control	3.50
22-2866	C3, 4	330 Mmf. Mica Capacitor-500V (2 used)	.25	63-4452	R3A, B	Dual Treble Tone Control	2.75
22-2875		150 Mmf. Ceramic Disc. Capacitor-500V (2 used)	.25	63-4453	R1A, B	Dual Bass Tone Control & A.C. Switch	3.50
22-2903		22 Mmf. Ceramic Disc. Capacitor-500V (2 used)	.25	63-4470		240 Ohm 2W Ins. 5%	.68
22-3046	C20A, B, C	Electrolytic Capacitor 20/350 40/450 40/450	4.50	69-320		2/64x5/16 Rd. Hd. Mach. Screw (used on Ea. 80-1240 & 80-1250)	.03
22-3153		.015 Mfd. Paper Dielectric Capacitor-200V (2 used)		78-402		4 Contact Socket	.15
54-139		3/8-32x9/16 Hex. Palnut (1 Mts. Ea. 63-4452 & 63-4453)	.03	78-755		Octal Tube Socket	.20
54-140		3/8-32x9/16 Hex. Nut (Mts. 63-4451)	.03	78-781		7 Contact Molded Tube Socket (2 used)	.25
54-382		Hex. Nut (Mts. 62-17)	.03	78-846		9 Contact Wafer Tube Socket	.25
62-17		Fuse Receptacle	.40	78-1099		3 Contact Socket	.20
63-1778		680 Ohm 1/2W Ins. 10%	.17	80-1249		Shaft Friction Spring (used on 63-4451)	.15
63-1785		1000 Ohm 1/2W Ins. 10%	.17	80-1250		Shaft Friction Spring (used on 63-4451)	.15
63-1789		1200 Ohm 1/2W Ins. 10% (2 used)	.17	83-2307		4 Lug Terminal Strip	.10
63-1803		2700 Ohm 1/2W Ins. 10% (2 used)	.17	83-2538		3 Lug Terminal Strip	.10
63-1817		5600 Ohm 1/2W Ins. 10%	.17	83-2673		6 Lug Terminal Strip	.10
63-1827		10K Ohm 1/2W Ins. 10% (2 used)	.17	83-2915		4 Lug Terminal Strip	.10
				83-2965		7 Lug Terminal Strip	.10
				83-3075		Bearing Strip (2 used on 63-4451)	.03
				83-3095		Terminal Strip (Speaker lead Connections)	.20
				86-237		Connector Terminal (4 used)	.03

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
93-1179		Rubber Washer (used on 62-17)	.03				
93-1180		1/2" Lockwasher (used on 62-17)	.03	114-635		10-16x1/2 Hex. Hd. Self-Tap Screw-Flat Washer Att. (4 Mt. 95-1653 or 95-1659)	.05
95-1658		Audio Output Transformer				Strain Relief Grommet (used on 11-103)	.10
95-1659		Power Transformer		125-96		Fuse-2 Amp.	.10
102-4858		Label(Speaker Lead Connections)	.05	136-36			

5B27 CHASSIS PARTS

PART NO.	DIA. NO.	DESCRIPTION	PRICE	PART NO.	DIA. NO.	DESCRIPTION	PRICE
11-103		AC Cord & Plug	1.00				
15-115		Fuseholder Cap	.25	63-1876		150K Ohm 1/2W Ins.	
22-3	C25	.01 Mfd. Ceramic Disc.-500V	.30	63-1887		10% (2 used) 270K Ohm 1/2W Ins.	.17
or				63-1891		10% (2 used) 330K Ohm 1/2W Ins.	.17
22-2812		.01 Mfd. Paper-600V		63-1922		20% (2 used) 1.8 Megohm 1/2W Ins.	.17
22-18	C2,6, 12,13, 19,20	.0022 Mfd. Ceramic Disc.-500V (6 used)	.25	63-3162	R4,5	10% 330 Ohm 1W Ins. 10% (2 used)	.25
				63-4069	R6	4K Ohm 1W 10%	.45
22-2302	C11,18	470 Mmf. Ceramic-500V	.25	63-4447	R1A,B	Dual Loudness Control	
				63-4448	R2A,B	Treble Tone Control	.75
22-2376	C1,5, 26,27	47 Mmf. Ceramic Disc.-500V (4 used)	.25	63-4449	R3A,B	Bass Tone Control & Switch	
22-2670	C14,21	.003 Mfd. Ceramic Disc.-500V (2 used)	.25	69-320		2/64x5/16 Rd. Hd. Mach. Screw (2 used)	.03
22-2782	C23,24	.1 Mfd. Paper-600V (2 used)	.45	78-402		4 Contact Socket	.15
22-2794	C10,17	.047 Mfd. Paper-600V (2 used)	.30	78-755		Octal Tube Socket	.20
22-2813	C15,22	.01 Mfd. Paper-200V (2 used)	.25	78-846		9 Contact Wafer Tube	
22-2825	C4,8	.0047 Mfd. Paper-200V (2 used)		78-939		9 Contact Molded Tube	.25
22-2863	C3,7	33 Mmf. Ceramic Disc.-500V (2 used)	.25	78-1099		Socket (2 used) 3 Contact Socket	.20
22-3046	C30A, B,C	Electrolytic 20/350 40/450 40/450	4.50	80-1249		Shaft Friction Spring	.15
22-3076	C9,16	10 Mfd. Electrolytic-25V (2 used)	1.75	80-1250		Sleeve Tension Spring	.15
54-139		3/8-32x9/16 Hex. Pal-nut (1 Mts. Ea. 63-4448 &63-4449)	.03	83-2216		7 Lug Terminal Strip	.10
				83-2307		4 Lug Terminal Strip	.10
				83-2538		3 Lug Terminal Strip	.10
				83-2638		3 Lug Terminal Strip	.05
				83-2915		4 Lug Terminal Strip	.10
				83-2965		7 Lug Terminal Strip	.10
54-140		3/8-32x9/16 Hex. Nut	.03	83-3075		Bearing Strip	
54-382		Hex. Nut (Mts. 62-17)	.06	83-3095		Terminal Strip	
62-17		Fuse Receptacle	.40			(Speaker Lead)	
63-1785		1000 Ohm 1/2W Ins. 10% (2 used)	.17	86-237		Connector Terminal	
63-1786		1000 Ohm 1/2W Ins. 20% (2 used)	.17	93-1179		(Speaker Lead-4 used)	.03
63-1796		1800 Ohm 1/2W Ins. 10% (2 used)	.17	93-1180		Rubber Washer (used on 62-17)	.03
63-1806		3300 Ohm 1/2W Ins. 10% (2 used)	.17	95-1650	T1,2	Lockwasher (used on 62-17)	.03
63-1813		4700 Ohm 1/2W Ins. 10% (2 used)	.17	95-1651	T3	Audio Output Transformer (2 used)	
63-1817		5600 Ohm 1/2W Ins. 10%	.17	102-4650		Power Transformer	
63-1856		47K Ohm 1/2W Ins. 20% (2 used)	.17	114-635		Label (Speaker Lead Connections)	.03
63-1859		56K Ohm 1/2W Ins. 10% (2 used)	.17			10-16x1/2 Hex. Hd.	
63-1866		82K Ohm 1/2W Ins. 10% (4 used)	.17			Self-Tap Screw-Flat	
63-1870		100K Ohm 1/2W Ins. 20% (2 used)	.17	125-96		Washer Att. (4 Mt. 95-1651)	.05
				136-36		Strain Relief Grommet (used on 11-103)	.10
						Fuse-2 Amp.	.10

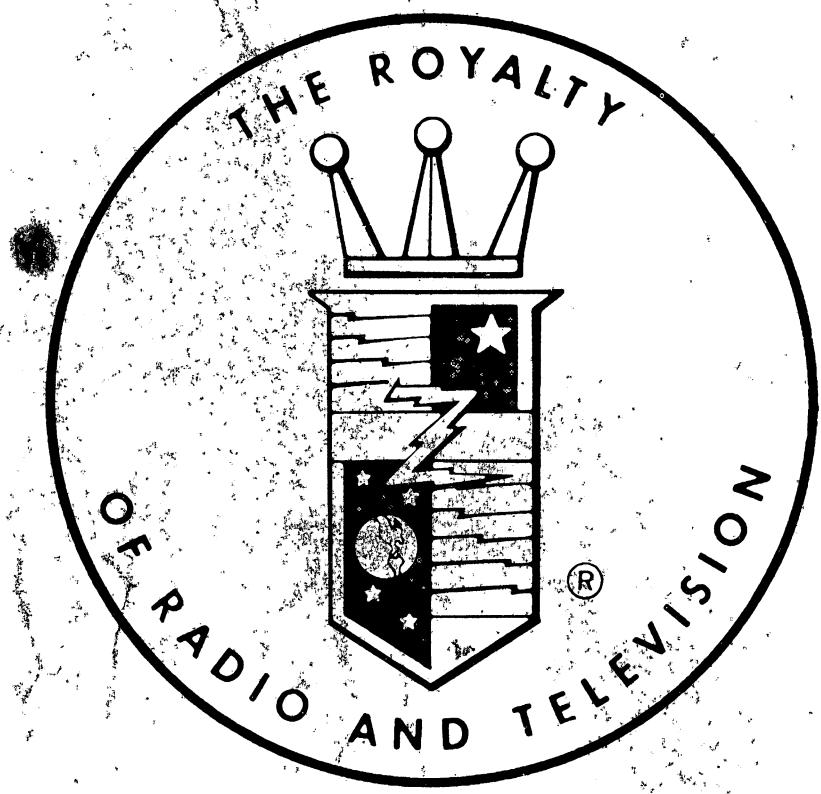

ZENITH RADIO CORPORATION
6001 DICKENS AVENUE
CHICAGO 39, ILL.